 
 
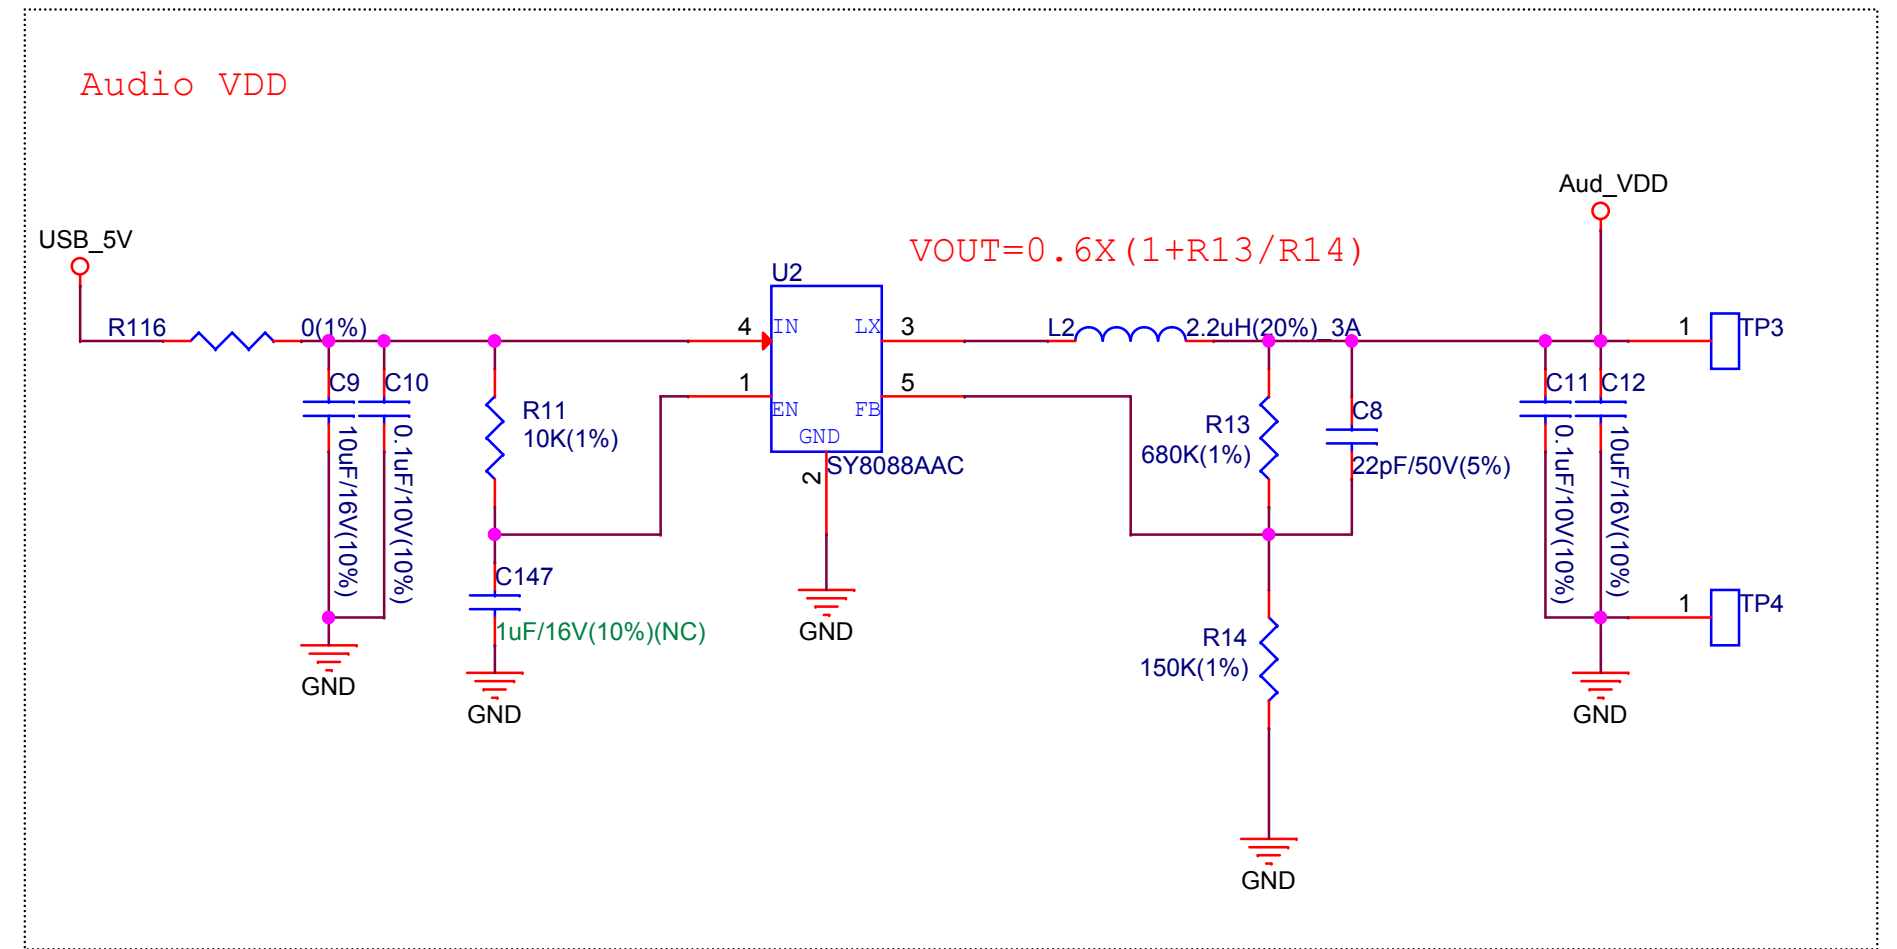 
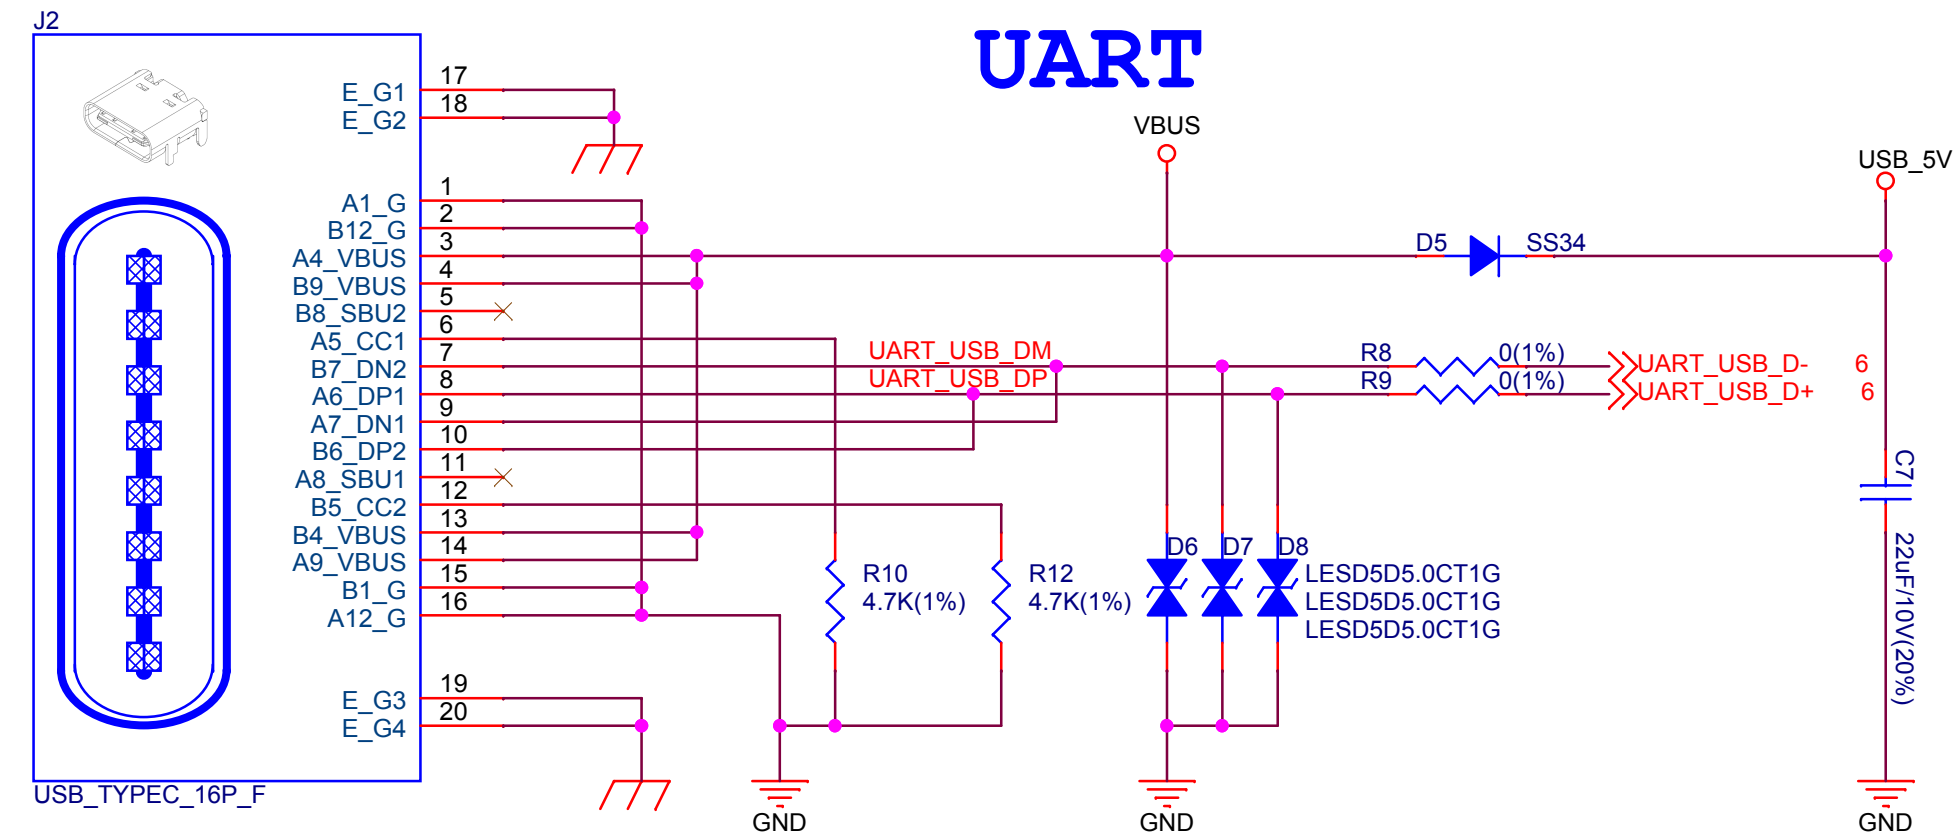 
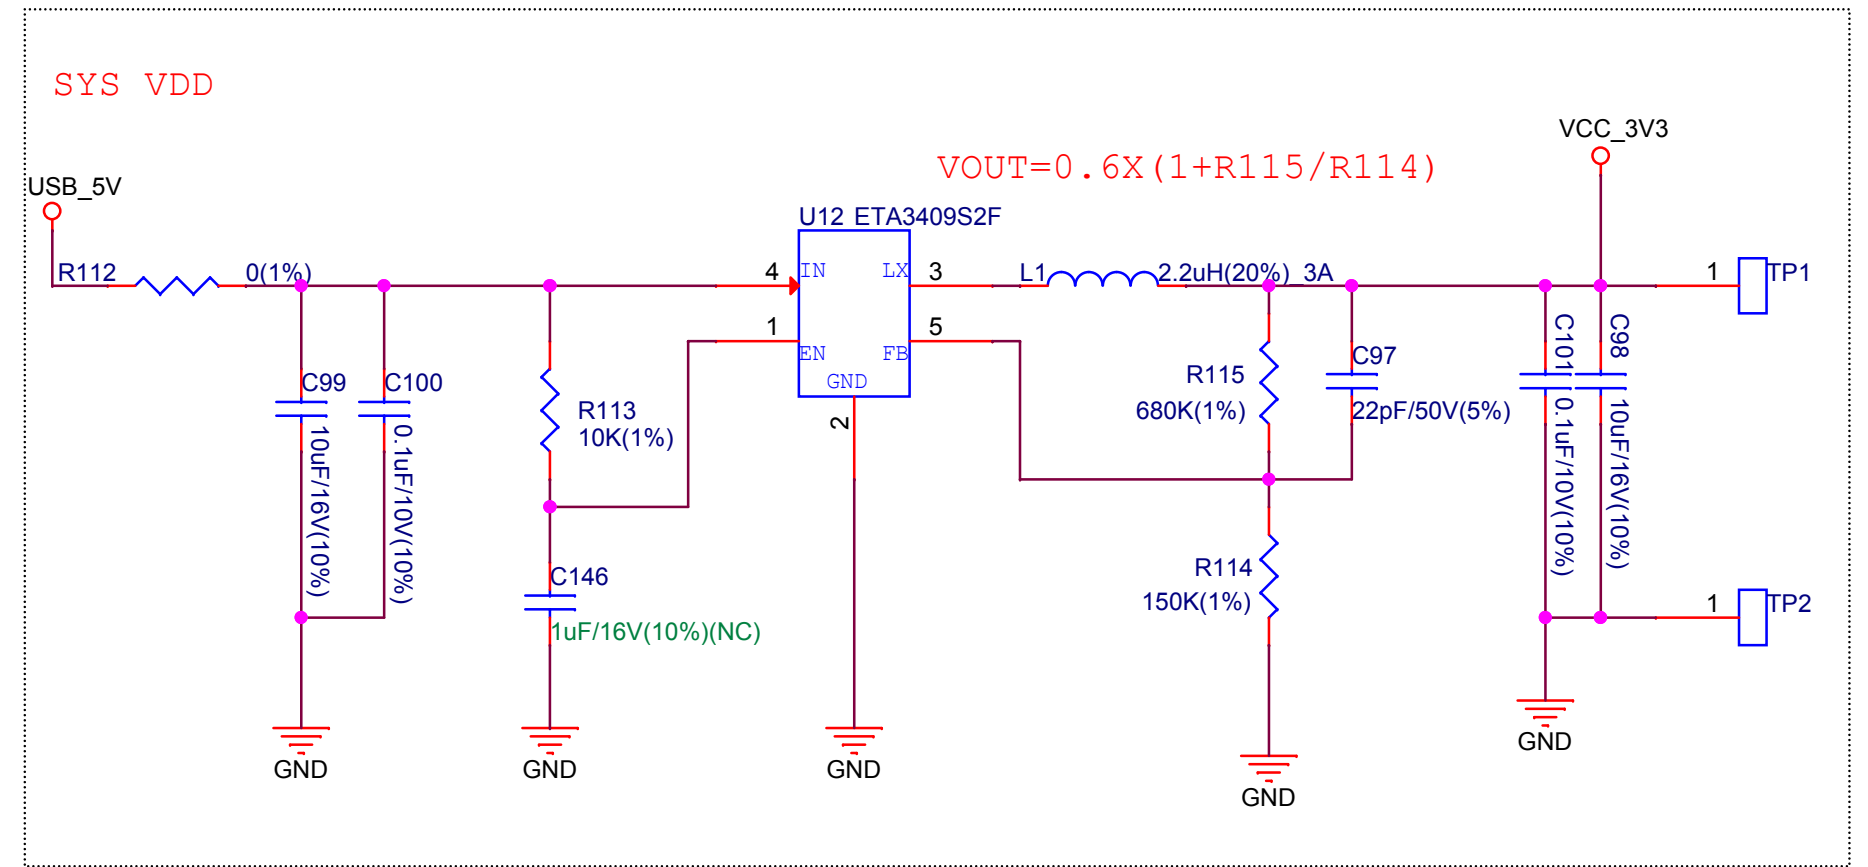 
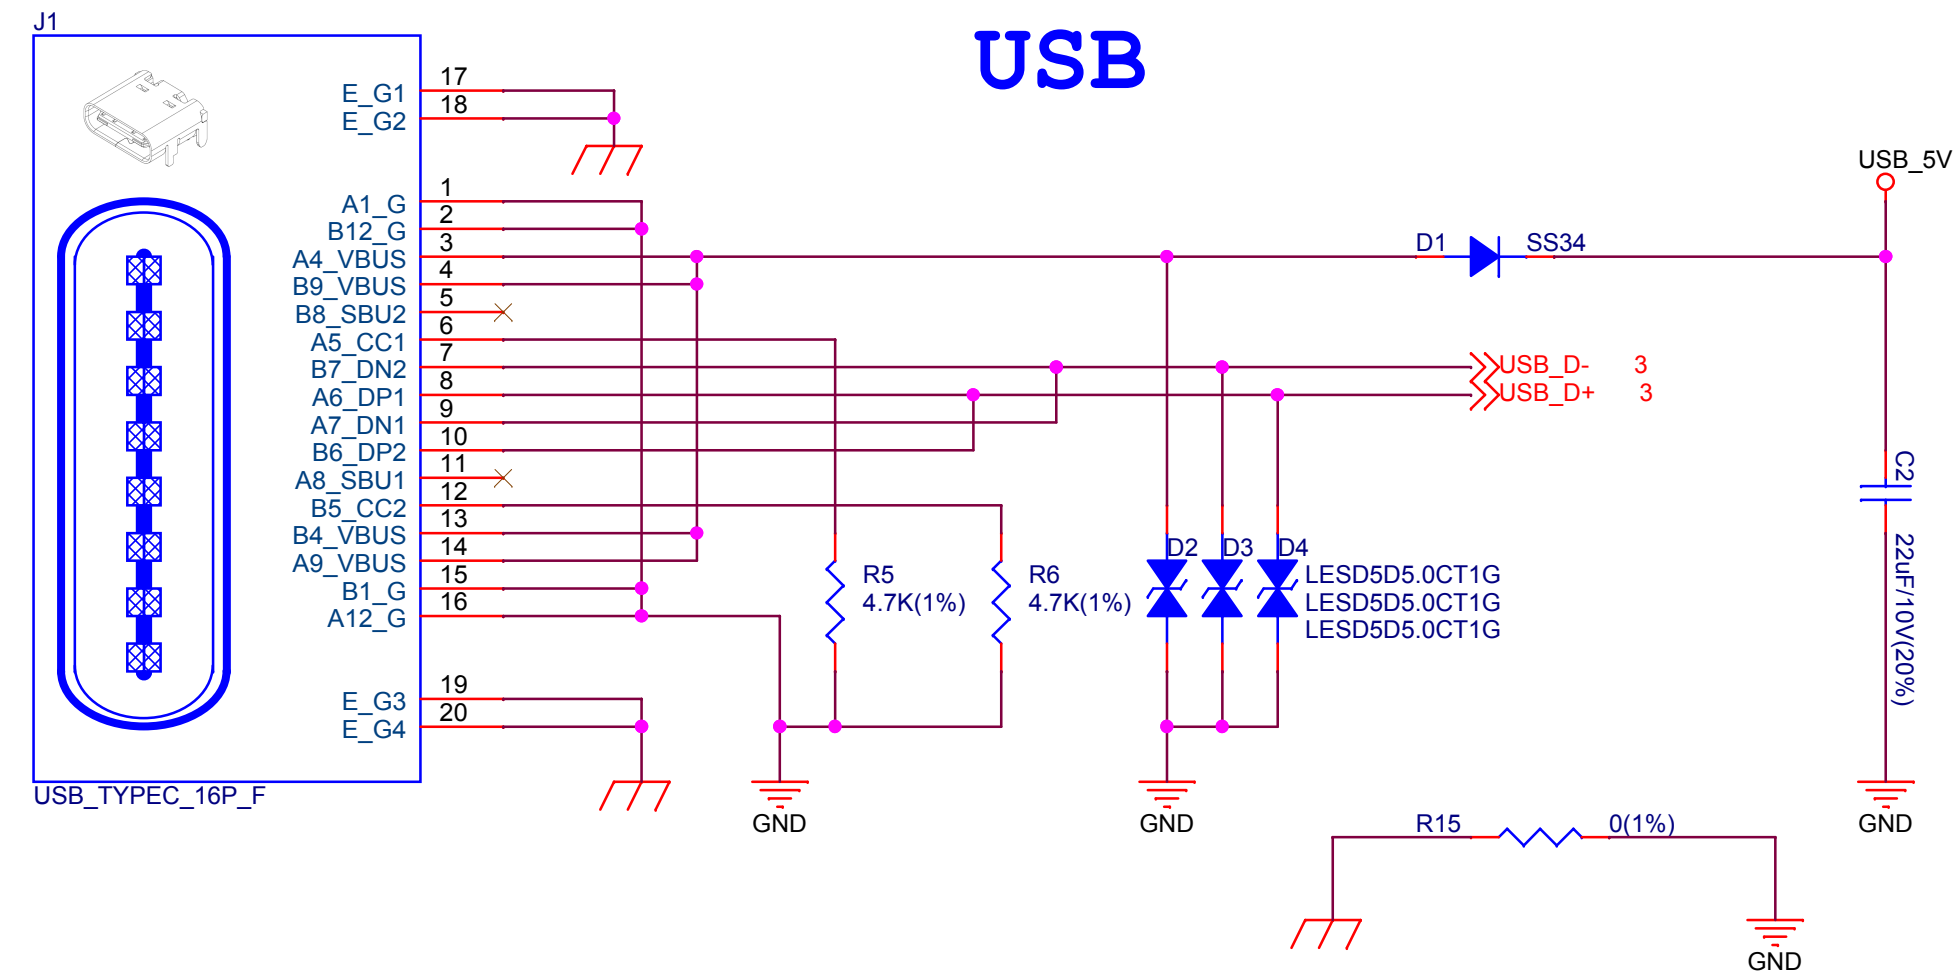 
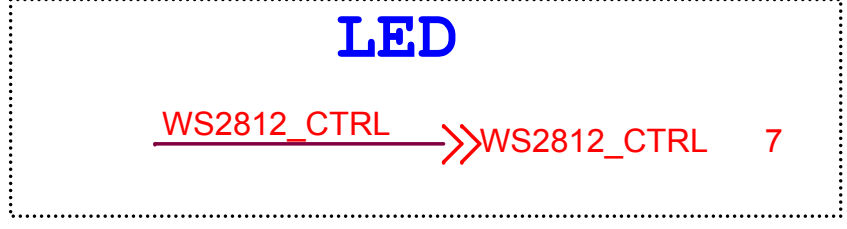 
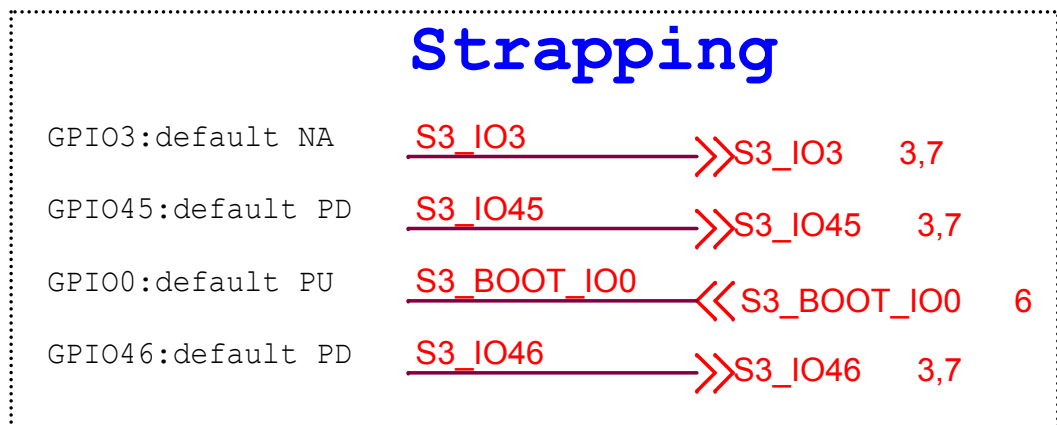 
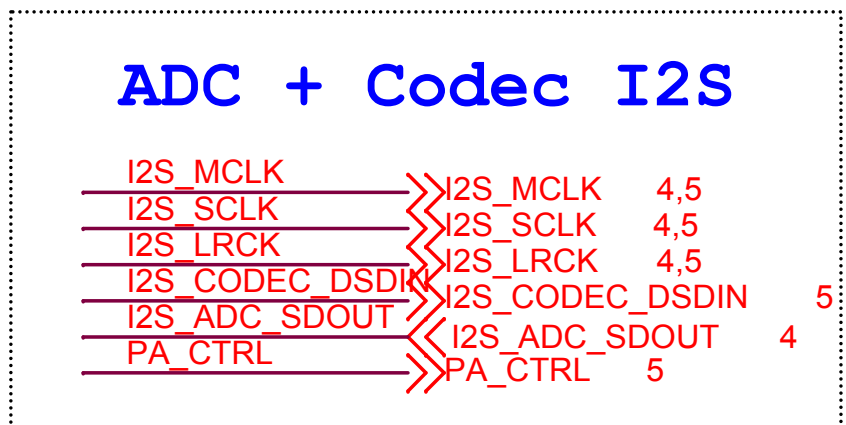 
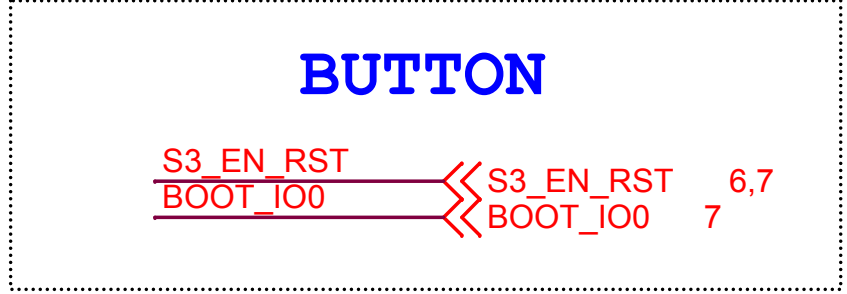 
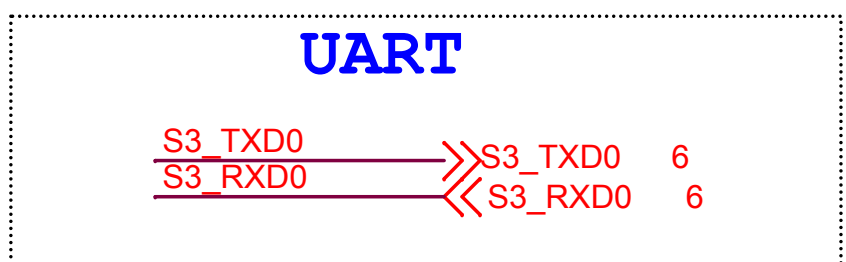 
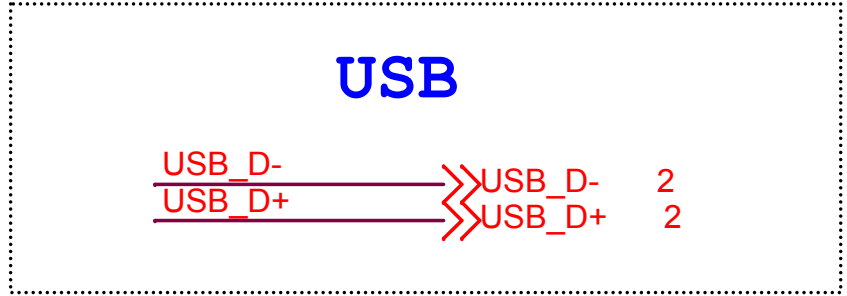 
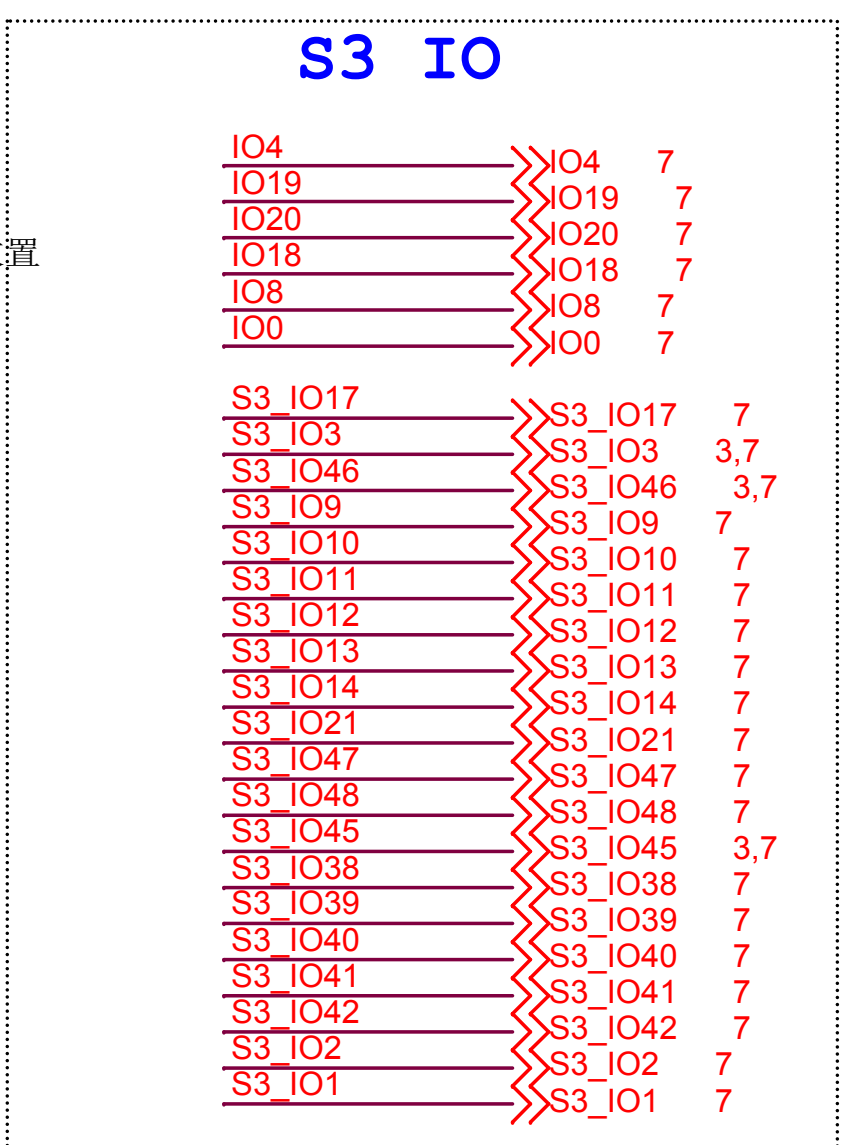 
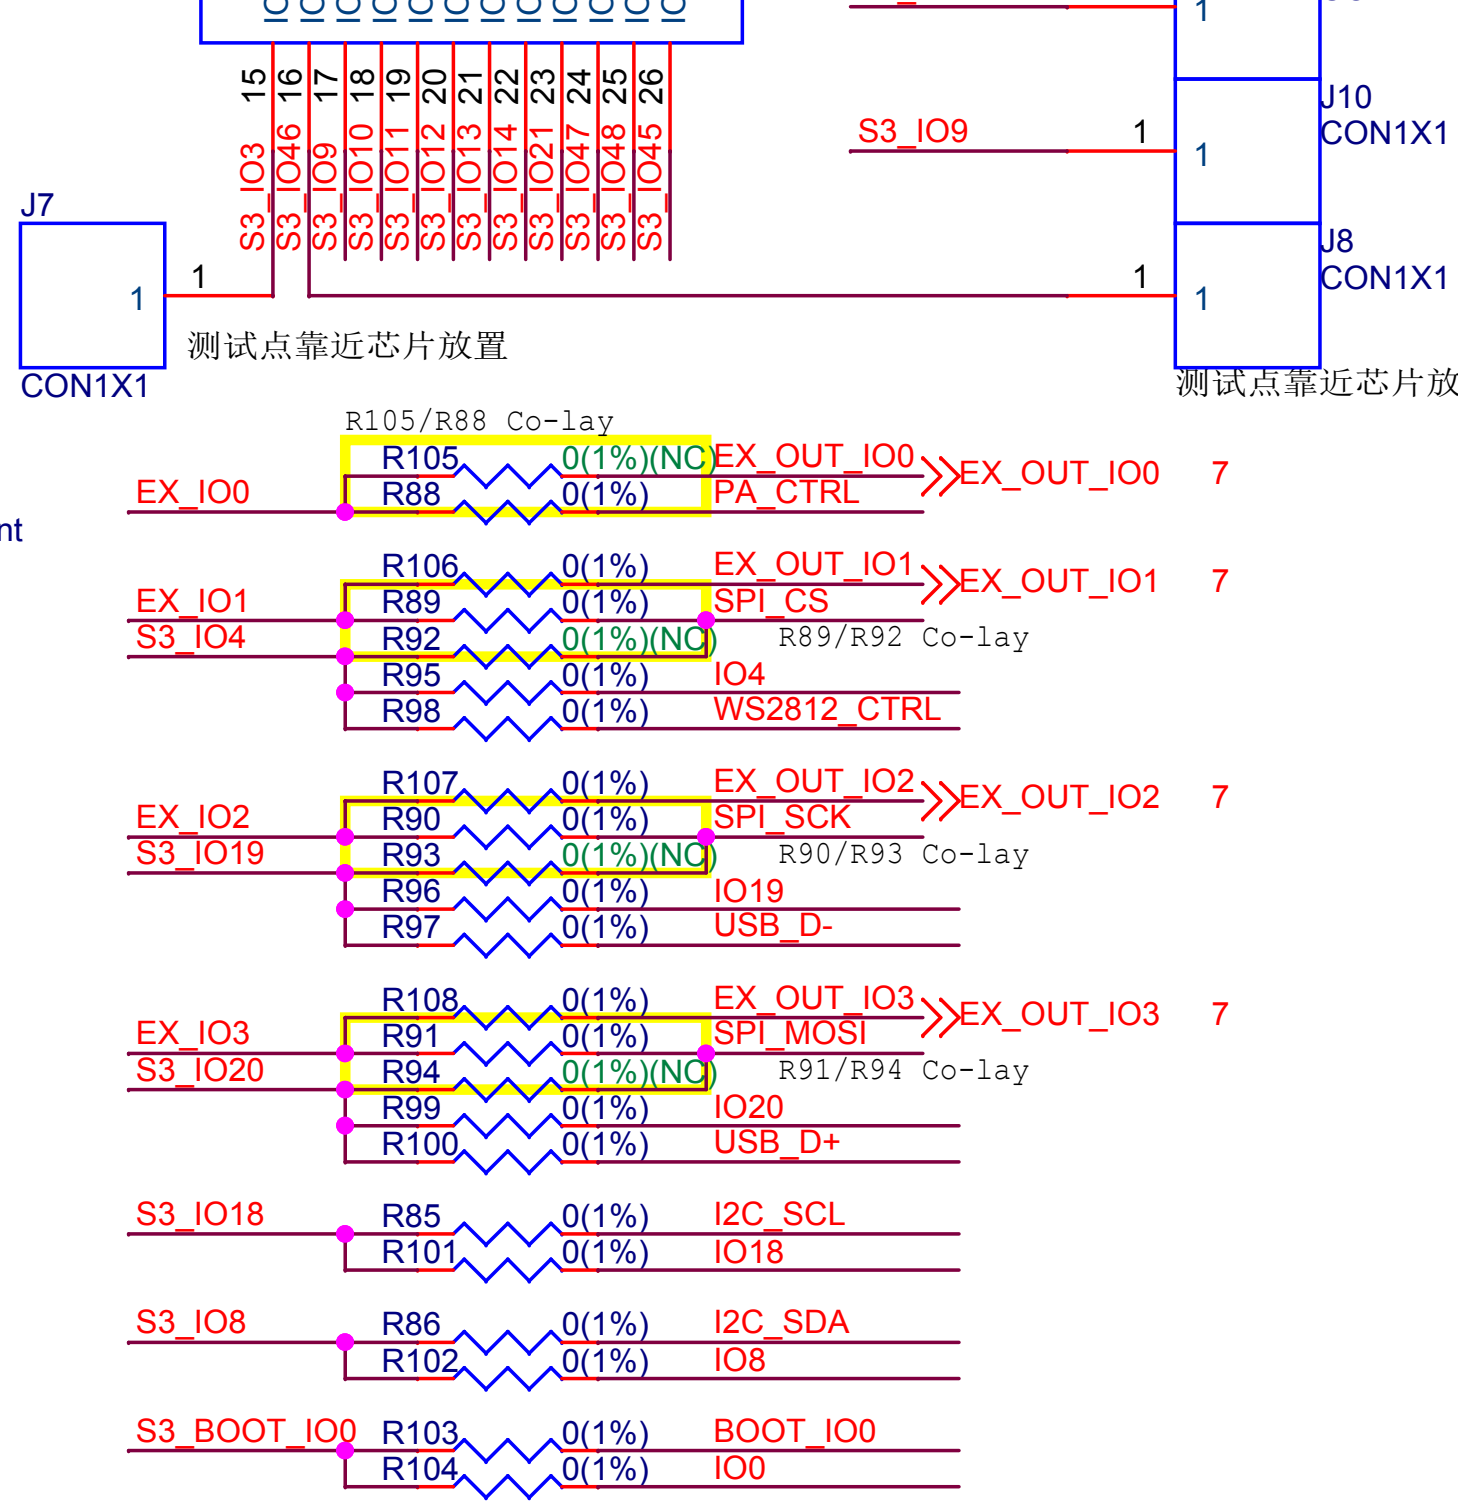 
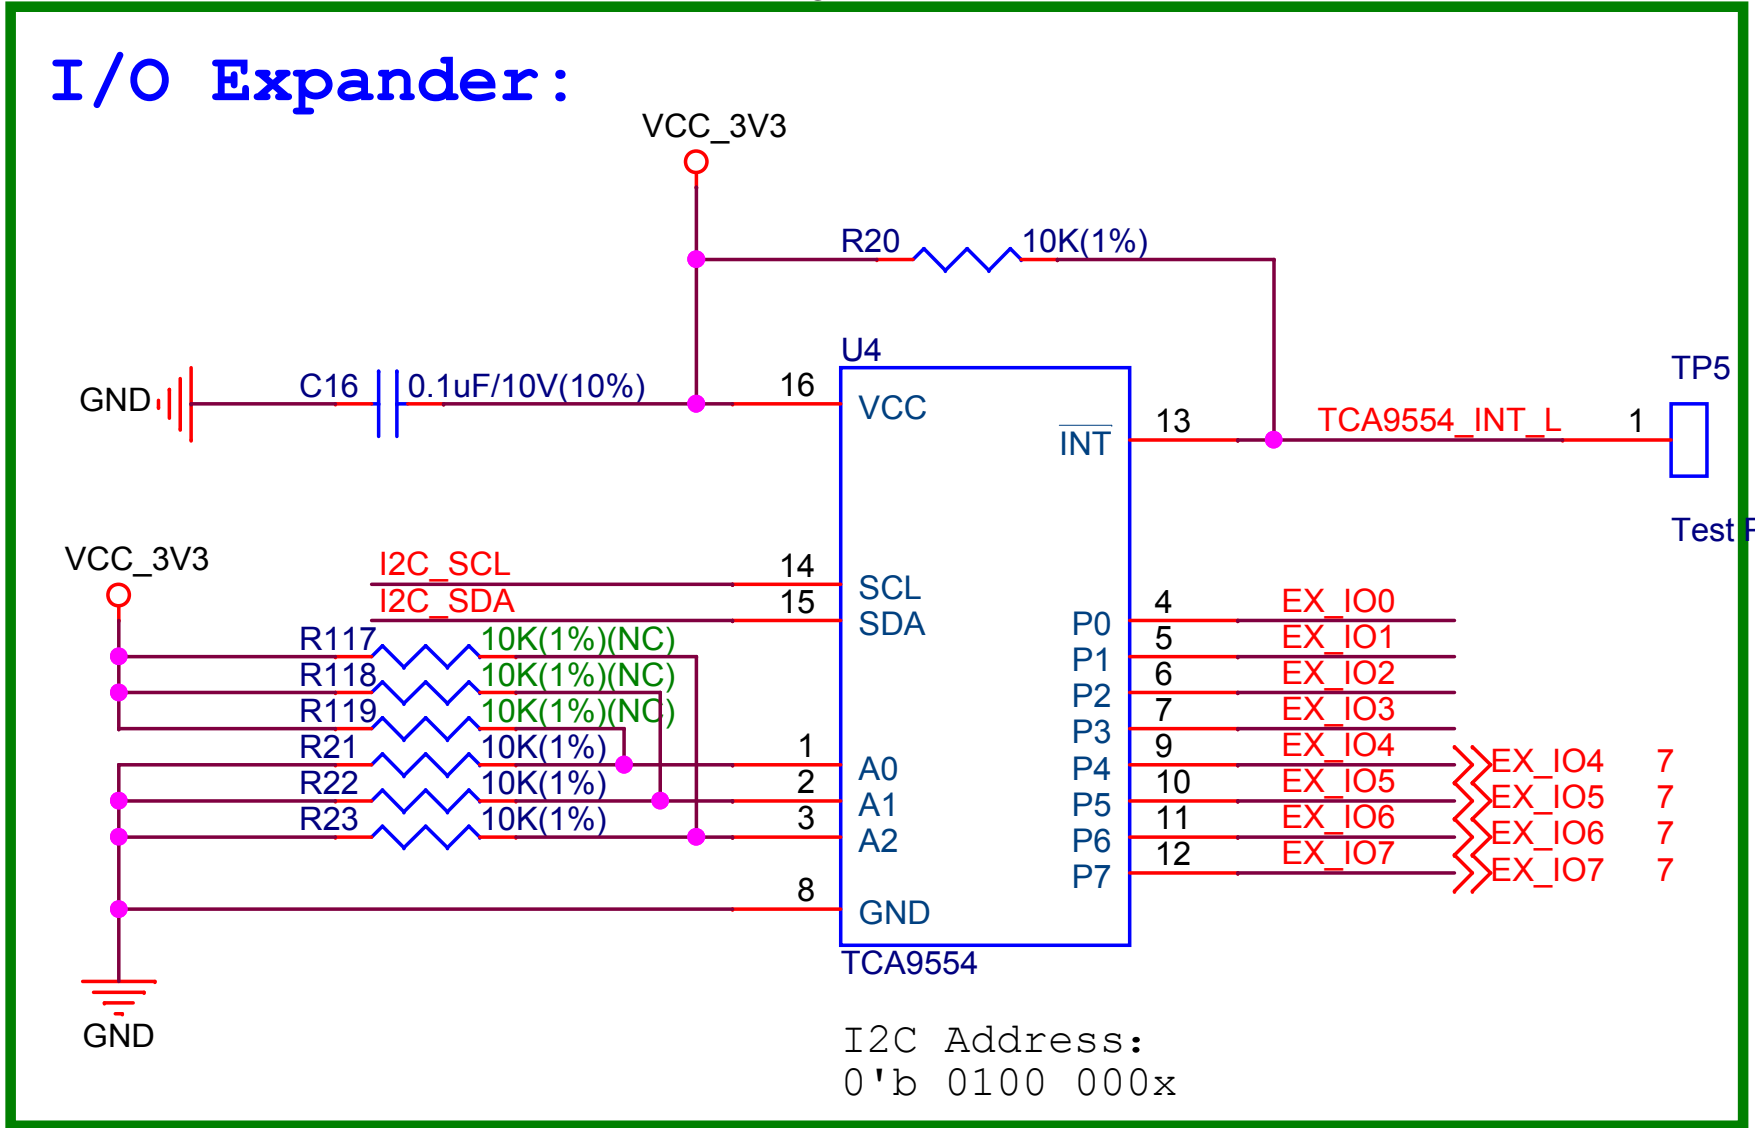 


<b>ESPRESSIF</b>			
乐鑫信息科技(上海)股份有限公司			
Title			
ESP32-S3-LCD-EV-Board-MB			
Size	Page Name	Rev	Proprietary
A	Overview	1.4	
Date:	Friday, July 28, 2023	Sheet	1 of 7

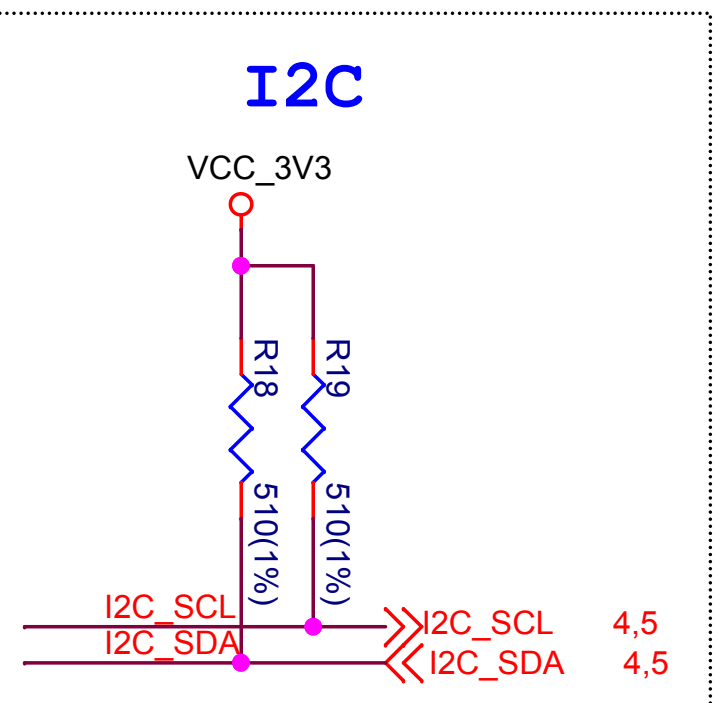

<b>ESPRESSIF</b>			
乐鑫信息科技(上海)股份有限公司			
Title ESP32-S3-LCD-EV-Board-MB			
Size B	Page Name Power	Rev 1.4	Proprietary
Date:	Friday, July 28, 2023	Sheet	2 of 7

# MCU

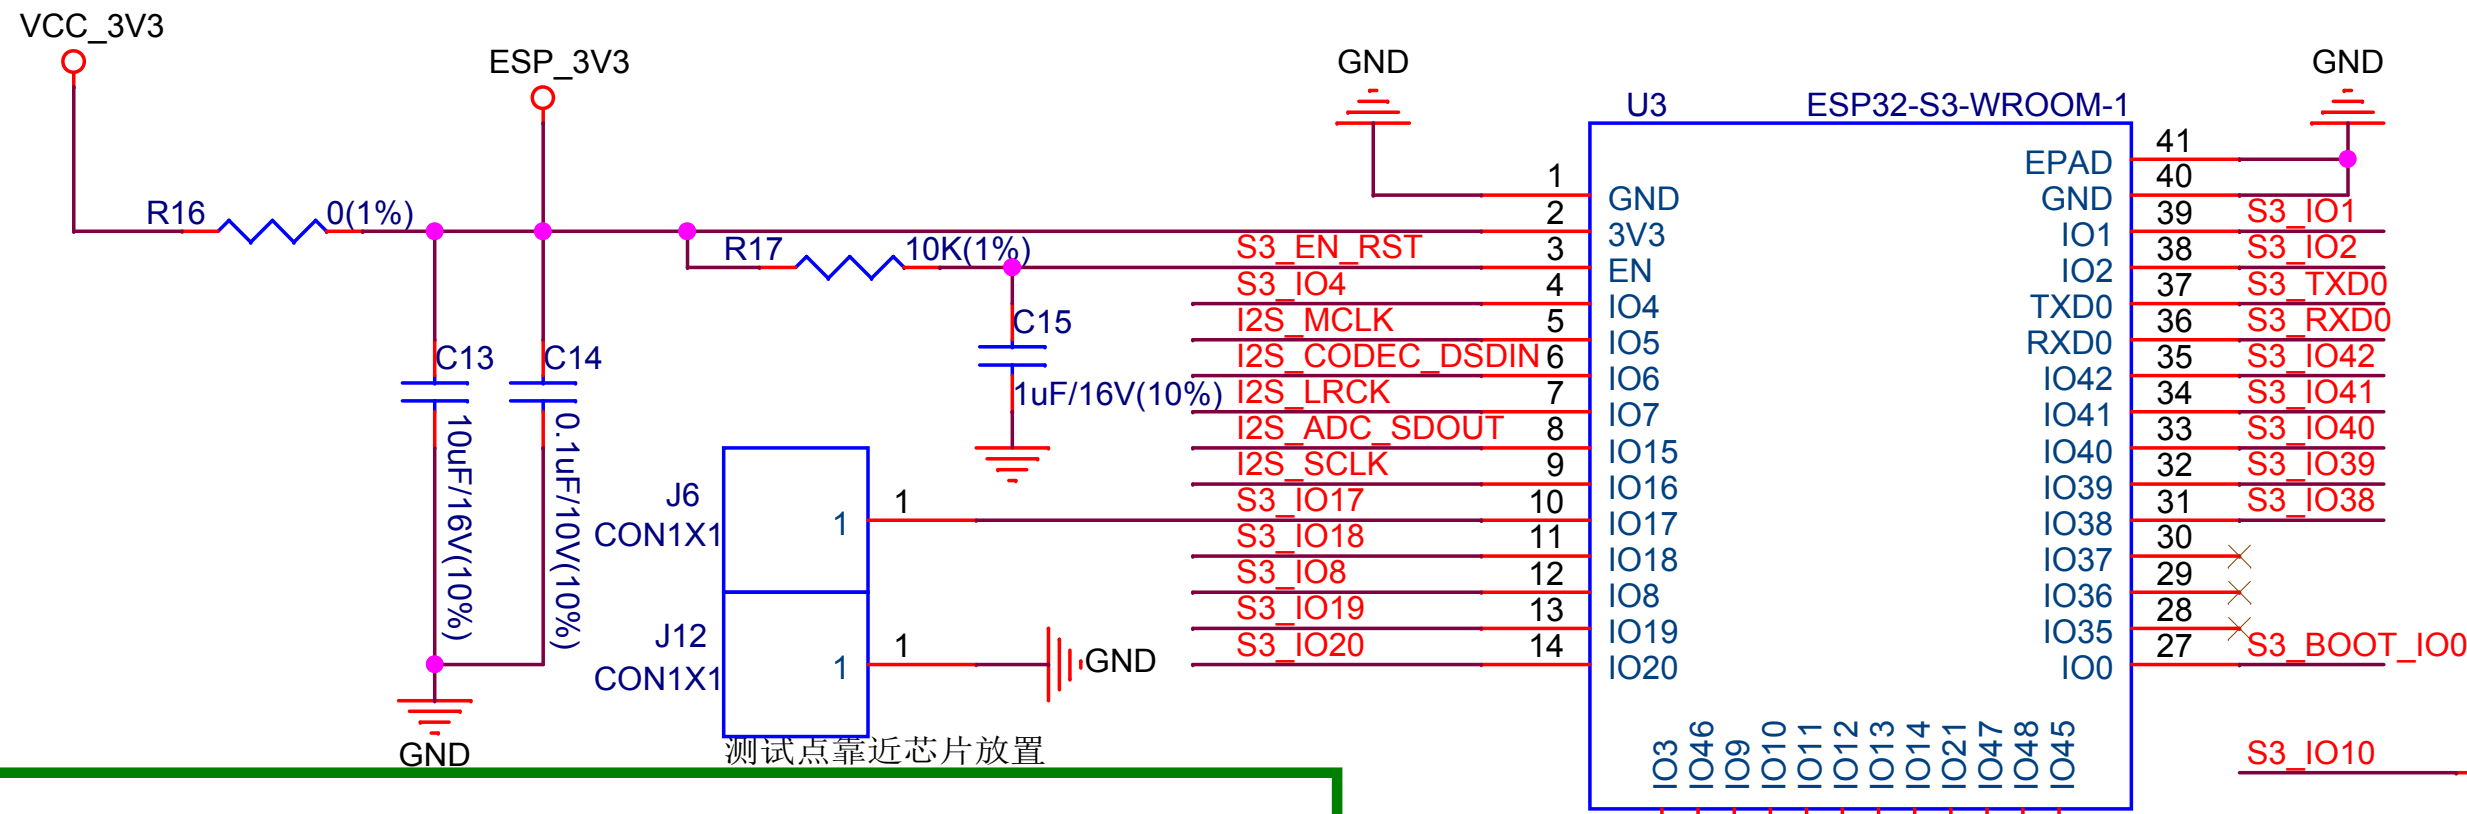

## ESPRESSIF

 
 
乐鑫信息科技(上海)股份有限公司

Title: ESP32-S3-LCD-EV-Board-MB

Size	Page Name	Rev	Proprietary
A4	Module	1.4	


Date: Friday, July 28, 2023

Sheet 3 of 7

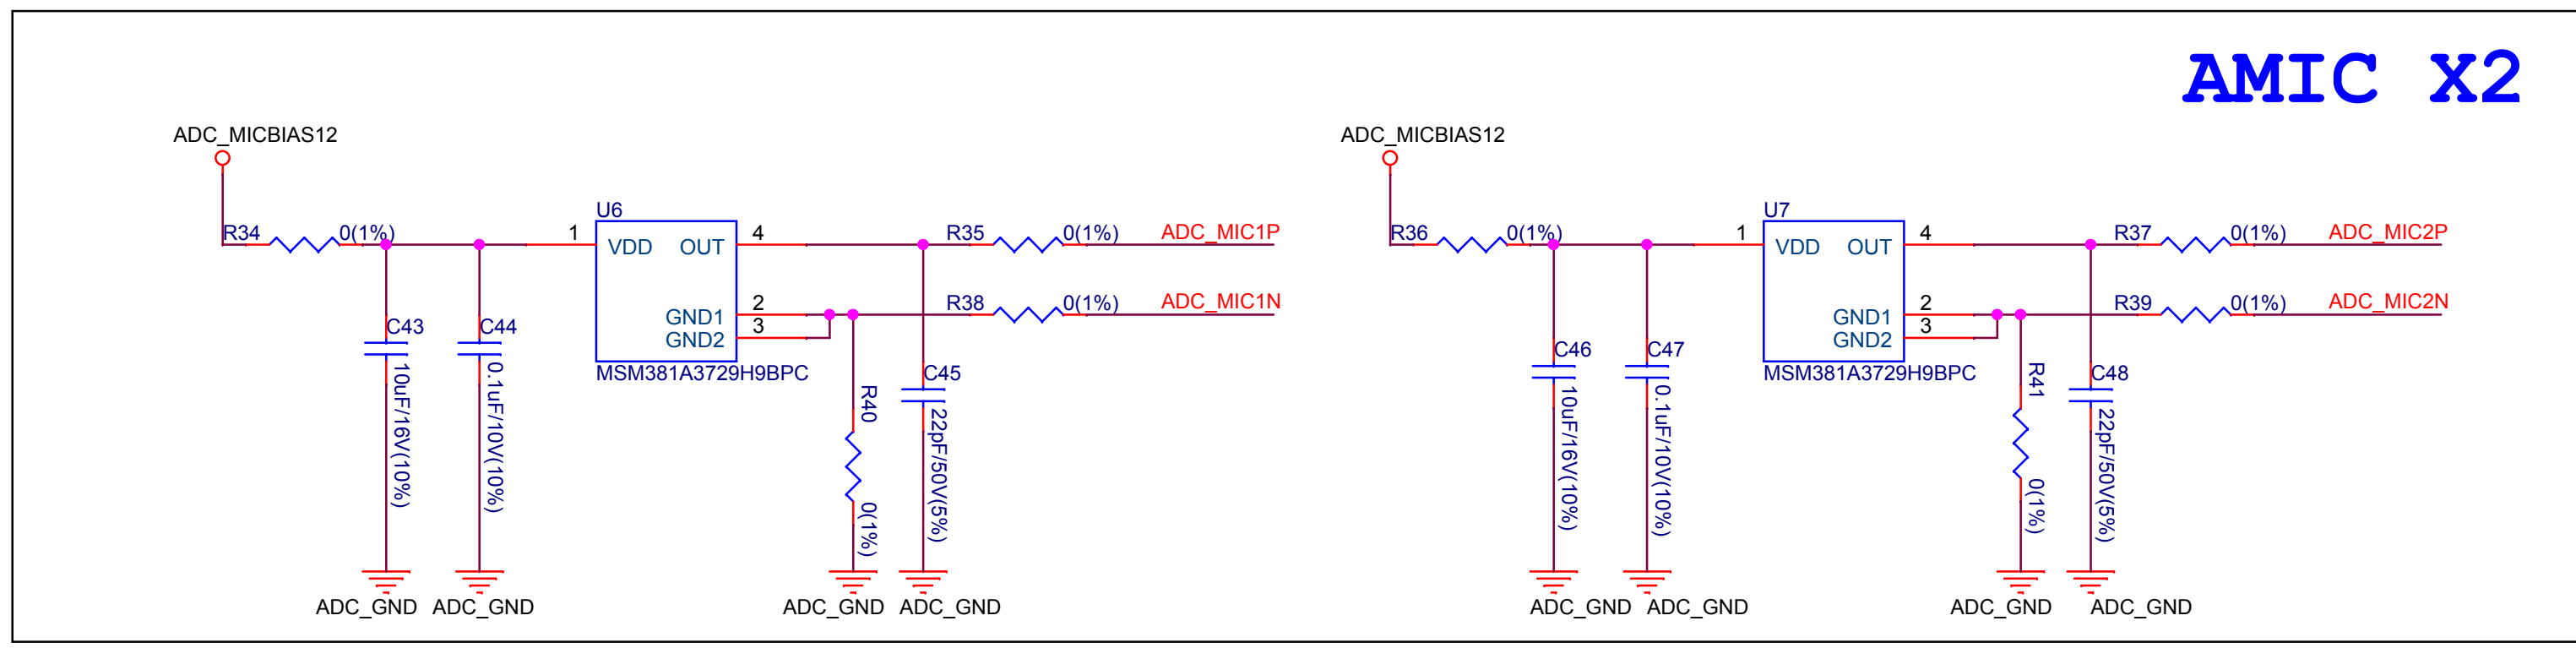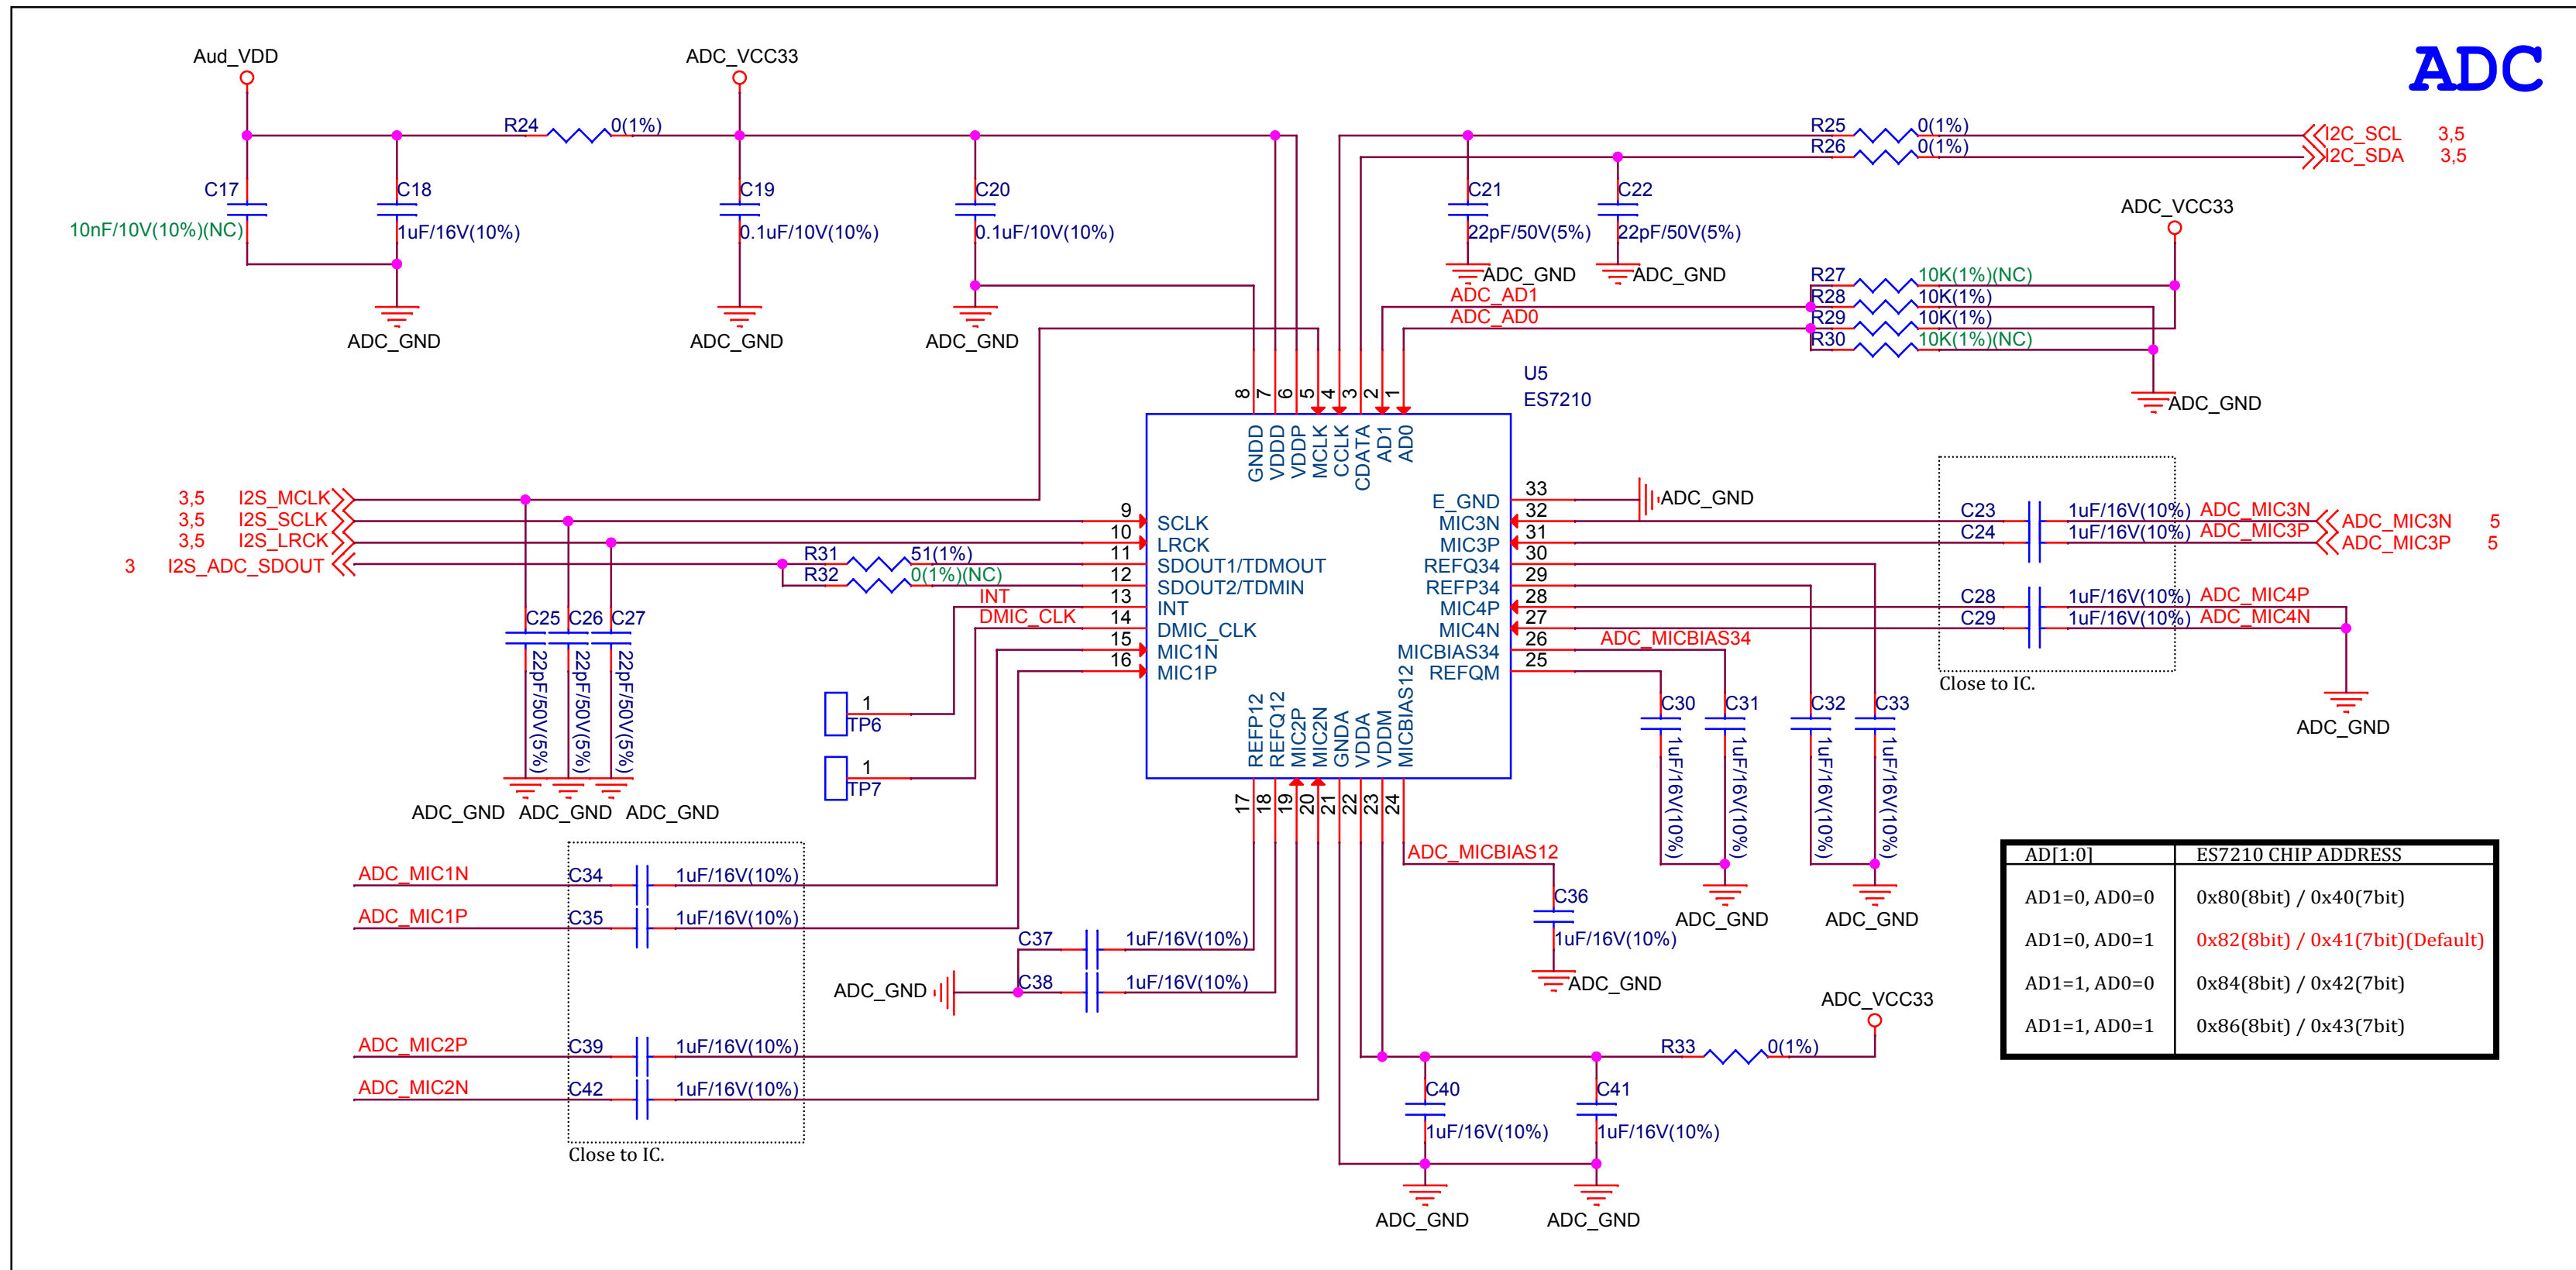





# Codec

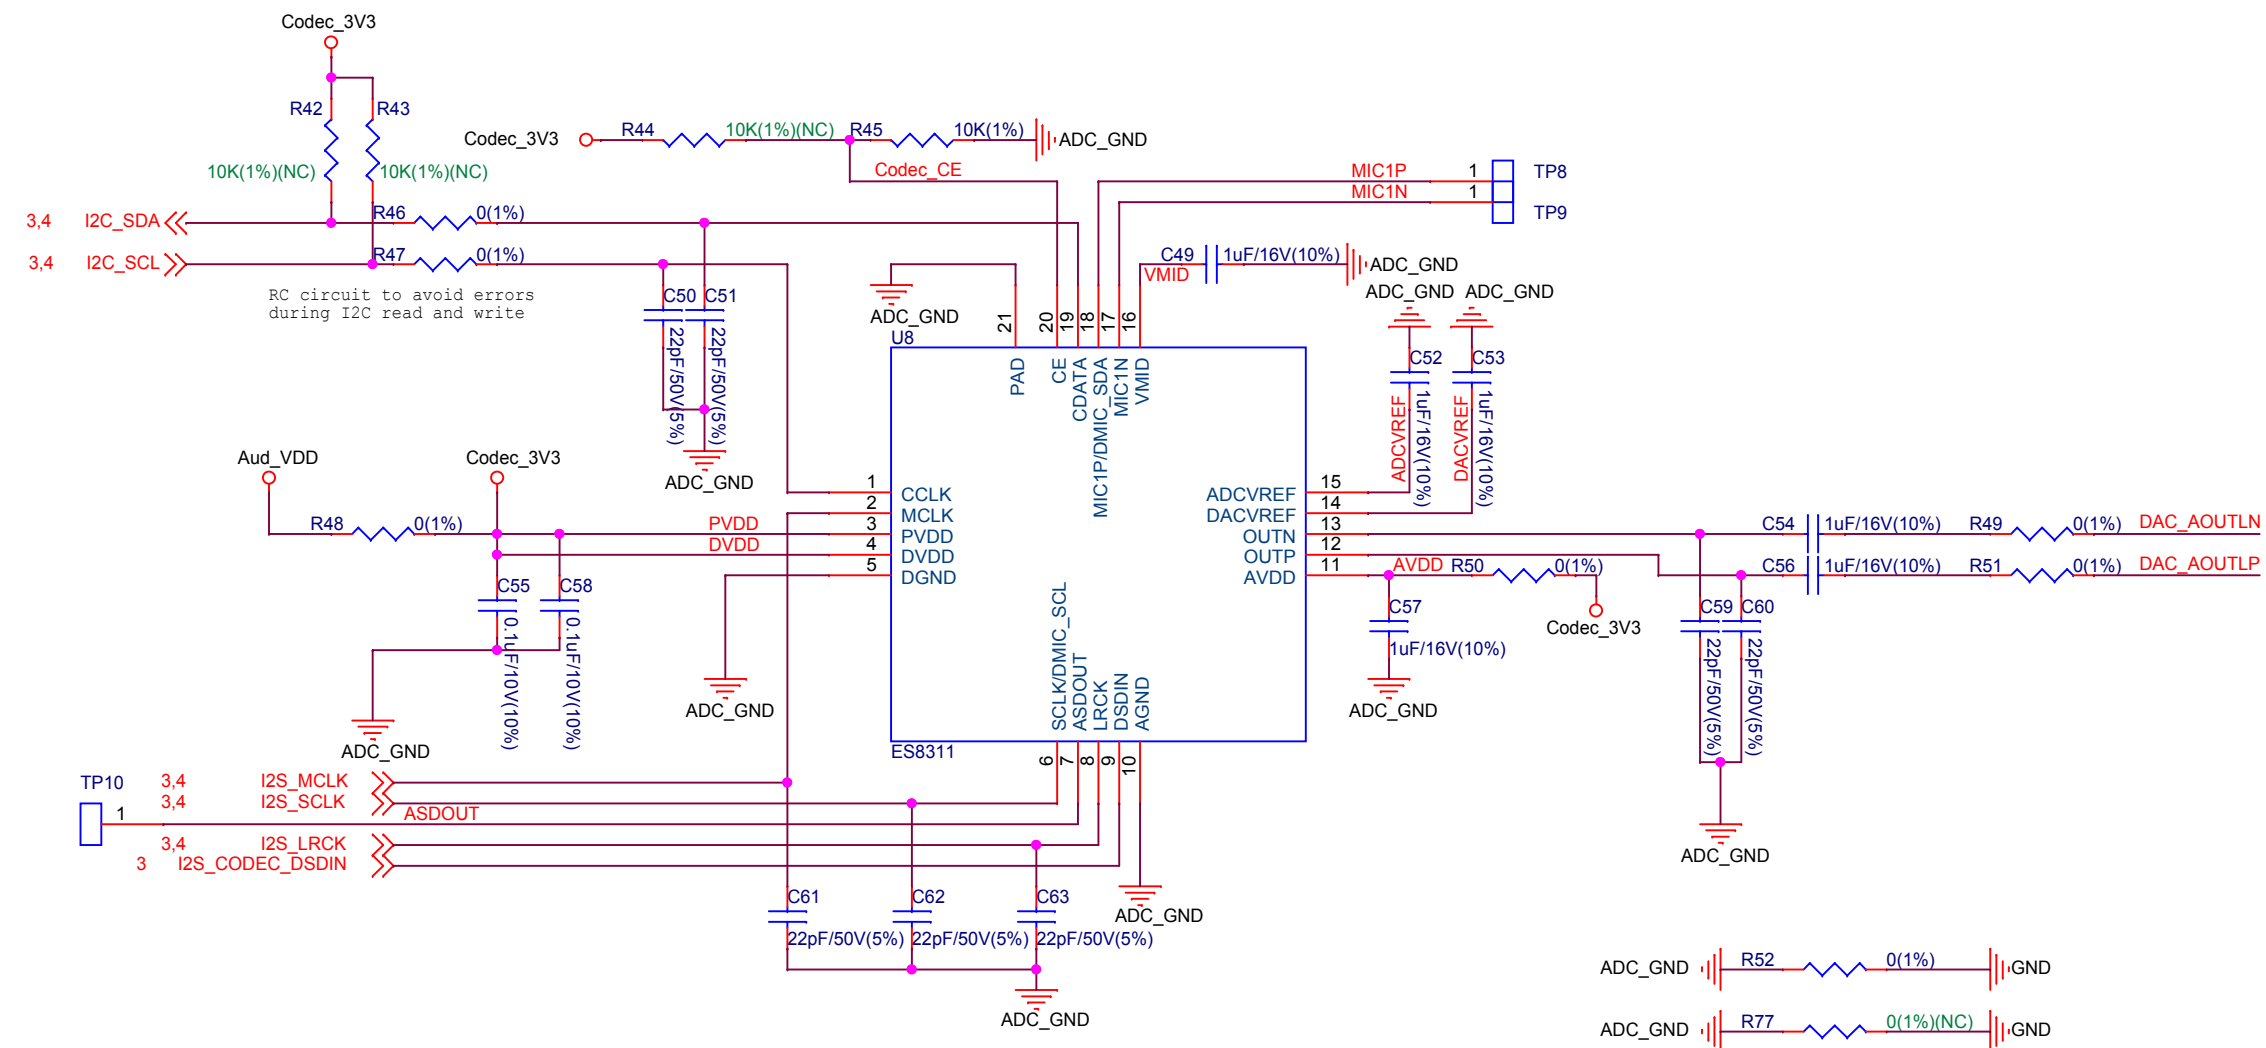 


# AEC

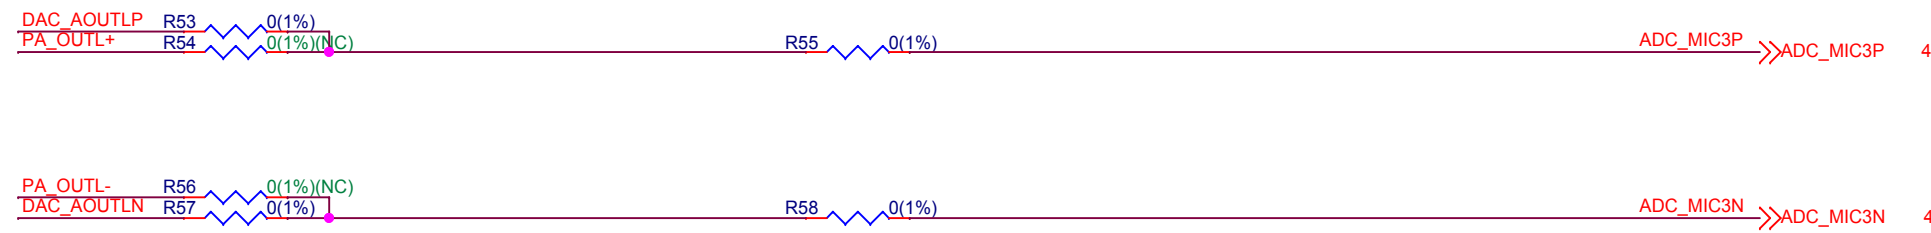 



# PA

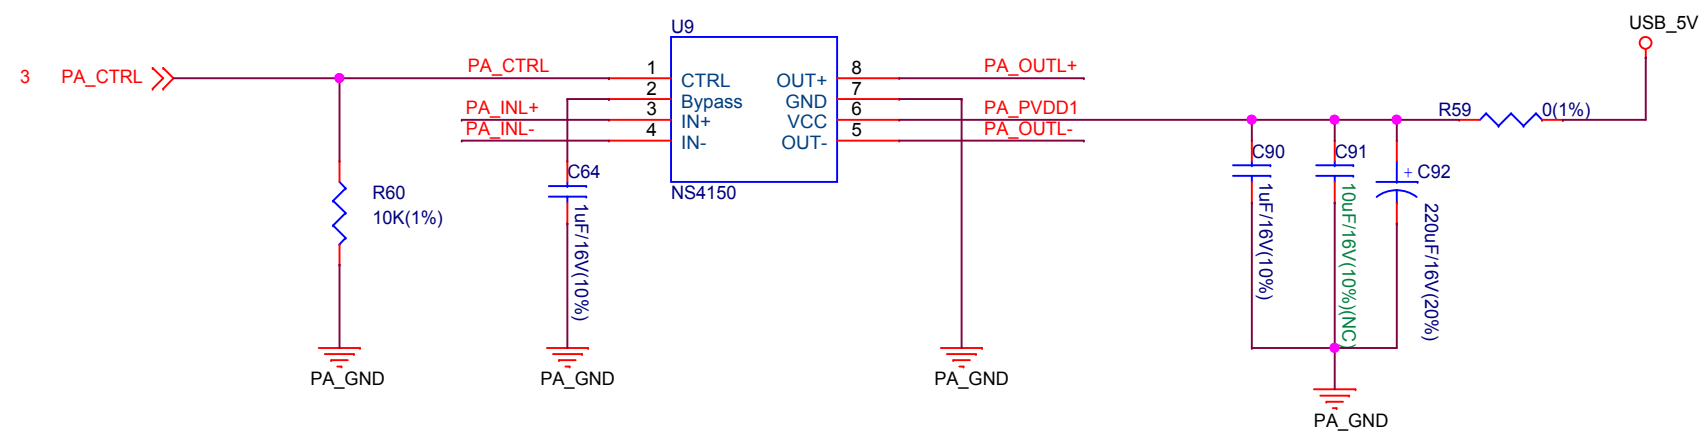 

# Speaker

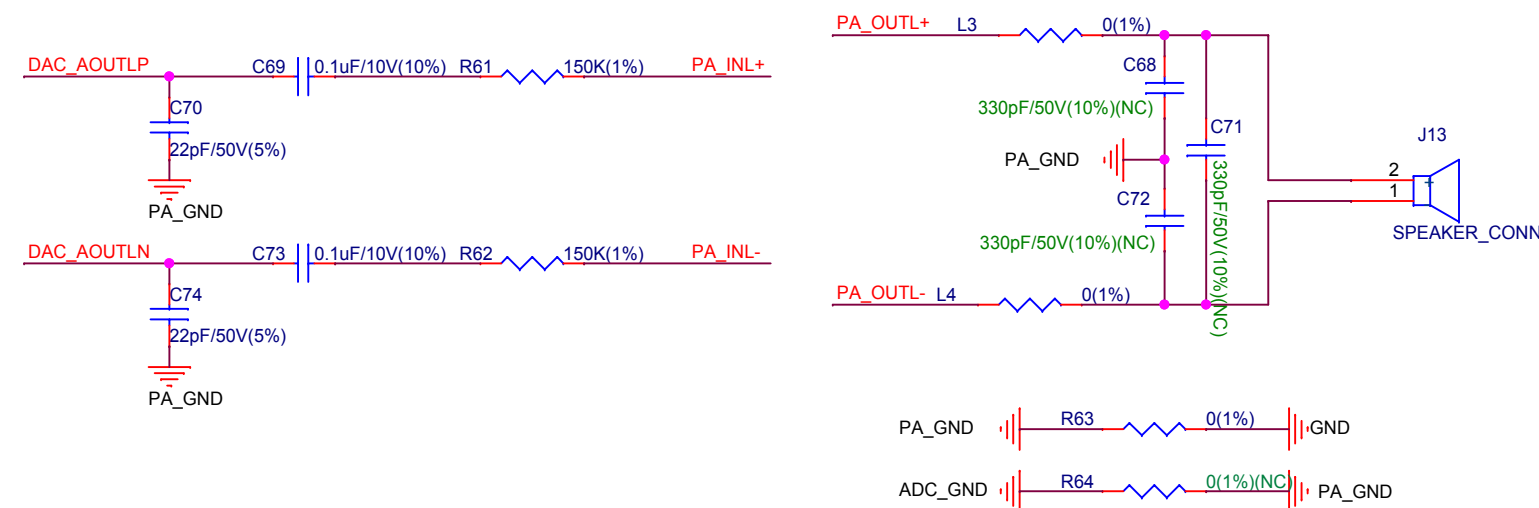 

# USB to UART

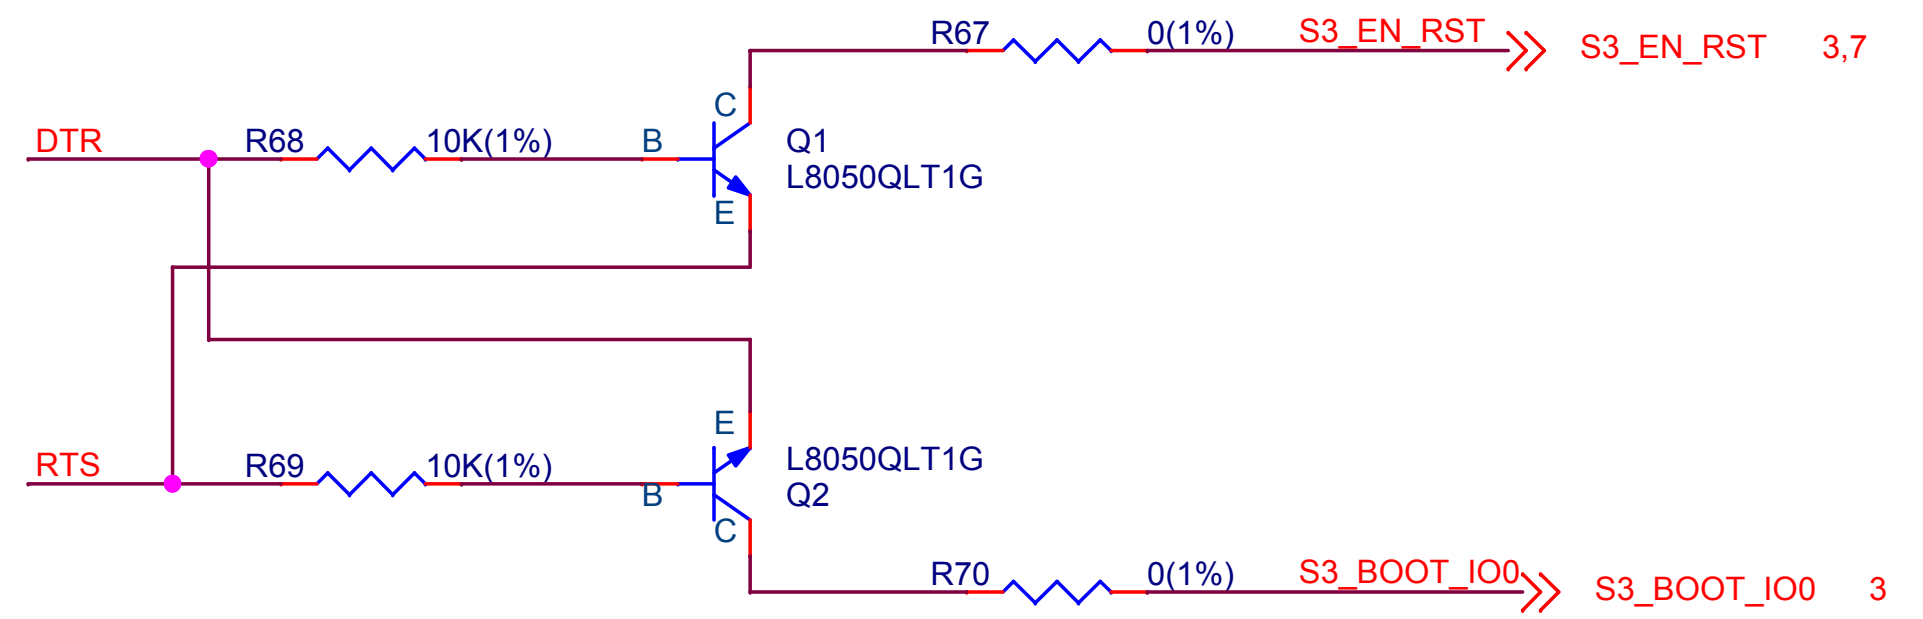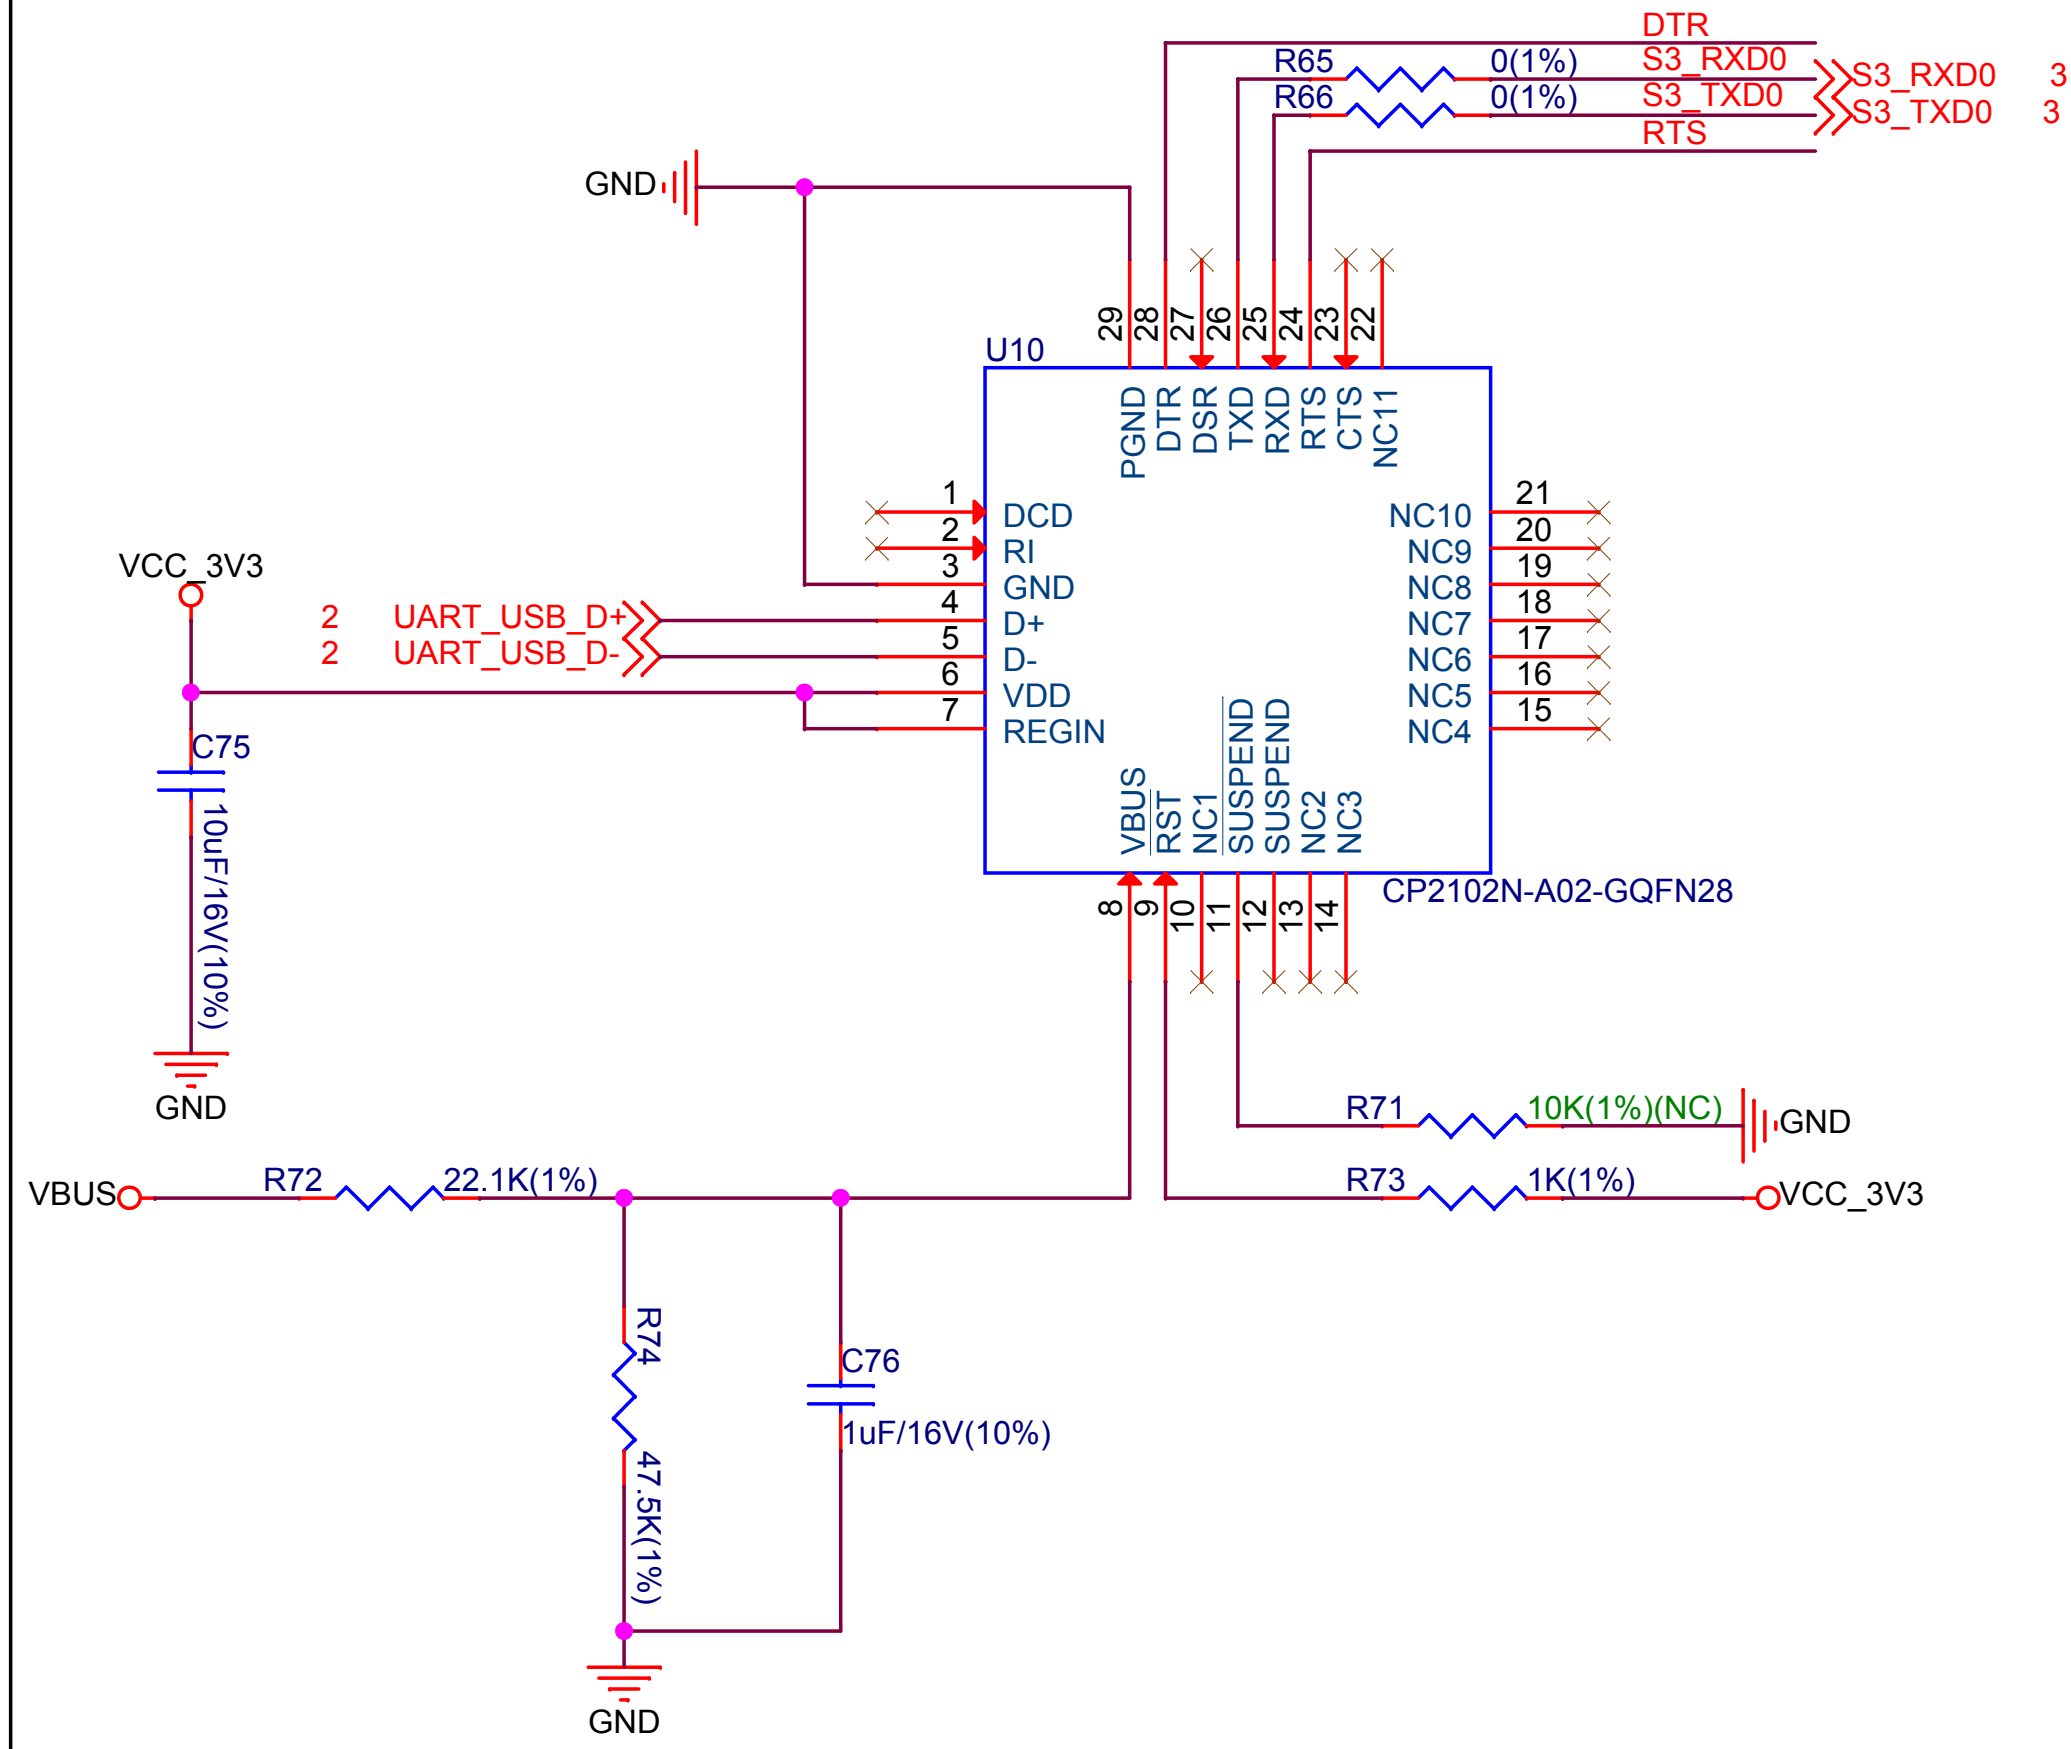  

Auto program

DTR	RTS	EN	IO0
1	1	1	1
0	0	1	1
1	0	0	1
0	1	1	0

**ESPRESSIF**

 
乐鑫信息科技(上海)股份有限公司

Title  
ESP32-S3-LCD-EV-Board-MB


Size A4	Page Name USB to UART	Rev 1.4	Proprietary
------------	--------------------------	------------	-------------

Date: Friday, July 28, 2023 Sheet 6 of 7

# LED

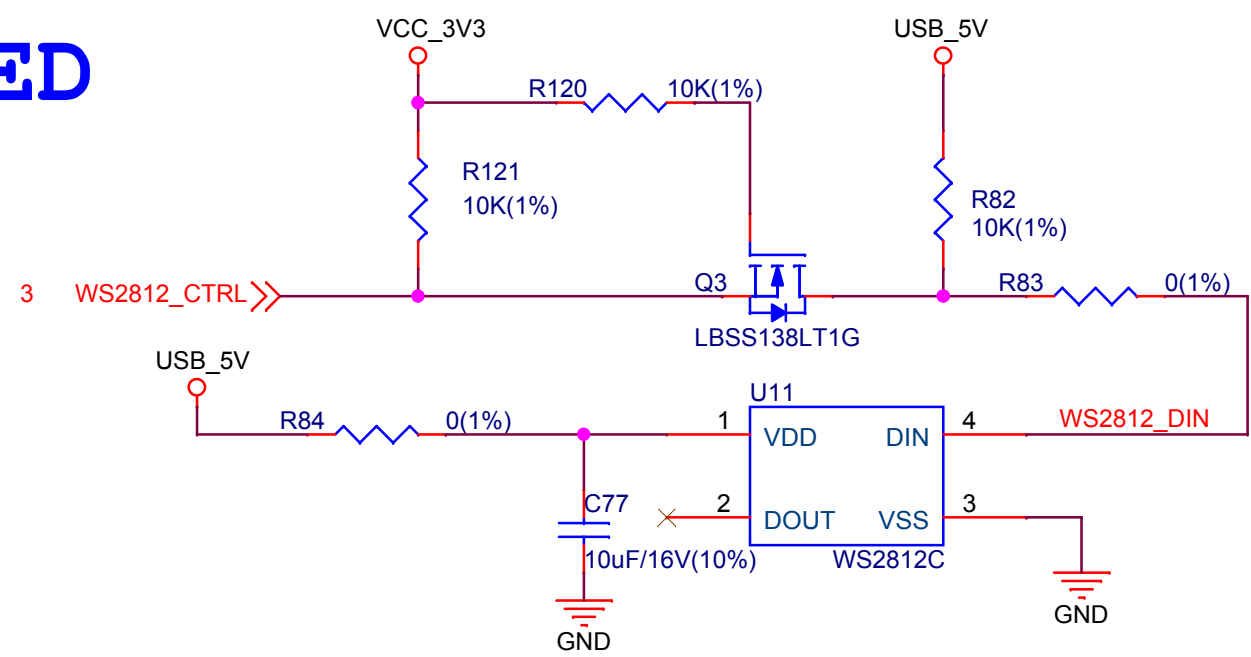


# BUTTON

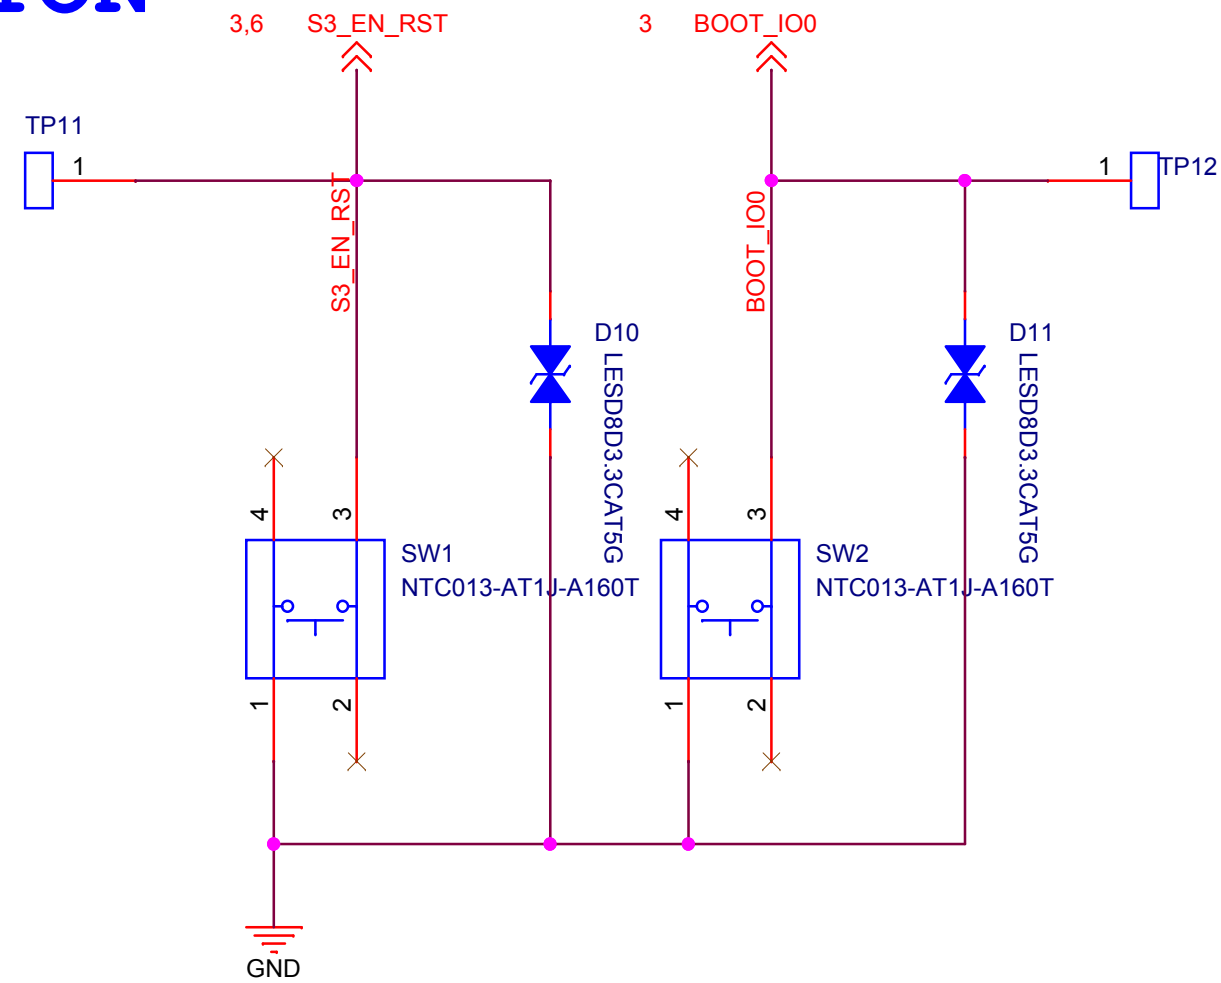 


# Connector to SUB

 
NOTE:  
 1. IO19/IO20 can not be used when USB function is running.  
 4. IO0 can only be used when system configuration is finished.  
 5. IO4 can not be used when SPI is from S3 IO or WS2812\_CTRL is used.  
 6. IO8 can only be used as I2C SDA function.  
 7. IO18 can only be used as I2C\_SCL function.

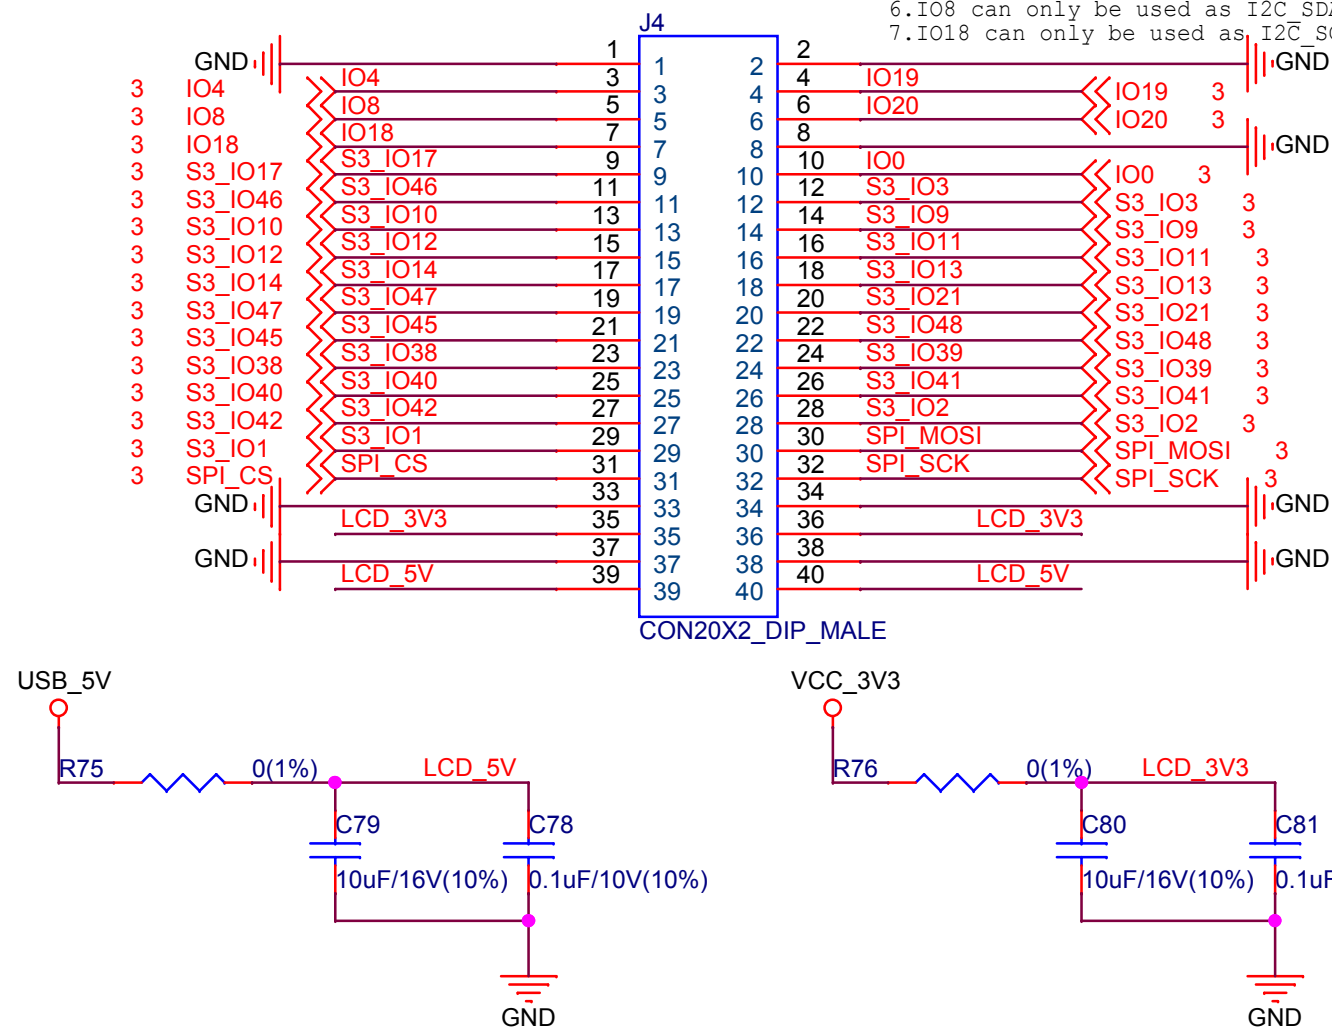


# IO for Customer Use

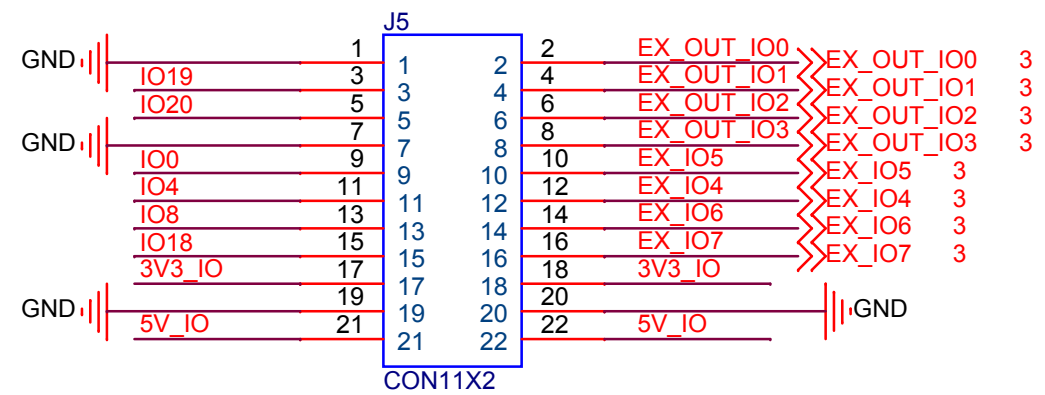 

NOTE:  
 1. EX\_OUT\_IO0 can not be used when PA\_CTRL is used.  
 2. EX\_OUT\_IO1/EX\_OUT\_IO2/EX\_OUT\_IO3 can not be used when SPI is from IO Expander.  
 3. IO19/IO20 can not be used when USB function is running.  
 4. IO0 can only be used when system configuration is finished.  
 5. IO4 can not be used when SPI is from S3 IO or WS2812\_CTRL is used.  
 6. IO8 can only be used as I2C SDA function.  
 7. IO18 can only be used as I2C\_SCL function.

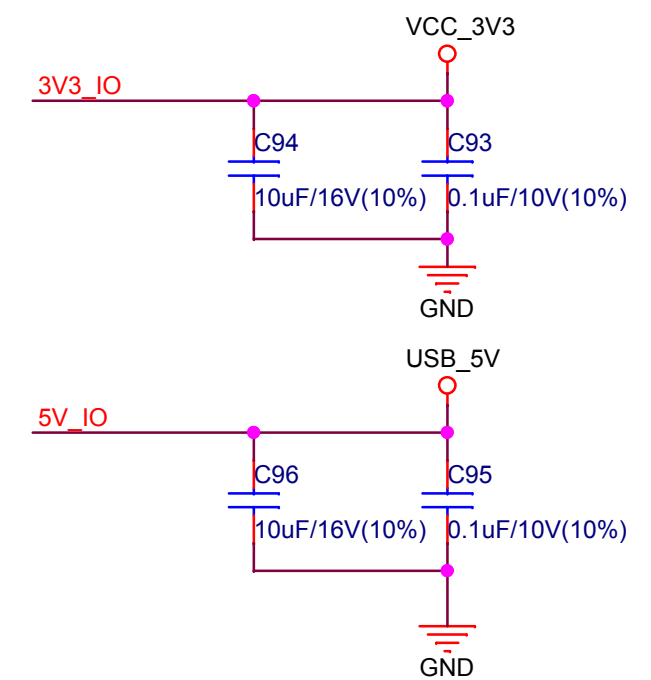 

# Support Board Holes

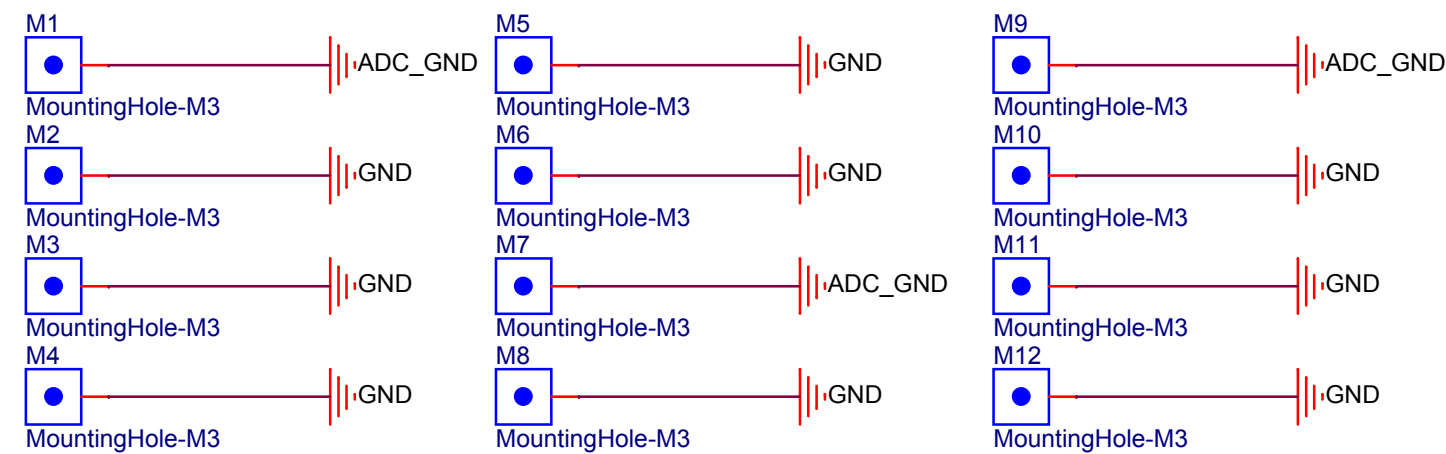 

**ESPRESSIF**

乐鑫信息科技(上海)股份有限公司

Title  
ESP32-S3-LCD-EV-Board-MB

Size B Page Name Interface Rev 1.4 Proprietary

Date: Friday, July 28, 2023 Sheet 7 of 7