



ESPRESSIF

ESP-DL User Guide

Release latest

Espressif Systems

Sep 14, 2026

CONTENTS

1	Introduction	3
1.1	Introduction	3
1.2	ESP-DL Project Organization	4
2	Getting Started	7
2.1	Hardware Requirements	7
2.2	Software Requirements	7
2.3	Quick Start	9
2.4	Model Quantization	9
2.5	Model deployment	10
3	Tutorials	11
3.1	How to quantize model	11
3.2	Auto Quantization	15
3.3	How to load & test & profile model	27
3.4	How to run model	33
3.5	Creating a New Module (Operator)	35
3.6	Implement Operators Automatically with AI Agent	37
3.7	How to deploy MobileNetV2	46
3.8	How to deploy YOLO11n	53
3.9	How to deploy YOLO11n-pose	63
3.10	How to Deploy Streaming Models	72
3.11	Quantizing Models with TQT	77
4	API Reference	91
4.1	Tensor API Reference	91
4.2	Module API Reference	101
4.3	Model API Reference	106
4.4	Fbs API Reference	122



[Get Started](#)



[Tutorials](#)



[API Reference](#)

INTRODUCTION

1.1 Introduction


ESP-DL is a lightweight and efficient neural network inference framework designed specifically for ESP series chips. With ESP-DL, you can easily and quickly develop AI applications using Espressif's System on Chips (SoCs).

1.1.1 Overview

ESP-DL offers APIs to load, debug, and run AI models. The framework is easy to use and can be seamlessly integrated with other Espressif SDKs. ESP-PPQ serves as the quantization tool for ESP-DL, capable of quantizing models from ONNX, Pytorch, and TensorFlow, and exporting them into the ESP-DL standard model format.

- **ESP-DL Standard Model Format:** This format is similar to ONNX but uses FlatBuffers instead of Protobuf, making it more lightweight and supporting zero-copy deserialization, with a file extension of *.espdl*.
- **Efficient Operator Implementation:** ESP-DL efficiently implements common AI operators such as Conv, Gemm, Add, and Mul. The list of supported operators: [operator_support_state.md](#)
- **Static Memory Planner:** The memory planner automatically allocates different layers to the optimal memory location based on the user-specified internal RAM size, ensuring efficient overall running speed while minimizing memory usage.
- **Dual Core Scheduling:** Automatic dual-core scheduling allows computationally intensive operators to fully utilize the dual-core computing power. Currently, Conv2D and DepthwiseConv2D support dual-core scheduling.
- **8bit LUT Activation:** All activation functions except for ReLU and PReLU are implemented using an 8-bit LUT (Look Up Table) method in ESP-DL to accelerate inference. You can use any activation function, and their computational complexity remains the same.

The framework figures below illustrate the overall architecture of ESP-DL.

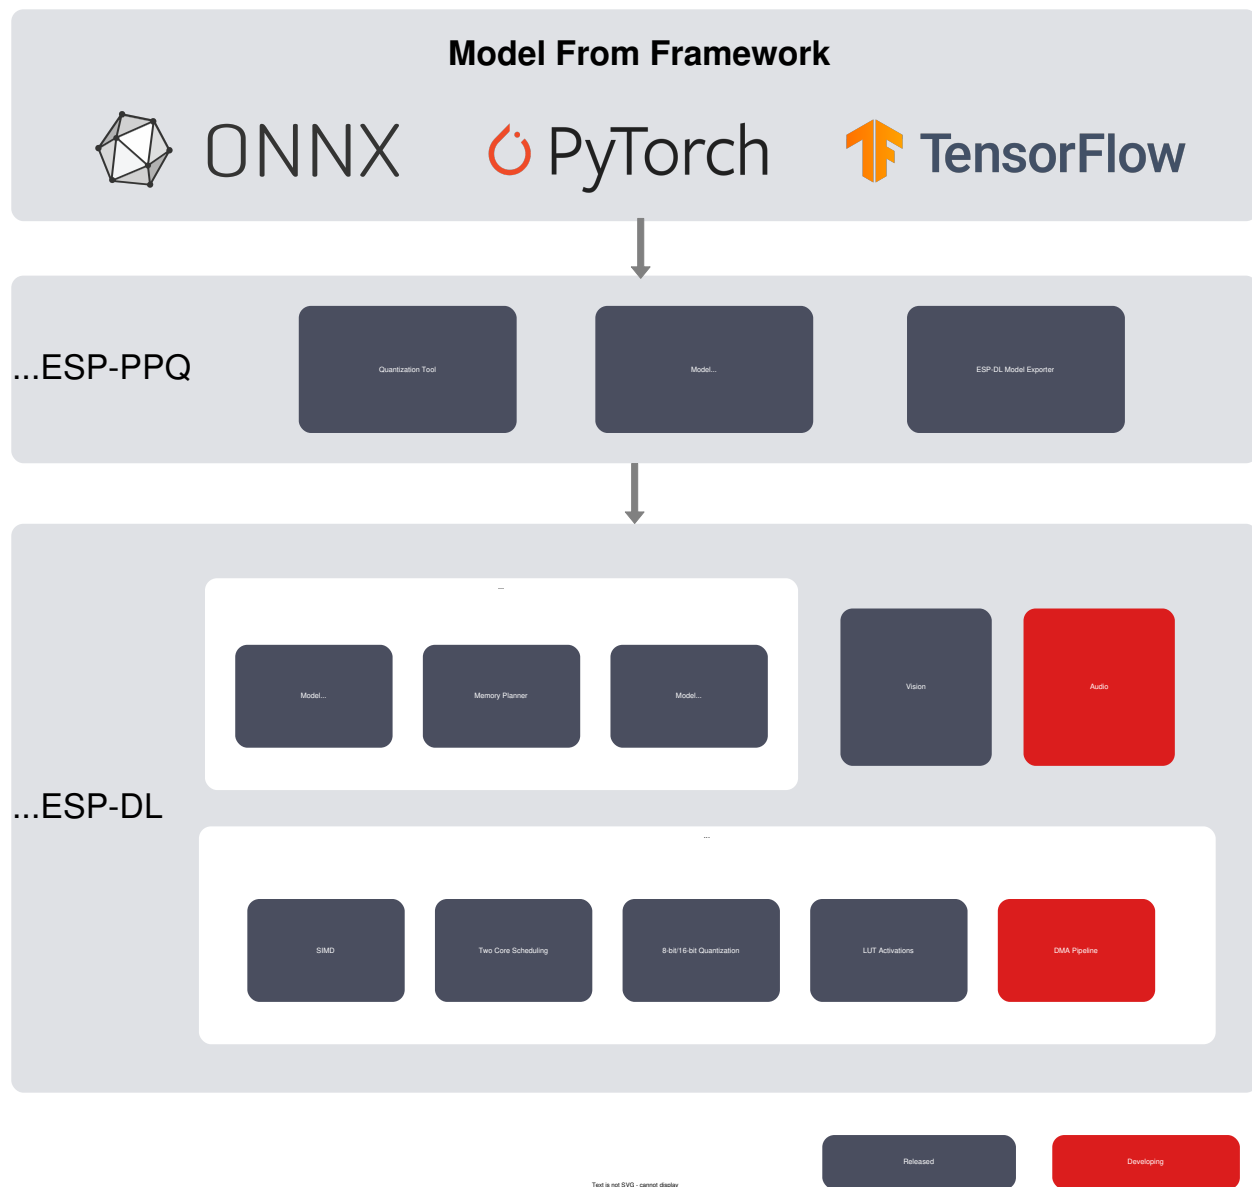

1.2 ESP-DL Project Organization

ESP-DL's modular design enables efficient development, maintenance, and scalability. The project is organized as follows:

1.2.1 dl (Deep Learning)

Core deep learning modules and tools, divided into submodules:

- **model** Loads, manages, and allocates memory for deep learning models. Includes `dl_model_base` and `dl_memory_manager`.
- **module** Interfaces for 60+ neural network operators (convolution, pooling, activation, etc.). Files: `dl_module_base.hpp`, `dl_module_conv.hpp`, `dl_module_pool.hpp`, `dl_module_relu.hpp`, etc.
- **base** Implements operations for chips (esp32, esp32s3, esp32p4) with ISA-specific assembly support. Includes operator implementations in `dl_base_conv2d.cpp/hpp`, `dl_base_avg_pool2d.cpp/hpp`, etc., and ISA-specific code in `isa/` subdirectories.
- **math** Mathematical operations (matrix functions). Files: `dl_math.hpp` and `dl_math_matrix.hpp`.
- **tool** Auxiliary functions (utility tools). Files: `dl_tool.hpp` and `dl_tool.cpp`. Includes ISA-specific tools in `isa/` subdirectories.
- **tensor** Tensor classes and operations. Files: `dl_tensor_base.hpp`.

1.2.2 vision

Computer vision modules divided into submodules:

- **classification** Image classification (model inference). Inference: `dl_cls_base`. Post-processors: `imagenet_cls_postprocessor`, `hand_gesture_cls_postprocessor`, `dl_cls_postprocessor`.
- **recognition** Feature extraction (model inference). Feature database management (Enroll, delete, query). Pre-processor: `dl_feat_image_preprocessor`. Inference: `dl_feat_base`. Post-processor: `dl_feat_postprocessor`. Database: `dl_recognition_database`
- **image** Image processing (resize, crop, warp affine). Color conversion (pixel, img). Image preprocessor (pipeline of resize, crop, color conversion, normalization, quantization). Image decoding/encoding (JPEG/BMP). Draw utility (point, hollow rectangle).
Image process: `dl_image_process`. Color conversion: `dl_image_color`. Image preprocessor: `dl_image_preprocessor`. Image decoding/encoding: `dl_image_jpeg`, `dl_image_bmp`. Draw utility: `dl_image_draw`.
- **detect** Object detection (model inference). Inference: `dl_detect_base`. Post-processors: `dl_detect_yolo11_postprocessor`, `dl_detect_espdet_postprocessor`, `dl_detect_msr_postprocessor`, `dl_detect_mnp_postprocessor`, `dl_detect_pico_postprocessor`. Pose estimation: `dl_pose_yolo11_postprocessor`.

1.2.3 audio

Audio processing modules divided into submodules:

- **common** Common audio utilities. Files: `dl_audio_common.cpp/hpp`, `dl_audio_wav.cpp/hpp`.
- **speech_features** Speech feature extraction. Files: `dl_speech_features.cpp/hpp` (base class), `dl_fbank.cpp/hpp` (Filter Bank), `dl_mfcc.cpp/hpp` (MFCC), `dl_spectrogram.cpp/hpp` (Spectrogram).

1.2.4 fbs_loader (FlatBuffers Loader)

Handles FlatBuffers models:

- **include** Headers: `fbs_loader.hpp`, `fbs_model.hpp`.
- **src** Implementations: `fbs_loader.cpp`.
- **lib/** Pre-compiled libraries for different targets: `esp32/`, `esp32s3/`, `esp32p4/`.
- **espidl.fbs** FlatBuffers schema file.
- **pack_espidl_models.py** Model packing script.

1.2.5 Other Files

- **CMakeLists.txt** Project build configuration.
- **idf_component.yml** Component metadata (name, version, dependencies).
- **README.md** Project documentation and usage.
- **LICENSE** License terms.

GETTING STARTED

2.1 Hardware Requirements

- An ESP32-S3 or ESP32-P4 development board. Recommended: ESP32-S3-EYE or ESP32-P4-Function-EV-Board
- PC (Linux)

Note:

- Some boards currently use Type C connectors. Make sure you use the right cable to connect the board!
 - ESP-DL also supports ESP32, but its operator implementations are written in C, so the execution speed on ESP32 will be significantly slower than on ESP32-S3 or ESP32-P4. If needed, you can manually add compilation configuration files to your project—the function interface calls in ESP-DL remain identical. Note:
 - When quantizing **ESP32** platform models using **ESP-PPQ**, set the target to `c`.
 - When deploying **ESP32** platform models using **ESP-DL**, set the project compilation target to `esp32`.
-

2.2 Software Requirements

2.2.1 ESP-IDF

ESP-DL runs based on ESP-IDF. For detailed instructions on how to get ESP-IDF, see the [ESP-IDF Programming Guide](#).

Note: Please use `release/v5.3` or higher version of [ESP-IDF](#).

2.2.2 ESP-PPQ

ESP-PPQ is a quantization tool based on ppq, and its [source code](#) is fully open-sourced. ESP-PPQ adds Espressif's customized quantizer and exporter based on [PPQ](#), which makes it convenient for users to select quantization rules that match ESP-DL according to different chip selections, and export them to standard model files that can be directly loaded by ESP-DL. ESP-PPQ is compatible with all PPQ APIs and quantization scripts. For more details, please refer to [PPQ documents and videos](#). If you want to quantize your model, you can install esp-ppq using the following method:

Method 1: Install the package using pip

```
pip install torch torchvision torchaudio --index-url https://download.pytorch.org/whl/
↪cpu
pip install esp-ppq
```

Method 2: Install from source with pip to stay synchronized with the master branch

```
git clone https://github.com/espressif/esp-ppq.git
cd esp-ppq
pip install torch torchvision torchaudio --index-url https://download.pytorch.org/whl/
↪cpu
pip install -e .
```

Method 3: Install the package using uv

```
uv pip install "esp-ppq[cpu]" --torch-backend=cpu
# GPU
# uv pip install "esp-ppq[cpu]" --torch-backend=cu124
# AMD GPU
# uv pip install "esp-ppq[cpu]" --torch-backend=rocm6.2
# Intel XPU
# uv pip install "esp-ppq[cpu]" --torch-backend=xpu
```

Method 4: Install from source using uv to stay in sync with the master branch

```
git clone https://github.com/espressif/esp-ppq.git
cd esp-ppq
uv pip install torch torchvision torchaudio --index-url https://download.pytorch.org/
↪whl/cpu
uv pip install -e .
```

Method 5: Use esp-ppq with docker

```
docker build -t esp-ppq:your_tag https://github.com/espressif/esp-ppq.git
```

Note:

- The example code installs the Linux PyTorch CPU version. Please install the appropriate PyTorch version based on your actual needs.
 - If installing the package with uv, simply modify the `--torch-backend` parameter, which will override the PyTorch URLs index configured in the project.
-

2.3 Quick Start

ESP-DL provides some out-of-the-box [examples](#)

2.3.1 Example Compile & Flash

```
idf.py set-target [Soc]
idf.py flash monitor -p [PORT]
```

Replace `[Soc]` with the specific chip, currently supports `esp32s3` and `esp32p4`. The example does not yet include the model and compilation configuration files for `esp32`.

2.3.2 Example Configuration

```
idf.py menuconfig
```

Some examples contain configurable options that can be configured using `idf.py menuconfig` after specifying the chip using `idf.py set-target`.

2.3.3 Trouble shooting

Check ESP-IDF doc

See [ESP-IDF DOC](#)

Erase FLASH & Clear Example

```
idf.py erase-flash -p [PORT]
```

Delete `build/`, `sdkconfig`, `dependencies.lock`, `managed_components/` and try again.

2.4 Model Quantization

First, please refer to [operator_support_state.md](#) to ensure that the operators in your model are supported.

ESP-DL must use the proprietary format `.espd1` for model deployment. Deep learning models need to be quantized and converted to the format before they can be used. ESP-PPQ provides two interfaces, `espd1_quantize_onnx` and `espd1_quantize_torch`, to support ONNX models and PyTorch models to be exported as `.espd1` models. Other deep learning frameworks, such as TensorFlow, PaddlePaddle, etc., need to convert the model to ONNX first. So make sure your model can be converted to ONNX model. For more details, please refer to:

- [How to quantize model](#)
- [How to quantize MobileNetV2](#)
- [How to quantize YOLO11n](#)
- [How to quantize YOLO11n-pose](#)
- [How to quantize streaming model](#)

2.5 Model deployment

ESP-DL provides a series of APIs to quickly load and run models. For more details, see:

- *How to load & test & profile model*
- *How to run model*
- *How to deploy streaming model*

3.1 How to quantize model

ESP-DL must use a proprietary format `.espd1` for model deployment. This is a quantized model format that supports 8-bit (w8a8), 16-bit (w16a16), and mixed-precision (w8a16) quantization. These schemes can be freely combined within a model to preserve accuracy while maximizing inference efficiency. In this tutorial, we will take [quantize_sin_model](#) as an example to show how to use ESP-PPQ to quantize and export a `.espd1` model. The quantization method is Post Training Quantization (PTQ).

- *Preparation*
- *Pre-trained model*
- *Quantize and export `.espd1`*
 - *Quantization schemes (`quant_type`)*
 - *Mixed quantization*
 - *Add test input/output*
 - *Quantized model inference & accuracy evaluation*
- *Advanced Quantization Methods*
 - *Post Training Quantization (PTQ)*
 - *Quantization Aware Training (QAT)*

3.1.1 Preparation

Install ESP_PPQ

3.1.2 Pre-trained model

```
python sin_model.py
```

Run `sin_model.py`. This script trains a simple Pytorch model to fit the sin function in the range $[0, 2\pi]$. After training, the corresponding .pth weights will be saved and the ONNX model will be exported.

Note: ESP-PPQ provides two interfaces, `espdL_quantize_onnx` and `espdL_quantize_torch`, to support ONNX models and PyTorch models. Other deep learning frameworks, such as TensorFlow, PaddlePaddle, etc., need to be converted to ONNX first.

- Convert TensorFlow to ONNX `tf2onnx`
- Convert TFLite to ONNX `tf2onnx`
- Convert TFLite to TensorFlow `tf2onnx`
- Convert PaddlePaddle to ONNX `paddle2onnx`

3.1.3 Quantize and export .espdL

Reference `quantize_torch_model.py` and `quantize_onnx_model.py`, learn how to use the `espdL_quantize_onnx` and `espdL_quantize_torch` interfaces to quantize and export the .espdL model.

After executing the script, three files will be exported:

- `** .espdL`: ESPDL model binary file, which can be deployed on chip for inference directly, and can be visualized with `Netron`.
- `** .info`: ESPDL model text file, used to debug and determine whether the .espdL model is exported correctly. Contains model structure, quantized model weights, test input/output and other information.
- `** .json`: Quantization information file, used to save and load quantization information.

Quantization schemes (quant_type)

Use the `quant_type` argument of `espdL_quantize_onnx` / `espdL_quantize_torch` to select the quantization scheme:

quant_type	Weights	Activations	Typical use
w8a8 (default)	INT8	INT8	Highest inference speed; default for most models
w16a16	INT16	INT16	Highest accuracy; higher compute and memory cost
w8a16	INT8	INT16	Mixed precision: 8-bit weights with 16-bit activations. Applies to Conv / Gemm / MatMul with static weights (ESP-DL $\geq$ v3.3.11)
none	FP32	FP32	Skip quantization (debug / export only)

```
quant_ppq_graph = espdL_quantize_torch(
    model=model,
    espdL_export_file="sin_model.espdL",
    calib_dataloader=dataloader,
    calib_steps=32,
```

(continues on next page)

(continued from previous page)

```

input_shape=[1, 1],
target="esp32s3",          # "esp32p4", "esp32s31", "esp32s3", or "c"
quant_type="w8a8",         # "w8a8", "w8a16", "w16a16", or "none"
collate_fn=collate_fn,
device="cpu",
error_report=True,
export_test_values=True,
verbose=1,
)

```

Note:

- Prefer `quant_type`. It overrides the legacy `num_of_bits` argument when both are set. `num_of_bits=8` is equivalent to `quant_type="w8a8"`; `num_of_bits=16` is equivalent to `quant_type="w16a16"`.
- `w8a16` is fully supported from ESP-DL v3.3.11. Not every operator has a dedicated `w8a16` kernel: Conv / Gemm / MatMul with static weights use INT8 weights and INT16 activations; depthwise Conv (`group != 1`) and other operators fall back to INT16. See [operator_support_state.md](#).
- `debug=True` enables high-precision INT16 simulation in PPQ. It only affects `w16a16` (legacy alias: `hi_precision=True`).

Mixed quantization

You can mix `w8a8`, `w8a16`, and `w16a16` in the same model. Set a default scheme with `quant_type`, then dispatch selected operators to another scheme through `QuantizationSetting.dispatching_table`:

```

from esp_ppq import QuantizationSettingFactory
from esp_ppq.api import espdl_quantize_onnx, get_target_platform

TARGET = "esp32p4"
quant_setting = QuantizationSettingFactory.espdL_setting()
# Promote accuracy-sensitive layers to mixed precision or full INT16
quant_setting.dispatching_table.append(
    "/features/features.1/conv/conv.0/conv.0.0/Conv",
    get_target_platform(TARGET, quant_type="w8a16"),
)
quant_setting.dispatching_table.append(
    "/features/features.1/conv/conv.0/conv.0.2/Clip",
    get_target_platform(TARGET, quant_type="w16a16"),
)

quant_ppq_graph = espdl_quantize_onnx(
    onnx_import_file="model.onnx",
    espdl_export_file="model.espdL",
    calib_data_loader=data_loader,
    calib_steps=32,
    input_shape=[1, 3, 224, 224],
    target=TARGET,
    quant_type="w8a8",
    setting=quant_setting,
    collate_fn=collate_fn,
    device="cpu",
)

```

`get_target_platform(target, quant_type="w8a8")` is the recommended API. The legacy form `get_target_platform(target, 16)` (or `num_of_bits=16`) still works and maps to `w16a16`.

Configure mixed precision through `setting.dispatching_table`. The `dispatching_override` and `dispatching_method` arguments of `espdL_quantize_*` are deprecated and will be removed in a later version.

Note:

1. The `.espdL` models of different platforms cannot be mixed; inference results will be inaccurate.
 - ESP32 uses a Per-Tensor quantization strategy; the rounding mode is `ROUND_HALF_UP`.
 - When quantizing **ESP32** platform models with **ESP-PPQ**, set the target to `c`, because ESP-DL implements those operators in C.
 - When deploying **ESP32** platform models with **ESP-DL**, set the project build target to `esp32`.
 - ESP32S3 uses a Per-Tensor quantization strategy; the rounding mode is `ROUND_HALF_UP`.
 - On ESP32P4 and ESP32S31, Conv and GEMM use Per-Channel quantization; other operators use Per-Tensor; the rounding mode is `ROUND_HALF_EVEN`.
 2. The quantization strategy currently used by ESP-DL is symmetric quantization + POWER OF TWO.
-

Add test input/output

To verify whether the inference results of the model on the board are correct, you first need to record a set of test input/output on the PC. By turning on the `export_test_values` option in the `api`, a set of test input/output can be saved in the `.espdL` model. One of the `input_shape` and `inputs` parameters must be specified. The `input_shape` parameter uses a random test input, while `inputs` can use a specific test input. The values of the test input/output can be viewed in the `.info` file. Search for `test inputs` value and `test outputs` value to view them.

Quantized model inference & accuracy evaluation

`espdL_quantize_onnx` and `espdL_quantize_torch` APIs will return `BaseGraph`. Use `BaseGraph` to build the corresponding `TorchExecutor` to use the quantized model for inference on the PC side.

```
executor = TorchExecutor(graph=quanted_graph, device=device)
output = executor(input)
```

The output obtained by quantized model inference can be used to calculate various accuracy metrics. Since the board-side `esp-dl` inference result can be aligned with `esp-ppq`, these metrics can be used directly to evaluate the accuracy of the quantized model.

Note:

1. Currently `esp-dl` only supports `batch_size` of 1, and does not support multi-batch or dynamic batch.
 2. The test input/output and the quantized model weights in the `.info` file are all 16-byte aligned. If the length is less than 16 bytes, it will be padded with 0.
-

3.1.4 Advanced Quantization Methods

If the default w8a8 quantization does not meet your accuracy needs, switch the whole model to w8a16 / w16a16, mix schemes as shown in *Mixed quantization*, or use the following methods to further reduce accuracy loss:

Post Training Quantization (PTQ)

- *Mixed quantization (w8a8 / w8a16 / w16a16)*
- *8bit [???]*

Quantization Aware Training (QAT)

- *YOLO11n-pose Quantization-Aware Training*

3.2 Auto Quantization

3.2.1 Quantize Models Automatically with AutoQuant

- *Prerequisites*
- *How to Use AutoQuant*
- *Obtaining Results*
- *Examples*

When deploying models on ESP32 chips, we typically use interfaces such as `espd1_quantize_onnx` to perform model quantization. By providing an ONNX model, calibration data, and a set of quantization settings, you can export a `.espd1` model for deployment.

For custom models, however, the truly difficult part is often not the quantization process itself, but how to choose an appropriate quantization configuration. For example, what bit width to use, which calibration algorithm to choose, whether to enable additional optimization strategies, and how to tune the parameters of those optimization strategies. All of these factors affect the quantization error, and in turn the post-quantization accuracy of the model as well as its inference latency on ESP32 chips.

Therefore, in actual development, finding an appropriate quantization configuration usually requires accumulated experience and repeated experimentation. Developers often need to continually adjust quantization parameters, re-run quantization and testing, and then decide on the next direction to try based on the results. What AutoQuant aims to solve is exactly this kind of repetitive, tedious and experience-dependent tuning process, by automating it.

Below we'll look at how to use AutoQuant to automatically find an appropriate quantization configuration and obtain the quantized model.

Prerequisites

1. *Install ESP_PPQ*

How to Use AutoQuant

AutoQuant is used in a way similar to `espdl_quantize_onnx`: model quantization is also done through an interface call, except that here we use `espdl_auto_quantize_onnx` to launch the automatic search process. As before, you still need to prepare an ONNX model, calibration data, the input shape, and so on.

The main difference between the two is that `espdl_quantize_onnx` performs a single quantization run with a fixed configuration and therefore requires the user to explicitly provide the quantization settings; whereas `espdl_auto_quantize_onnx` is used to automatically search, evaluate and filter across multiple quantization settings — the user only needs to provide search-related settings.

The following code is used as an example for explanation:

```
from esp_ppq.api import AutoQuantSearchSetting, espdl_auto_quantize_onnx

def evaluate_fn(graph):
    # Replace this with your validation logic.
    top1, top5 = ...
    return top1, {"top1": top1, "top5": top5}

setting = AutoQuantSearchSetting(
    search_mode="fast",
    num_of_candidates=5,
    score_direction="maximize",
    run_dir="outputs/auto_quant_mobilenetv2",
)

espdl_auto_quantize_onnx(
    onnx_import_file="model.onnx",
    espdl_export_file="outputs/model.espd1",
    calib_data_loader=calib_loader,
    calib_steps=32,
    input_shape=[3, 224, 224],
    evaluate_fn=evaluate_fn,
    target="esp32p4",
    setting=setting,
    device="cuda",
)
```

In this example, we pass 9 parameters to `espdl_auto_quantize_onnx`:

Parameter	Description
<code>onnx_import_file</code>	Path to the ONNX model
<code>espdl_export_file</code>	Export path of the <code>.espd1</code> model
<code>calib_data_loader</code>	Calibration data
<code>calib_steps</code>	Number of batches used during calibration
<code>input_shape</code>	Model input shape, excluding the batch dimension. For example <code>[3, 224, 224]</code>
<code>evaluate_fn</code>	Optional evaluation function
<code>target</code>	Deployment platform
<code>setting</code>	AutoQuant search settings
<code>device</code>	Runtime device, e.g. "cpu" or "cuda"

Among these, we focus mainly on `evaluate_fn` and `setting`; the other parameters are used in essentially the same way as in `espdn_quantize_onnx`.

`evaluate_fn`

`evaluate_fn` is the evaluation function that AutoQuant uses to compare the results of different quantization configurations. It is an optional parameter.

- **When this function is provided:** AutoQuant ranks results by the metric returned by `evaluate_fn`, for example `top1` / `top5` for classification models, or `mAP` for detection models.
- **When this function is not provided:** AutoQuant uses the **default evaluation method** described below to rank results.

Default evaluation method: first, `graphwise_error_analyse` is called to compute the graphwise SNR error of model quantization on the calibration data; then the average of the 3 layers with the largest errors is taken as the evaluation result.

If you want to customize `evaluate_fn`, it must meet the following requirements:

- The return value must be a `(score, extras)` tuple.
- `score` must be a finite number; it cannot be `nan`, `inf` or `bool`.
- `extras` must be a dict.
- `extras` must not use the following reserved fields of AutoQuant: `score`, `hash`, `index`, `folder`, `files`, `strategy`, `params`

`setting`

`setting` controls AutoQuant's search behavior. Things such as the search mode, how many candidate results to keep, the path to save experiment results, and whether to continue searching from existing results, are all configured via `AutoQuantSearchSetting`.

The commonly used constructor parameters of `AutoQuantSearchSetting` are as follows:

Parameter	Default	Description
<code>search_mode</code>	"exhaustive"	Search mode. "exhaustive" enumerates all candidate configurations; "fast" performs a quick filtering round first, and then continues to search the more promising configurations.
<code>num_of_candidate</code>	5	The number of candidate models to keep in the end, i.e. the K in Top-K.
<code>score_direction</code>	"maximize"	The direction in which scores are ranked. For metrics like accuracy or mAP, which are better when higher, use "maximize"; for metrics like error or loss, which are better when lower, use "minimize". For example, when <code>evaluate_fn</code> is not provided, "minimize" should be used.
<code>candidate_filter</code>	<code>low_latency_candidate</code>	Top-K candidate filter. By default it favors keeping results with lower deployment cost; if you want to rank strictly by score, set it to <code>None</code> .
<code>run_dir</code>	"outputs/ auto_quant"	Directory where experiment results are saved.
<code>resume</code>	False	Whether to continue searching from an existing <code>run_dir</code> .

If you use the "fast" search mode, you can further configure:

```
setting.top_strategy = 10
setting.early_stop_patience = 3
```

The corresponding attributes are as follows:

Attribute	Default	Description
<code>top_strategy</code>	10	How many strategy groups to keep for further searching after the first filtering round.
<code>early_stop_patience</code>	3	Stop searching after the current strategy has failed to improve for this many consecutive iterations.

What really decides “which quantization strategies and parameters to try” is `setting.strategy_space` and `setting.param_space`:

Field	Description
<code>strategy_space</code>	Controls whether each quantization strategy participates in the search, e.g. whether to try <code>mixed_precision</code> .
<code>param_space</code>	Controls the parameter candidates for each strategy, e.g. calibration algorithm candidates, number of optimization steps, learning rate, etc.

Usually you don’t need to adjust these two fields; if you do need to, you can modify only the parts that need adjusting:

```
setting.strategy_space["mixed_precision"] = [True, False]
setting.param_space["calib_algorithm"]["method"] = ["kl", "mse"]
```

The complete default values can be found in `esp_ppq/autoquant/setting.py`.

Obtaining Results

Each time AutoQuant finishes searching one candidate configuration, it writes the result to `run_dir`. The directory structure is as follows:

```
<run_dir>/
  summary.json
  candidates.json
  0000/
    config.json
    model.espd1
    model.info
    model.json
    model.native
  0001/
  ...
```

Here, `summary.json` records all completed experiments, `candidates.json` records the current Top-K candidates, and each numbered subdirectory stores the configuration and exported model files of one experiment.

With `resume=True` enabled, AutoQuant will read `summary.json` and skip the (strategy, params) combinations that have already been completed. This feature is mainly used for resuming after an interrupted search, and for refining the search.

Examples

ESP-PPQ provides two ready-to-run AutoQuant examples:

```
python -m esp_ppq.samples.AutoQuant.mobilenetv2
python -m esp_ppq.samples.AutoQuant.yolo11n
```

3.2.2 Using the espdl-quantize Skill for Automatic Quantization Tuning

- *What is the espdl-quantize Skill*
- *Dependencies*
- *Skill Repository Path*
- *Installing the espdl-quantize Skill*
 - *Method 1: Using npx (Recommended - Easiest)*
 - *Method 2: Manual Installation*
- *How to Use the espdl-quantize Skill*
 - *Quick Start Examples*
- *Complete Examples*
- *Viewing the Final Output*
 - *final_report.md*
 - *best Directory*
- *Troubleshooting*

This document explains how to use the **espdl-quantize skill** to automatically tune the quantization accuracy of deep learning models. The espdl-quantize is an **online, distribution-aware** Agent skill: it first runs a baseline, then iteratively analyzes layer-wise error distributions and automatically selects the most suitable esp-ppq quantization methods (such as TQT, mixed precision, weight equalization, bias correction, etc.), repeating until accuracy converges or the limit is reached.

You only need to provide the calibration data loading and model evaluation logic; the skill drives the iterative search of `QuantizationSettingFactory.espdL_setting()`.

What is the espdl-quantize Skill

esp-ppq exposes more than a dozen tunable quantization passes (calibration algorithms, layer-wise weight equalization, bias correction, horizontal weight splitting, mixed precision, TQT, LSQ, blockwise reconstruction, etc.), each with 2-6 parameters. Manual trial-and-error is not only time-consuming but also prone to silent degradation due to parameter conflicts.

The espdl-quantize skill transforms the manual loop of “read error report → guess parameters → rerun” into a **structured, distribution-aware automatic search**. Its core capabilities include:

1. **Knowledge Base** — `references/ppq_methods.md` encodes the principles, parameters, applicable scenarios, and anti-patterns of each esp-ppq method.

2. **Decision Playbook** — `references/decision_playbook.md` maps observed patterns to candidate methods based on the input/weight/output distributions of the Top-K worst layers.
3. **Fixed Harness** — `scripts/run_iteration.py` receives your contract module (`user_quant.py`) and a JSON setting, and outputs structured artifacts (metrics, layer-wise error, per-layer stats). The Agent only needs to read the JSON to make the next decision.
4. **Search State Machine** — `scripts/compare_iterations.py` checks tried configurations and tells the Agent what to run next.
5. **Target-Aware Safety Net** — Automatically detects passes that conflict with the target chip's quantization policy:
 - For **POWER_OF_2 targets** (`esp32p4` / `esp32s3` / `c`), the skill automatically skips LSQ: LSQ learns arbitrary scales, which conflicts with the power-of-2 constraint of `POWER_OF_2`, so TQT is used instead (it directly trains `log2_scale`, naturally fitting `POWER_OF_2`).
 - When enabling Layerwise Equalization on **esp32p4**, the skill issues a warning: this mechanism functionally overlaps with the per-channel quantization policy of Conv/Gemm, and `esp-ppq` officially marks it as “Not recommend”. However, experiments show that some MobileNet-family/depthwise-separable networks can still benefit from it, so the skill will still selectively try it.

Dependencies

1. *Install ESP_PPQ*
2. Install the skill's additional dependencies:

In the skill directory (the directory containing `SKILL.md`), run:

```
pip install -r assets/extra_requirements.txt
```

Additional dependencies include: `pandas`, `scipy`, `tqdm`.

Note: The skill runs directly in the current Python interpreter, **no Docker required**.

Skill Repository Path

The `espdL-quantize` skill is located in the `esp-dl` repository at:

```
esp-dl/tools/agents/skills/espdL-quantize/
```

Directory structure:

```
esp-dl/tools/agents/skills/espdL-quantize/
├── SKILL.md                # Skill entry and usage instructions
├── assets/
│   ├── extra_requirements.txt # Additional Python dependencies
│   ├── user_quant_torch_example.py # Torch contract template
│   ├── user_quant_onnx_example.py  # ONNX contract template
│   ├── example_quantize_mobilenetv2/ # MobileNet-V2 complete example
│   └── example_quantize_yolo11n/    # YOLO11n complete example
├── references/
│   ├── contract.md            # Full user contract specification
│   ├── decision_playbook.md   # Distribution-method decision playbook
│   └── ppq_methods.md         # Detailed esp-ppq methods
```

(continues on next page)

(continued from previous page)

```
└─ scripts/
   └─ run_iteration.py           # Single-round iteration harness
   └─ compare_iterations.py      # Iteration comparison and state machine
```

Installing the espdl-quantize Skill

The espdl-quantize skill is agent-directory-agnostic and can be installed under any agent's skills folder. Common installation paths are as follows.

Method 1: Using npx (Recommended - Easiest)

The easiest way to install the skill for OpenCode, Cursor, Claude Code, and other compatible tools is to use npx:

```
npx skills add espressif/esp-dl --skill espdl-quantize
```

Note: npx is a package runner bundled with Node.js (via npm). If you haven't installed Node.js yet, please refer to the [Node.js Installation Guide](#).

After executing the command, the skill will be automatically installed and available in your Coding Agent tool.

Method 2: Manual Installation

If you prefer manual installation, or if Node.js is not installed on your computer, follow the instructions below based on your specific tool:

Cursor Users

Copy the skill directory to Cursor's skills folder (using the user-level skills directory as an example):

```
# Linux / macOS
cp -r esp-dl/tools/agents/skills/espdl-quantize \
  ~/.cursor/skills/espdl-quantize

# Windows (PowerShell)
Copy-Item -Recurse esp-dl\tools\agents\skills\espdl-quantize \
  $env:USERPROFILE\.cursor\skills\espdl-quantize
```

OpenCode Users

Copy the skill directory to OpenCode's skills folder:

```
# Copy to the project's skills directory
cp -r esp-dl/tools/agents/skills/espdl-quantize \
  .opencode/skills/espdl-quantize

# Or copy to the user-level skills directory
```

(continues on next page)

(continued from previous page)

```
cp -r esp-dl/tools/agents/skills/espd-quantize \
    ~/.agents/skills/espd-quantize
```

How to Use the espd-quantize Skill

Before using this skill, you need to prepare a **user contract file** (usually named `user_quant.py`), which includes:

- `QUANT_CONFIG`: Quantization configuration dictionary (model type, input shape, target chip, primary_metric, etc.).
- `create_calib_dataloader()`: Returns a PyTorch DataLoader for calibration.
- `get_torch_model()` or provide `onnx_path`: Returns an eval-mode `nn.Module` (torch model) or ONNX path.
- `evaluate(quant_graph) -> dict`: Receives the PPQ quantized graph and returns a metrics dictionary (must contain the key corresponding to `QUANT_CONFIG["primary_metric"]`).
- (Optional) `evaluate_fast(quant_graph) -> dict`: Used for fast intermediate iteration evaluation.

For the full contract specification, please refer to `references/contract.md` in the skill directory.

Quick Start Examples

The following commands show typical usage. You can copy them directly into your Agent conversation.

Example 1: Basic Quantization Tuning Request

```
// Quantize mobilenet_v2 model
I want to use the espd-quantize skill to quantize the mobilenet_v2 model in example_
↳ quantize_mobilenetv2/user_quant.py. First run a baseline, then iterate 13 rounds_
↳ based on layer-wise error, with the goal of getting top1 as close to 71.878 as_
↳ possible, and even better if it can exceed it.

// Quantize yolo11n model
I want to use the espd-quantize skill to quantize the yolo11n model in example_
↳ quantize_yolo11n/user_quant.py. First run a baseline, then iterate 13 rounds based_
↳ on layer-wise error, with the goal of getting map5095 as close to 39.0 as possible,_
↳ and even better if it can exceed it.
```

Example 2: Additional Iterations

```
// Quantize mobilenet_v2 model
I want to use the espd-quantize skill to quantize the mobilenet_v2 model in example_
↳ quantize_mobilenetv2/user_quant.py. 13 rounds have already been iterated, and I_
↳ want to iterate another 10 rounds, with the goal of getting top1 as close to 71.878_
↳ as possible, and even better if it can exceed it.

// Quantize yolo11n model
I want to use the espd-quantize skill to quantize the yolo11n model in example_
↳ quantize_yolo11n/user_quant.py. 13 rounds have already been iterated, and I want to_
↳ iterate another 10 rounds, with the goal of getting map5095 as close to 39.0 as_
↳ possible, and even better if it can exceed it.
```

After receiving the instruction, the skill automatically executes the following workflow:

1. **Phase 0 — Baseline Evaluation:** Run quantization once using the default `QuantizationSettingFactory.espdL_setting()` to get baseline metrics.
2. **Phase 1 — Error Analysis:** Read `layerwise_error.json`, `layer_stats.json`, `non_computing_hot_ops.json`, `graphwise_jumps.json`, and identify the Top-K worst layers.
3. **Phase 2 — Decision and Configuration Generation:** Select candidate methods according to the decision play-book and generate the next `setting.json`.
4. **Phase 3 — Iteration Execution:** Run `scripts/run_iteration.py` for quantization and evaluate metrics.
5. **Phase 4 — Comparison and Convergence Check:** Use `scripts/compare_iterations.py` to compare historical iterations. If `target_metric` is reached or the iteration limit is hit, stop; otherwise, return to Phase 1.

The results of each iteration are saved in the `outputs/iter_<N>/` directory, containing:

- `metrics.json` — Evaluation metrics of the current iteration.
- `layerwise_error.json` — Isolated error of each layer.
- `layer_stats.json` / `layer_stats_full.json` — Distribution statistics of each layer's tensors.
- `setting.json` — The complete quantization configuration used in this round.
- `model.espdL`, `model.info`, `model.json`, `model.native` — Quantized model files.

Note:

- The target metric in the Agent instruction (e.g., `top1`, `map5095`) must satisfy two consistency requirements: it must match `QUANT_CONFIG["primary_metric"]`, and it must match the key returned by the `evaluate()` function in `user_quant.py`.
 - The Agent must support context compression or auto-summarization; models with larger context windows provide more stable results, such as `deepseek_v4_pro`.
 - During automated search, the skill automatically determines convergence based on the convergence rule (3 consecutive iterations all within 0.1% relative to best). However, the AI Agent may terminate early before reaching the user-specified iteration rounds due to context loss or misjudgment. In this case, simply issue an additional iteration command (e.g., “iterate N more rounds”), and the skill will resume the search from the existing artifacts under `outputs/` without starting over.
-

Complete Examples

The skill directory provides two ready-to-run complete examples for you to reference contract implementation and project structure:

1. MobileNet-V2 Image Classification (Torch)

Relative path: `assets/example_quantize_mobilenetv2/`

Contains:

- `user_quant.py` — Complete Torch model contract implementation (ImageNet calibration and evaluation).
- `datasets/` — Model evaluate function implementation.

2. YOLO11n Object Detection (ONNX)

Relative path: `assets/example_quantize_yolo11n/`

Contains:

- `user_quant.py` — Complete ONNX model contract implementation (COCO calibration and evaluation).
- `yolo11n_eval.py` — Detection task evaluate helper script.

Absolute path examples from the `esp-dl` repository root:

```
# MobileNet-V2 example
cd esp-dl/tools/agents/skills/espdl-quantize/assets/example_quantize_mobilenetv2

# YOLO11n example
cd esp-dl/tools/agents/skills/espdl-quantize/assets/example_quantize_yolo11n
```

Viewing the Final Output

When the skill completes all iterations (or reaches the convergence condition), it generates the following key artifacts in the `outputs/` directory for your review and deployment of the optimal model:

`final_report.md`

`outputs/final_report.md` is the **final summary report** of each quantization tuning session, containing:

- **Summary** — The best iteration round, the best metric value, and the gap to the target.
- **Iteration history** — Complete history table of all iteration rounds, including the method changed in each round, metric changes (delta), outcome (improvement/regression/neutral), and rank.
- **Best setting** — The complete quantization configuration (JSON format) of the best iteration, which can be directly reused.
- **Python snippet** — A `QuantizationSettingFactory.espdL_setting()` configuration code snippet that can be directly copied into your code.
- **Key findings** — The skill's summary of the search process: most effective methods, regressed methods, and remaining error distribution hotspots.
- **Remaining gap** — If the target metric is not reached, the report analyzes the remaining gap and provides follow-up optimization suggestions (e.g., increase data volume, mixed precision, blockwise reconstruction, etc.).

Below is a snippet from a `final_report.md` example of MobileNet-V2 on ESP32-S3:

```
## Summary
- Best iteration: iter_8
- top1: 71.5000 (target_metric=71.8780)
- Other metrics: top5=89.4500

## Iteration history

| iter | method changed | top1 | delta | outcome | rank | affects inference speed | |
|---|---|---|---|---|---|---|---|
| 0 | default espdL_setting() | baseline | 60.5000 | +0.0000 = | baseline | 11 | No |
| 1 | Phase 2: calib=kl × TQT(default) | 71.2250 | +10.7250 ↑ | improvement | 2 | No |
| 2 | Phase 2: calib=mse × TQT(default) | 70.5250 | +10.0250 ↑ | improvement | 10 | No |
↪No |
```

(continues on next page)

(continued from previous page)

```

| 3 | Phase 2: calib=percentile × TQT(default) | 70.9000 | +10.4000 ↑ | improvement |
↪9 | No |
| 8 | Phase 3 lever 3c: Fusion alignment | 71.5000 | +11.0000 ↑ | **best** | **1** |
↪No |

## Best setting
```json
{
 "iteration_id": 8,
 "rationale": "Phase 3 lever 3c: Fusion alignment for elementwise ops...",
 "calib_algorithm": "kl",
 "tgt_optimization": { "enabled": true, "lr": 1e-05, "steps": 500, ... },
 "fusion_alignment": { "align_elementwise_to": "Align to Large" }
}
```

## Key findings
- **Best vs baseline**: +11.0000 (from 60.5000 to 71.5000).
- **Most effective lever**: Phase 3 lever 3c (Fusion alignment) ...
- **Largest regression**: iter_12 (Blockwise reconstruction) ...

```

best Directory

The `outputs/best/` directory saves the **complete artifacts of the best iteration**, facilitating direct deployment or further analysis:

- `model.espd1` — The best quantized model file, ready for esp-dl deployment.
- `metrics.json` — Evaluation metrics of the best iteration.
- `setting.json` — The complete quantization configuration of the best iteration (consistent with the Best setting in `final_report.md`).
- `iteration_index.json` — Metadata pointing to the best iteration.

Below is an example of `metrics.json` for the best iteration:

```

{
  "_primary_key": "top1",
  "_primary_value": 71.5,
  "metric_direction": "max",
  "top1": 71.5,
  "top5": 89.45
}

```

And an example of `setting.json`:

```

{
  "iteration_id": 8,
  "rationale": "Phase 3 lever 3c: Fusion alignment for elementwise ops...",
  "calib_algorithm": "kl",
  "tgt_optimization": { "enabled": true, "lr": 1e-05, "steps": 500, ... },
  "fusion_alignment": { "align_elementwise_to": "Align to Large" }
}

```

Tip: You can directly copy the Python snippet from `final_report.md` into your production code to reproduce the optimal configuration, without manually assembling parameters.

Troubleshooting

ModuleNotFoundError: No module named 'pandas' (or pandas / scipy / tqdm)

The skill's additional dependencies are not installed. Run in the skill directory:

```
pip install -r assets/extra_requirements.txt
```

KeyError: 'primary_metric' or AssertionError: primary_metric=... not in metrics=...

The key set in `QUANT_CONFIG["primary_metric"]` does not match the dict key actually returned by `evaluate()`. Please align both and rerun.

OSError: [Errno 2] No such file or directory: '../user_quant.py'

The skill cannot find the contract file. Confirm that: - Your current working directory contains `user_quant.py`; or - You explicitly specified the correct relative/absolute path in the instruction.

A certain iteration takes extremely long (TQT / LSQ / blockwise reconstruction)

These methods require training, which takes considerable PC time. If you need results urgently, you can ask the skill in the instruction to skip time-consuming passes like TQT/LSQ and prioritize zero-inference-overhead methods like layerwise equalization and bias correction.

LSQ pass was skipped because target policy is POWER_OF_2

Normal behavior. On `POWER_OF_2` targets (all esp-dl chips), LSQ silently degrades, so the skill automatically skips it and uses TQT instead. No action needed.

Layer-wise equalization is not recommended for per-channel weight targets

Warn-only. esp-ppq issues a warning when using layer-wise equalization quantization; this is normal behavior.

SKILL has no response / does not complete all iterations

The Agent may not have triggered the skill correctly, or an error occurred midway without proper feedback. Try:

- Use explicit trigger words: “Use the espdl-quantize skill...”.
- Confirm the skill directory structure is complete and additional dependencies are installed.
- Use a model with stronger instruction-following capability.
- Switch to a model with a larger context window and enable context compression / auto-summarization in your Agent tool.

Accuracy no longer improves after multiple iterations

Check `outputs/iter_<N>/layer_stats.json`. If the `Noise:Signal Power Ratio` of all layers is below 0.05 (5%), it means the quantization error is approaching the noise floor, and the benefit of continuing to tune parameters is limited. At this point, consider:

- Increasing the calibration data volume (`calib_steps`).
- Trying mixed precision to preserve higher bit-width for sensitive layers.
- Checking whether input preprocessing is completely consistent with training.

3.3 How to load & test & profile model

In this tutorial, we will show you how to load, test, profile an espdl model. [example](#)

- *Preparation*
- *Load model from rodata*
- *Load model from partition*
- *Load model from sdcard*
- *Test whether on-board model inference is correct*
- *Profile model memory usage*
- *Profile model inference latency*
- *Combined profiling: profile() method*

3.3.1 Preparation

1. *Install ESP_IDF*
2. *how_to_quantize_model*

3.3.2 Load model from rodata

This method embeds the model file directly into the application's `.rodata` section in FLASH. It's the simplest approach but has the drawback that the model gets re-flashed every time the application code changes.

1. **Add model file in CMakeLists.txt**

To embed the `.espdl` model file into the `.rodata` section, add the following code to your `CMakeLists.txt`. The first few lines should be placed before `idf_component_register()` and the last line after `idf_component_register()`.

```
idf_build_get_property(component_targets __COMPONENT_TARGETS)
if ("__idf_espressif_esp-dl" IN_LIST component_targets)
    idf_component_get_property(espdl_dir espressif_esp-dl COMPONENT_DIR)
elseif ("__idf_esp-dl" IN_LIST component_targets)
    idf_component_get_property(espdl_dir esp-dl COMPONENT_DIR)
endif()
set(cmake_dir ${espdl_dir}/fbs_loader/cmake)
include(${cmake_dir}/utilities.cmake)
set(embed_files your_model_path/model_name.espdl)

idf_component_register(...)

target_add_aligned_binary_data(${COMPONENT_LIB} ${embed_files} BINARY)
```

2. **Load the model in the program**

Include the header file:

```
#include "dl_model_base.hpp"
```

Declare the model symbol and create the model:

```
// The symbol name is composed of three parts: prefix "_binary_", filename "model_
↳ espd1", and suffix "_start"
extern const uint8_t model_espd1[] asm("_binary_model_espd1_start");

// Basic usage - loads model with default parameters
dl::Model *model = new dl::Model((const char *)model_espd1, fbs::MODEL_LOCATION_
↳ IN_FLASH_RODATA);

// Advanced usage with custom parameters:
// - Keep parameters in FLASH (saves PSRAM/internal RAM, but lower performance)
// - Limit internal RAM usage to 0 bytes (use PSRAM first)
// - Use greedy memory manager
// - No encryption key
// - param_copy = false (keep parameters in FLASH)
// dl::Model *model = new dl::Model((const char *)model_espd1,
//                                     fbs::MODEL_LOCATION_IN_FLASH_RODATA,
//                                     0, // max_internal_size
//                                     dl::MEMORY_MANAGER_GREEDY,
//                                     nullptr, // key
//                                     false); // param_copy
```

Note: Performance and Memory Trade-offs:

- **Flashing Time:** When using *Load model from rodata*, the model file is embedded in the application binary and gets re-flashed every time you modify your code. For large models, this increases flashing time. Consider *Load model from partition* or *Load model from sdcard* to avoid this.
- **Memory vs Performance:** The `param_copy` parameter controls whether model parameters are copied from FLASH to faster memory (PSRAM/internal RAM). Setting `param_copy=false` saves RAM but reduces inference performance since FLASH access is slower. Only disable parameter copying if RAM is extremely tight.
- **App Partition Size:** Large models embedded in `.rodata` may require increasing the app partition size in `partition.csv`.

3.3.3 Load model from partition

This method stores the model in a separate FLASH partition, allowing you to update the model independently of the application code.

1. Add model information in `partition.csv`

Create or modify your `partition.csv` file to include a partition for the model. For details on partition tables, refer to the [ESP-IDF partition table documentation](#).

```
# Name, Type, SubType, Offset, Size, Flags
factory, app, factory, 0x010000, 4000K,
model, data, spiffs, , 4000K,
```

- **Name:** Any meaningful name (max 16 characters including null terminator)
- **Type:** `data`

- **SubType:** `spiffs` (required for model storage)
- **Offset:** Leave blank for automatic calculation
- **Size:** Must be larger than the model file size

2. Add model flashing information in `CMakeLists.txt`

```
idf_component_register(...)
set(image_file your_model_path/model_name.espd)
esptool_py_flash_to_partition(flash "model" "${image_file}")
```

The second parameter in `esptool_py_flash_to_partition` must match the `Name` field in `partition.csv`.

3. Load the model in the program

Include the header file:

```
#include "dl_model_base.hpp"
```

Create the model instance:

```
// Basic usage - loads model with default parameters
dl::Model *model = new dl::Model("model", fbs::MODEL_LOCATION_IN_FLASH_PARTITION);

// Advanced usage - keep parameters in FLASH to save RAM
// dl::Model *model = new dl::Model("model",
//                                     fbs::MODEL_LOCATION_IN_FLASH_PARTITION,
//                                     0, // max_internal_size
//                                     dl::MEMORY_MANAGER_GREEDY,
//                                     nullptr, // key
//                                     false); // param_copy
```

The first parameter (partition label) must match the `Name` field in `partition.csv`.

Note: Flashing Optimization: Use `idf.py app-flash` instead of `idf.py flash` to flash only the application partition without re-flashing the model partition. This significantly reduces flashing time during development.

3.3.4 Load model from `sdcard`

This method loads the model from an SD card, which is useful when FLASH space is limited or when you need to update models frequently without re-flashing.

1. Prepare the SD card

- **Format:** The SD card should be formatted as FAT32. If not, it will be automatically formatted when mounted (data will be lost).
- **Backup:** Always backup SD card data before using it with ESP-DL.

2. Mount the SD card

- **Using BSP (Board Support Package):**

Enable `CONFIG_BSP_SD_FORMAT_ON_MOUNT_FAIL` in `menuconfig` to allow automatic formatting.

```
#include "bsp/esp-bsp.h"
ESP_ERROR_CHECK(bsp_sdcard_mount());
```

- **Without BSP:**

Configure the mount options with `format_if_mount_failed = true`.

```
#include "esp_vfs_fat.h"
#include "sdmmc_cmd.h"

esp_vfs_fat_sdmmc_mount_config_t mount_config = {
    .format_if_mount_failed = true,
    .max_files = 5,
    .allocation_unit_size = 16 * 1024
};
// Mount SD card (implementation depends on your hardware)
```

3. Copy model to SD card

Copy your `.espd1` model file to the SD card (e.g., to the root directory as `model.espd1`).

4. Load the model in the program

Include the header file:

```
#include "dl_model_base.hpp"
```

Create the model instance:

```
// Basic usage with BSP
ESP_ERROR_CHECK(bsp_sdcard_mount());
dl::Model *model = new dl::Model("/sdcard/model.espd1", fbs::MODEL_LOCATION_IN_
    ↳SDCARD);

// Or with custom path
// dl::Model *model = new dl::Model("/sdcard/models/my_model.espd1", fbs::MODEL_
    ↳LOCATION_IN_SDCARD);

// Don't forget to unmount when done
// ESP_ERROR_CHECK(bsp_sdcard_unmount());
```

For non-BSP usage, mount the SD card first, then create the model similarly.

Note: Performance Considerations: Loading from SD card is slower than from FLASH because the model data must be copied from the SD card to RAM. However, this method saves FLASH space and allows easy model updates by swapping SD cards.

3.3.5 Test whether on-board model inference is correct

The `test()` method verifies that the model produces correct inference results by comparing them against ground truth values embedded in the model file.

Prerequisites:

- The `.espd1` model must be exported with **test inputs and outputs** enabled in ESP-PPQ (use the `export_test_values` option).
- For deployment, you can export a version without test data to reduce model size.

API: `esp_err_t dl::Model::test()`

Returns: ESP_OK if all tests pass, ESP_FAIL otherwise.

Usage:

```
#include "dl_model_base.hpp"

// After creating the model...
esp_err_t ret = model->test();
if (ret == ESP_OK) {
    ESP_LOGI(TAG, "Model test passed!");
} else {
    ESP_LOGE(TAG, "Model test failed!");
}

// Or using the convenience macro:
ESP_ERROR_CHECK(model->test());
```

How it works:

1. Loads test input tensors embedded in the model
2. Runs inference through all model layers
3. Compares each output against the ground truth values (with tolerance for quantization errors)
4. Reports success or failure for each output

Note for INT16 models: Due to quantization rounding errors, INT16 models allow ± 1 difference in comparison.

3.3.6 Profile model memory usage

The `profile_memory()` method prints a detailed breakdown of memory usage across different memory types (internal RAM, PSRAM, FLASH).

API: `void dl::Model::profile_memory()`

Usage:

```
#include "dl_model_base.hpp"

// After creating and testing the model...
model->profile_memory();
```

Output includes:

| Name | Explanation |
|-------------------------------|--|
| fbs_model
parameter | FlatBuffers model structure (includes model metadata, graph structure, tensor shapes, etc.) Model parameters stored within the FlatBuffers model (sub-item of fbs_model) |
| parameter_copy | Parameters copied from FLASH to faster memory (PSRAM/internal RAM). Only present when param_copy=true (default). Improves inference performance. |
| variable | Memory allocated for model inputs, outputs, and intermediate tensors by the memory manager. |
| others | Miscellaneous memory usage (class member variables, alignment overhead, etc.). Usually very small. |
| total | Total memory usage across all categories. |

Memory types shown: Internal RAM, PSRAM, and FLASH usage for each category.

3.3.7 Profile model inference latency

The `profile_module()` method prints detailed latency information for each module (layer) in the model.

API: `void dl::Model::profile_module(bool sort_module_by_latency = false)`

Parameters: - `sort_module_by_latency`: If `true`, modules are sorted by latency (highest first). If `false` (default), modules are shown in ONNX topological order.

Usage:

```
// Default: topological order
model->profile_module();

// Sorted by latency (highest first)
model->profile_module(true);
```

Output includes: - Module name - Module type (operation type) - Inference latency in microseconds (or cycles if `DL_LOG_LATENCY_UNIT` is enabled) - Total inference latency at the end

3.3.8 Combined profiling: profile() method

The `profile()` method combines `profile_memory()` and `profile_module()` for comprehensive analysis.

API: `void dl::Model::profile(bool sort_module_by_latency = false)`

Usage:

```
// Comprehensive profiling in topological order
model->profile();

// Comprehensive profiling sorted by latency
model->profile(true);
```

This is the most convenient way to get both memory and performance analysis in one call.

3.4 How to run model

In this tutorial, we will introduce the most basic model inference process. [example](#)

- *Preparation*
- *Load model*
- *Get model input/output.*
- *Quantize Input*
 - *Quantize a single value*
 - *Quantize `dl::TensorBase`*
- *Dequantize output*
 - *Dequantize a single value*
 - *Dequantize `dl::TensorBase`*
- *Model Inference*

3.4.1 Preparation

Install ESP_IDF

3.4.2 Load model

How to load model

3.4.3 Get model input/output.

```
std::map<std::string, dl::TensorBase *> model_inputs = model->get_inputs();
dl::TensorBase *model_input = model_inputs.begin()->second;
std::map<std::string, dl::TensorBase *> model_outputs = model->get_outputs();
dl::TensorBase *model_output = model_outputs.begin()->second;
```

You can get the input/output names and the corresponding `dl::TensorBase` with `get_inputs()` and `get_outputs()` api. For more information, see [dl::TensorBase documentation](#).

Note: ESP-DL's memory manager allocates a whole block of memory for each model's input/intermediate result/output. Since they share this memory, when the model is inferencing, the later results will overwrite the previous results. In other words, the data in `model_input` may be overwritten by `model_output` or other intermediate results after the model inference is completed.

3.4.4 Quantize Input

8-bit and 16-bit quantized models accept inputs of type `int8_t` and `int16_t` respectively. `float` inputs must be quantized to the one of them according to `exponent` before being fed into the model. Calculation formula:

$$Q = \text{Clip} \left(\text{Round} \left(\frac{R}{\text{Scale}} \right), \text{MIN}, \text{MAX} \right)$$
$$\text{Scale} = 2^{\text{Exp}}$$

Where:

- R is the floating point number to be quantized.
- Q is the integer value after quantization, which needs to be clipped within the range [MIN, MAX].
- MIN is the minimum integer value, when 8bit, MIN = -128, when 16bit, MIN = -32768.
- MAX is the maximum integer value, when 8bit, MAX = 127, when 16bit, MAX = 32767.

Quantize a single value

```
float input_v = VALUE;
// Note that dl::quantize accepts inverse of scale as the second input, so we use DL_
↪ RESCALE here.
int8_t quant_input_v = dl::quantize<int8_t>(input_v, DL_RESCALE(model_input->
↪ exponent));
```

Quantize `dl::TensorBase`

```
// assume that input_tensor already contains the float input data.
dl::TensorBase *input_tensor;
model_input->assign(input_tensor);
```

3.4.5 Dequantize output

8bit and 16bit quantized model, get `int8_t` and `int16_t` type output respectively. Must be dequantized according to `exponent` to get floating point output. Calculation formula:

$$R' = Q \times \text{Scale}$$

$$\text{Scale} = 2^{\text{Exp}}$$

Where:

- R' is the approximate floating point value recovered after dequantization.
- Q is the integer value after quantization.

Dequantize a single value

```
int8_t quant_output_v = VALUE;
float output_v = dl::dequantize(quant_output_v, DL_SCALE(model_output->exponent));
```

Dequantize `dl::TensorBase`

```
// create a TensorBase filled with 0 of shape [1, 1]
dl::TensorBase *output_tensor = new dl::TensorBase({1, 1}, nullptr, 0, dl::DATA_TYPE_
↳FLOAT);
output_tensor->assign(model_output);
```

3.4.6 Model Inference

See:

- [example](#)
- `void dl::Model::run(runtime_mode_t mode)`
- `void dl::Model::run(TensorBase *input, runtime_mode_t mode)`
- `void dl::Model::run(std::map<std::string, TensorBase*> &user_inputs, runtime_mode_t mode, std::map<std::string, TensorBase*> user_outputs)`

3.5 Creating a New Module (Operator)

This tutorial guides you through the process of creating a new module in the `dl::module` namespace. The `Module` class serves as the base class for all modules, and you can extend this base class to create your custom module.

Note: The interface of modules in ESP-DL should be aligned with ONNX.

3.5.1 Understand the Base Module Class

The base class provides several virtual methods that must be overridden in your derived class.

- **Methods:**
 - `dl::module::Module::Module()`: Constructor to initialize the module.
 - `dl::module::Module::~~Module()`: Destructor to release resources.
 - `dl::module::Module::get_output_shape()`: Calculates the output shape based on the input shape.
 - `dl::module::Module::forward()`: Runs the module, high-level interface.
 - `dl::module::Module::forward_args()`: Runs the module, low-level interface.
 - `dl::module::Module::deserialize()`: Creates a module instance from serialized information.

- `dl::module::Module::print()`: Prints module information.

For more information, please refer to [Module Class Reference](#).

3.5.2 Create a New Module Class

To create a new module, you need to derive a new class from the `Module` base class and override the necessary methods.

Example: Creating a `MyCustomModule` Class

For more examples, please refer to `esp-dl/dl/module`.

```
#include "module.h" // Include the header file where the Module class is defined

namespace dl {
namespace module {

class MyCustomModule : public Module {
public:
    // Constructor
    MyCustomModule(const char *name = "MyCustomModule",
                  module_inplace_t inplace = MODULE_NON_INPLACE,
                  quant_type_t quant_type = QUANT_TYPE_NONE)
        : Module(name, inplace, quant_type) {}

    // Destructor
    virtual ~MyCustomModule() {}

    // Override the get_output_shape method
    std::vector<std::vector<int>>> get_output_shape(std::vector<std::vector<int>>> &
↪input_shapes) override {
        // Implement the logic to calculate the output shape based on input shapes
        std::vector<std::vector<int>>> output_shapes;
        // Example: Assume the output shape is the same as the input shape
        output_shapes.push_back(input_shapes[0]);
        return output_shapes;
    }

    // Override the forward method
    void forward(std::vector<dl::TensorBase*> &tensors, runtime_mode_t mode =_
↪RUNTIME_MODE_AUTO) override {
        // Implement the logic to run the module
        // Example: Perform some operation on the tensors
        for (auto &tensor : tensors) {
            // Perform some operation on each tensor
        }
    }

    // Override the forward_args method
    void forward_args(void *args) override {
        // Implement the low-level interface logic
        // Example: Perform some operation based on the arguments
    }

    // Deserialize module instance by serialization information
    static Module *deserialize(fbs::FbsModel *fbs_model, std::string node_name){
```

(continues on next page)

(continued from previous page)

```

    // Implement the logic to deserialize the module instance
    // The interface should be align with ONNX
}

// Override the print method
void print() override {
    // Print module information
    ESP_LOGI("MyCustomModule", "Module Name: %s, Quant type: %d", name.c_str(),
↳quant_type);
}
};

} // namespace module
} // namespace dl

```

Register MyCustomModule Class

Once you have implemented MyCustomModule Class, register your module in `dl_module_creator` as a globally available module.

```

void register_dl_modules()
{
    if (creators.empty()) {
        ...
        this->register_module("MyCustomModule", MyCustomModule::deserialize);
    }
}

```

3.6 Implement Operators Automatically with AI Agent

This document describes how to install and use the `espd1-operator` skill in various Coding Agent tools (such as Claude, Cursor, OpenCode, etc.) for automated neural network operator implementation in the ESP-DL framework. **The following instructions use Linux environment as an example.**

- *What is espd1-operator skill*
- *Dependencies*
- *Installing/Placing Skill*
- *Quick Start Example*
- *Skill Trigger Usage*
- *Main Functionality Workflow*
- *Troubleshooting*
- *Related Resources*

3.6.1 What is `espd1-operator` skill

`espd1-operator` is an automated development skill for Coding Agents, used to implement, test, and optimize neural network operators in the ESP-DL framework. When you make operator-related requests to a Coding Agent (such as Claude, Cursor, OpenCode, etc.), this skill guides the AI to automatically complete the following tasks:

The Coding Agent will automatically:

1. **Analyze operator requirements** - Parse ONNX operator specifications, determine operator type and data type support
2. **Generate esp-dl C++ code** - Automatically create Module layer and Base layer header/implementation files
3. **Modify esp-ppq quantization config** - Register operator support in the quantization tool, configure layout patterns
4. **Create test cases** - Generate PyTorch/ONNX test models, configure test parameters
5. **Execute build and testing** - Run Docker builds, generate test data, execute hardware tests
6. **Verify result alignment** - Ensure inference results are consistent between esp-dl and esp-ppq

Core Value of the Skill:

- **End-to-end automation** - From requirements to runnable code, the Coding Agent automatically completes all steps
- **Cross-repository coordination** - Simultaneously modifies both esp-dl (C++) and esp-ppq (Python) codebases
- **Follows best practices** - Automatically applies ESP-DL code standards, directory structure, and testing workflows
- **Incremental development** - Supports new operator implementation, data type extension, and other scenarios

Applicable Scenarios:

| Scenario | Example Request |
|------------------------|--|
| Implement new operator | “Implement HardSwish operator with int8 and float32 support” |
| Add data type support | “Add int16 support for Tanh operator” |
| Quantization support | “Add quantization support for Mod” |
| Result alignment | “Verify if LogSoftmax results are consistent between esp-dl and esp-ppq” |

3.6.2 Dependencies

Before using the `espd1-operator` skill, you need to install the following dependencies in advance:

Required Pre-installed Dependencies

| Dependency | Purpose | Installation Command |
|---------------|--------------------------------|--|
| Docker | For build and test environment | Official Installation Guide |
| uv | Python package manager | <code>curl -LsSf https://astral.sh/uv/install.sh sh</code> |
| Git | Version control | <code>apt install git</code> (Ubuntu/Debian) |

Dependencies Handled Automatically by Skill

The following dependencies **do not need manual installation**; the `espdL-operator` skill will handle them automatically during execution:

- **esp-ppq**: Python quantization toolkit - skill automatically installs from source in Docker container
- **Documentation generation scripts**: `gen_ops_markdown.py` and other tools - skill runs automatically
- **Docker image**: `espdL/idf-ppq` image - skill builds automatically (if not exists)
- **ESP-IDF**: Development framework - included in Docker image

Verify Dependency Installation

After installation, verify that the following commands work:

```
# Check Docker
docker --version

# Check uv
uv --version

# Check Git
git --version
```

If all commands output version information normally, the environment is ready to use the skill.

3.6.3 Installing/Placing Skill

Project Structure

First, confirm your project directory structure as follows (`esp_dl_project_1` is the project root directory, the root directory name can be arbitrary). Using `opencode` as an example, the full directory structure is shown below:

```
esp_dl_project_1/      <-- Project root directory (all commands
↳executed here)
├── esp-dl/             # ESP-DL main codebase
│   ├── esp-dl/         # Core library source code (dl/, vision/, audio/,
↳ etc.)
│   ├── examples/       # Example programs
│   ├── test_apps/      # Test applications
│   ├── tools/          # Tool scripts
│   └── ...
├── esp-ppq/            # Quantization tool (same level as esp-dl)
│   ├── esp_ppq/        # Main package source code
│   ├── pyproject.toml  # Project configuration file
│   └── ...
├── .opencode/          # OpenCode configuration (needs to be created)
│   └── skills/espdl-operator/ # skill installation location (points to esp-dl/
↳tools/agents/skills/espdl-operator/)
```

Note: The skill source code is located at `esp-dl/tools/agents/skills/espdl-operator/`. You need to copy or link it to `.opencode/skills/espdl-operator/` (or the corresponding directory for other Agents). The skill files include `SKILL.md` (main file) and `references/` (reference templates and checklists).

Important: Command Execution Location

All commands below must be executed in the project root directory ```esp_dl_project_1/```.

If you are unsure of your current location, first execute:

```
# Check current directory
pwd

# Should output something like: /home/username/workspace/esp_dl_project_1
# or /path/to/esp_dl_project_1

# If not in project root, navigate there first
cd /path/to/esp_dl_project_1
```

Method 1: Use npx (Recommended - Simplest)

The easiest way to install the skill for OpenCode, Cursor, Claude Code, and other compatible tools is using npx:

```
npx skills add espressif/esp-dl --skill espd1-operator
```

Note: npx is the package runner that comes with Node.js (via npm). If you haven't installed Node.js yet, please refer to [Node.js Installation Guide](#) to install it first.

After running the command, the skill will be automatically installed and ready to use in your Coding Agent tool.

Method 2: Manual Installation

If you prefer manual installation or your tool doesn't support npx, follow the instructions below for your specific tool:

Note: The skill installation directory varies by Agent tool. Please choose the appropriate path based on the tool you are using.

OpenCode

Method 1: Copy Files

```
# Ensure you are in the project root directory esp_dl_project_1/
cd /path/to/esp_dl_project_1

# Create .opencode/skills directory
mkdir -p .opencode/skills/espd1-operator

# Copy from esp-dl/tools/agents/skills/espd1-operator to .opencode/skills/espd1-
↪ operator
cp -r esp-dl/tools/agents/skills/espd1-operator/* .opencode/skills/espd1-operator/
```

Method 2: Use Symbolic Link (Recommended for Development, Keeps in Sync)

```
# Ensure you are in the project root directory esp_dl_project_1/
cd /path/to/esp_dl_project_1

# Create .opencode/skills directory
mkdir -p .opencode/skills

# Create symbolic link (using relative path)
# Note: from .opencode/skills/espdl-operator pointing to esp-dl/tools/agents/skills/
# ↳ espdl-operator
ln -s ../../esp-dl/tools/agents/skills/espdl-operator .opencode/skills/espdl-operator

# Verify link is successful
ls -la .opencode/skills/espdl-operator
# Should show SKILL.md and references/ directory
```

After starting OpenCode, the system will automatically load this skill.

Cursor

Method 1: Copy Files

```
# Ensure you are in the project root directory esp_dl_project_1/
cd /path/to/esp_dl_project_1

# Create Cursor skills directory
mkdir -p .cursor/skills/espdl-operator

# Copy skill files
cp -r esp-dl/tools/agents/skills/espdl-operator/* .cursor/skills/espdl-operator/
```

Method 2: Use Symbolic Link

```
# Ensure you are in the project root directory esp_dl_project_1/
cd /path/to/esp_dl_project_1

# Create .cursor/skills directory
mkdir -p .cursor/skills

# Create symbolic link
ln -s ../../esp-dl/tools/agents/skills/espdl-operator .cursor/skills/espdl-operator
```

Claude Desktop (Claude Code)

Method 1: Copy Files

```
# Ensure you are in the project root directory esp_dl_project_1/
cd /path/to/esp_dl_project_1

# Create Claude skills directory
mkdir -p .claude/skills/espdl-operator

# Copy skill files
cp -r esp-dl/tools/agents/skills/espdl-operator/* .claude/skills/espdl-operator/
```

Method 2: Use Symbolic Link

```
# Ensure you are in the project root directory esp_dl_project_1/
cd /path/to/esp_dl_project_1

# Create .claude/skills directory
mkdir -p .claude/skills

# Create symbolic link
ln -s ../../esp-dl/tools/agents/skills/espdl-operator .claude/skills/espdl-operator
```

3.6.4 Quick Start Example

Suppose you want to implement a new operator MyOp:

1. **Ensure skill is installed**

```
ls -la .opencode/skills/espdl-operator/SKILL.md
```

2. **Ask in Agent**

```
"Help me implement a MyOp operator with int8, int16, and float32 support"
```

3. **Agent will automatically**

- Load the skill
- Guide the Coding Agent through 9 phases
- Generate necessary code files
- Run Docker tests

3.6.5 Skill Trigger Usage

After installation, you can trigger the `espdl-operator` skill in the following ways:

Natural Language Trigger

Use the following keywords directly in conversation:

| Chinese Trigger | English Trigger |
|-----------------|------------------------|
| “实现” | “implement operator” |
| “添加” | “add operator” |
| “量化” | “quantization support” |
| “对齐” | “operator alignment” |
| “添加新op” | “add a new op” |

Example Conversations

```
User: "Help me implement a Mod operator"
Agent: [Automatically loads espdl-operator skill and starts guiding]

User: "Add LogSoftmax operator to esp-dl"
Agent: [Automatically loads skill and provides implementation steps]
```

Explicit Invocation

If automatic triggering doesn't work, you can explicitly ask the Agent to use this skill:

```
"Use espdl-operator skill to help me implement Softmax operator"
"Following espdl-operator skill guidance, add int16 support for LogSoftmax"
```

3.6.6 Main Functionality Workflow

This skill guides the Coding Agent through the following main phases:

Phase 1: Research and Classification

- Understand ONNX operator specifications
- Determine operator type (Elementwise, Convolution, Pooling, etc.)
- Determine supported data types (int8, int16, float32)

Phase 2: Implement esp-dl Module Layer

- Create operator module header file (dl_module_<op>.hpp)
- Implement get_output_shape() and forward() methods
- Register operator in dl_module_creator.hpp

Phase 3: Implement esp-dl Base Layer

- Create C reference implementation (dl_base_<op>.hpp/cpp)

Phase 4: esp-ppq Integration

- Register quantization support in EspdlQuantizer.py
- Configure layout pattern in espdl_typedef.py

Phase 5: Configure Test Cases

- Add PyTorch/ONNX test model builders
- Configure test parameters in `op_cfg.toml`

Phase 6: Docker Build and Test

- Generate test cases (int8, int16, float32)
- Build test applications
- Run tests on hardware

Phase 7: SIMD Optimization (Optional)

- This part is not yet supported and will be iteratively improved in the future

Phase 8: Operator Alignment Verification

- Ensure esp-dl and esp-ppq inference results are consistent

Phase 9: Update Documentation

- Run `gen_ops_markdown.py` to update operator support status documentation

3.6.7 Troubleshooting

Skill Not Triggered

- Confirm skill directory is in the correct location (using `opencode` as example: `.opencode/skills/espdl-operator`)
- Try using explicit trigger words: “Use `espdl-operator` skill...”
- Confirm the Agent tool supports skills

Skill Workflow Not Fully Executed

- If some steps were not executed, explicitly invoke the `espdl-operator` skill, for example:

```
# If Docker commands for hardware flashing/testing were not executed, issue the
↪ command in conversation:
Based on espdl-operator skill instructions, perform hardware flashing and testing,
↪ hardware is connected
```

Operator Implementation Quality Not Ideal

The role of this skill is to guide the AI to automatically complete operator code writing. Therefore, the final result is affected by two factors:

1. **The AI tool you use** (such as OpenCode, Cursor, Claude, etc.)
2. **The AI model's own coding capabilities** (different models have varying coding skills, comprehension abilities, and tool calling capabilities)

Based on our testing experience, the following combinations work well when implementing C language version operators (due to limited resources, many combinations have not been covered; you can try them yourself):

| Coding Agent Tool | Model Used |
|-------------------|-------------------------------------|
| Cursor | Claude Opus 4.6 |
| OpenCode | Kimi 2.5 + GLM 5 or Claude Opus 4.6 |

If the generated code quality is poor, you can try:

- Switch to a more powerful AI model (such as Claude Opus, GPT-4, etc.)
- Try a Coding Agent tool with better results
- Manually implement following the detailed guidance in SKILL.md

Docker Issues

```
# Check if Docker is running
docker ps

# Rebuild image
cd esp-dl/tools/agents/skills/espdl-operator/assets/docker
docker build -t espdl/idf-ppq:latest .
```

Permission Issues

```
# Ensure device access permissions (Linux)
sudo usermod -a -G dialout $USER
# Log out and back in for changes to take effect
```

3.6.8 Related Resources

- **SKILL.md:** esp-dl/tools/agents/skills/espdl-operator/SKILL.md - Complete development guide
- **Templates:** esp-dl/tools/agents/skills/espdl-operator/references/esp-dl-templates.md
- **Checklist:** esp-dl/tools/agents/skills/espdl-operator/references/esp-ppq-checklist.md
- **esp-dl:** esp-dl/ - esp-dl main codebase
- **esp-ppq:** esp-ppq/ - esp-ppq quantization tool (same level directory as esp-dl)

3.7 How to deploy MobileNetV2

In this tutorial, we will introduce how to quantize a pre-trained MobileNetV2 model using ESP-PPQ and deploy the quantized MobileNetV2 model using ESP-DL.

- *Preparation*
- *Model quantization*
 - *Pre-trained model*
 - *Calibration dataset*
 - *8bit Post-Training Quantization*
- *Model deployment*
 - *Image classification base class*
 - *Pre-process*
 - *Post-process*

3.7.1 Preparation

1. *Install ESP_IDF*
2. *Install ESP_PPQ*

3.7.2 Model quantization

Note:

- **ESP32P4: Per-channel** quantization is used for Conv and Gemm weights; other operators stay **per-tensor**.
- **ESP32S3 and other chips:** due to ISA limits, all operators use **per-tensor** quantization.

Per-channel quantization usually preserves more detail than **per-tensor**, so the same model often quantizes better on ESP32P4 than on ESP32S3.

Quantization script

Pre-trained model

Load the pre-trained model of MobileNet_v2 from torchvision. You can also download it from [ONNX models](#) or [TensorFlow models](#):

```
import torchvision
from torchvision.models.mobilenetv2 import MobileNet_V2_Weights

model = torchvision.models.mobilenet.mobilenet_v2(weights=MobileNet_V2_Weights.
↪ IMAGENET1K_V1)
```

Calibration dataset

The calibration dataset needs to be consistent with your model input format. The calibration dataset needs to cover all possible situations of your model input as much as possible to better quantize the model. Here we take the ImageNet dataset as an example to demonstrate how to prepare the calibration dataset.

Use torchvision to load the ImageNet dataset:

```
import torchvision.datasets as datasets
from torch.utils.data.dataset import Subset
dataset = datasets.ImageFolder(
    CALIB_DIR,
    transforms.Compose(
        [
            transforms.Resize(256),
            transforms.CenterCrop(224),
            transforms.ToTensor(),
            transforms.Normalize(
                mean=[0.485, 0.456, 0.406], std=[0.229, 0.224, 0.225]
            ),
        ]
    ),
)
dataset = Subset(dataset, indices=[_ for _ in range(0, 1024)])
dataloader = DataLoader(
    dataset=dataset,
    batch_size=BATCH_SIZE,
    shuffle=False,
    num_workers=4,
    pin_memory=False,
    collate_fn=collate_fn1,
)
```

8bit Post-Training Quantization

ESP32-P4 Quantization settings

```
# default: Replace ReLU6 with ReLU.

quant_setting = QuantizationSettingFactory.espdsl_setting()
quant_setting.quantize_activation_setting.calib_algorithm = 'kl'

quant_setting.equalization = True
quant_setting.equalization_setting.iterations = 4
quant_setting.equalization_setting.value_threshold = 0.1
quant_setting.equalization_setting.opt_level = 2
quant_setting.equalization_setting.interested_layers = None

quant_setting.tqt_optimization = True
tqt_setting = quant_setting.tqt_optimization_setting
tqt_setting.lr = 5e-5
tqt_setting.steps = 800
tqt_setting.block_size = 4
tqt_setting.is_scale_trainable = True
tqt_setting.gamma = 0.0
tqt_setting.int_lambda = 0.0
tqt_setting.collecting_device = 'cuda'
```

ESP32-P4 Quantization error

Analysing Graphwise Quantization Error(Phrase 1):: 100

↪ % |

↪ 8/8 [00:03<00:00, 2.45it/s]

Analysing Graphwise Quantization Error(Phrase 2):: 100

↪ % |

↪ 8/8 [00:07<00:00, 1.13it/s]

| Layer | NOISE:SIGNAL POWER RATIO |
|--|--------------------------|
| /features/features.17/conv/conv.0/conv.0.0/Conv: | 16.879% |
| /features/features.16/conv/conv.2/Conv: | 15.993% |
| /features/features.15/conv/conv.2/Conv: | 11.915% |
| /features/features.1/conv/conv.1/Conv: | 10.603% |
| /features/features.17/conv/conv.2/Conv: | 10.027% |
| /features/features.14/conv/conv.2/Conv: | 9.947% |
| /features/features.18/features.18.0/Conv: | 9.698% |
| /features/features.6/conv/conv.2/Conv: | 8.669% |
| /features/features.13/conv/conv.2/Conv: | 8.486% |
| /features/features.12/conv/conv.2/Conv: | 7.475% |
| /features/features.16/conv/conv.0/conv.0.0/Conv: | 7.409% |
| /features/features.3/conv/conv.2/Conv: | 7.102% |
| /features/features.5/conv/conv.2/Conv: | 6.808% |
| /features/features.16/conv/conv.1/conv.1.0/Conv: | 6.629% |
| /features/features.10/conv/conv.2/Conv: | 6.346% |
| /features/features.15/conv/conv.1/conv.1.0/Conv: | 6.103% |
| /features/features.15/conv/conv.0/conv.0.0/Conv: | 5.871% |
| /features/features.11/conv/conv.2/Conv: | 5.859% |
| /features/features.9/conv/conv.2/Conv: | 5.553% |
| /features/features.4/conv/conv.2/Conv: | 4.576% |
| /features/features.7/conv/conv.2/Conv: | 4.275% |
| /features/features.14/conv/conv.1/conv.1.0/Conv: | 3.975% |
| /features/features.2/conv/conv.2/Conv: | 3.867% |
| /features/features.14/conv/conv.0/conv.0.0/Conv: | 3.843% |
| /features/features.8/conv/conv.2/Conv: | 3.688% |
| /features/features.2/conv/conv.1/conv.1.0/Conv: | 3.620% |
| /features/features.5/conv/conv.1/conv.1.0/Conv: | 3.545% |
| /features/features.13/conv/conv.1/conv.1.0/Conv: | 3.508% |
| /features/features.12/conv/conv.1/conv.1.0/Conv: | 3.423% |
| /features/features.13/conv/conv.0/conv.0.0/Conv: | 3.422% |
| /features/features.6/conv/conv.1/conv.1.0/Conv: | 3.398% |
| /features/features.3/conv/conv.1/conv.1.0/Conv: | 3.311% |
| /features/features.10/conv/conv.1/conv.1.0/Conv: | 3.184% |
| /features/features.2/conv/conv.0/conv.0.0/Conv: | 2.923% |
| /features/features.11/conv/conv.1/conv.1.0/Conv: | 2.919% |
| /features/features.9/conv/conv.1/conv.1.0/Conv: | 2.899% |
| /features/features.8/conv/conv.1/conv.1.0/Conv: | 2.801% |
| /features/features.7/conv/conv.0/conv.0.0/Conv: | 2.687% |
| /features/features.4/conv/conv.0/conv.0.0/Conv: | 2.534% |
| /features/features.12/conv/conv.0/conv.0.0/Conv: | 2.532% |
| /features/features.10/conv/conv.0/conv.0.0/Conv: | 2.404% |
| /classifier/classifier.1/Gemm: | 2.323% |
| /features/features.11/conv/conv.0/conv.0.0/Conv: | 2.314% |
| /features/features.17/conv/conv.1/conv.1.0/Conv: | 2.218% |
| /features/features.1/conv/conv.0/conv.0.0/Conv: | 2.154% |
| /features/features.4/conv/conv.1/conv.1.0/Conv: | 2.094% |
| /features/features.6/conv/conv.0/conv.0.0/Conv: | 1.591% |
| /features/features.7/conv/conv.1/conv.1.0/Conv: | 1.313% |
| /features/features.9/conv/conv.0/conv.0.0/Conv: | 1.147% |

(continues on next page)

(continued from previous page)

```

/features/features.8/conv/conv.0/conv.0.0/Conv: | ■ | 1.126%
/features/features.5/conv/conv.0/conv.0.0/Conv: | ■ | 0.995%
/features/features.3/conv/conv.0/conv.0.0/Conv: | ■ | 0.810%
/features/features.0/features.0.0/Conv: | | 0.109%
Analysing Layerwise quantization error:: 100
↳%| ████████████████████████████████████████████████████████████████████████████
↳53/53 [05:01<00:00, 5.69s/it]
Layer | NOISE:SIGNAL POWER RATIO
/features/features.1/conv/conv.0/conv.0.0/Conv: | ████████████████████████████████████████████████████████████████████████████ | 27.681%
/features/features.1/conv/conv.1/Conv: | ████████████████████████████████████████████████████████████████████████████ | 26.101%
/features/features.0/features.0.0/Conv: | ■ | 1.908%
/features/features.14/conv/conv.2/Conv: | ■ | 1.741%
/features/features.2/conv/conv.1/conv.1.0/Conv: | ■ | 1.665%
/features/features.3/conv/conv.1/conv.1.0/Conv: | ■ | 1.123%
/features/features.16/conv/conv.2/Conv: | ■ | 0.902%
/features/features.3/conv/conv.2/Conv: | ■ | 0.872%
/features/features.2/conv/conv.2/Conv: | ■ | 0.806%
/features/features.2/conv/conv.0/conv.0.0/Conv: | ■ | 0.735%
/features/features.17/conv/conv.0/conv.0.0/Conv: | | 0.529%
/features/features.14/conv/conv.1/conv.1.0/Conv: | | 0.510%
/features/features.15/conv/conv.2/Conv: | | 0.409%
/features/features.4/conv/conv.2/Conv: | | 0.352%
/features/features.14/conv/conv.0/conv.0.0/Conv: | | 0.340%
/features/features.4/conv/conv.0/conv.0.0/Conv: | | 0.339%
/features/features.3/conv/conv.0/conv.0.0/Conv: | | 0.333%
/classifier/classifier.1/Gemm: | | 0.295%
/features/features.17/conv/conv.2/Conv: | | 0.244%
/features/features.15/conv/conv.0/conv.0.0/Conv: | | 0.231%
/features/features.16/conv/conv.0/conv.0.0/Conv: | | 0.214%
/features/features.7/conv/conv.2/Conv: | | 0.211%
/features/features.15/conv/conv.1/conv.1.0/Conv: | | 0.206%
/features/features.4/conv/conv.1/conv.1.0/Conv: | | 0.194%
/features/features.13/conv/conv.2/Conv: | | 0.179%
/features/features.11/conv/conv.2/Conv: | | 0.160%
/features/features.7/conv/conv.0/conv.0.0/Conv: | | 0.137%
/features/features.18/features.18.0/Conv: | | 0.134%
/features/features.13/conv/conv.0/conv.0.0/Conv: | | 0.131%
/features/features.6/conv/conv.2/Conv: | | 0.122%
/features/features.11/conv/conv.1/conv.1.0/Conv: | | 0.106%
/features/features.5/conv/conv.2/Conv: | | 0.103%
/features/features.16/conv/conv.1/conv.1.0/Conv: | | 0.098%
/features/features.11/conv/conv.0/conv.0.0/Conv: | | 0.090%
/features/features.10/conv/conv.2/Conv: | | 0.083%
/features/features.12/conv/conv.2/Conv: | | 0.080%
/features/features.8/conv/conv.2/Conv: | | 0.072%
/features/features.5/conv/conv.1/conv.1.0/Conv: | | 0.070%
/features/features.8/conv/conv.1/conv.1.0/Conv: | | 0.069%
/features/features.6/conv/conv.1/conv.1.0/Conv: | | 0.067%
/features/features.5/conv/conv.0/conv.0.0/Conv: | | 0.052%
/features/features.12/conv/conv.0/conv.0.0/Conv: | | 0.049%
/features/features.10/conv/conv.0/conv.0.0/Conv: | | 0.044%
/features/features.13/conv/conv.1/conv.1.0/Conv: | | 0.036%
/features/features.7/conv/conv.1/conv.1.0/Conv: | | 0.033%
/features/features.9/conv/conv.2/Conv: | | 0.029%
/features/features.6/conv/conv.0/conv.0.0/Conv: | | 0.029%
/features/features.8/conv/conv.0/conv.0.0/Conv: | | 0.024%
/features/features.10/conv/conv.1/conv.1.0/Conv: | | 0.024%
```

(continues on next page)

(continued from previous page)

| | | |
|--|--|--------|
| /features/features.12/conv/conv.1/conv.1.0/Conv: | | 0.023% |
| /features/features.9/conv/conv.0/conv.0.0/Conv: | | 0.019% |
| /features/features.17/conv/conv.1/conv.1.0/Conv: | | 0.019% |
| /features/features.9/conv/conv.1/conv.1.0/Conv: | | 0.016% |

```
* Prec@1 70.441 Prec@5 89.353
```

ESP32-P4 Quantization results

Experimental results show that when PTQ quantization is applied on ESP32P4, the quantized model achieves a Prec@1 of 70.441%, which is close to the floating-point model accuracy of 71.878%.

ESP32-S3 Quantization settings

```
# default: Replace ReLU6 with ReLU.

quant_setting = QuantizationSettingFactory.espdml_setting()
quant_setting.quantize_activation_setting.calib_algorithm = 'kl'

quant_setting.equalization = True
quant_setting.equalization_setting.iterations = 4
quant_setting.equalization_setting.value_threshold = 0.1
quant_setting.equalization_setting.opt_level = 2
quant_setting.equalization_setting.interested_layers = None

quant_setting.tqt_optimization = True
tqt_setting = quant_setting.tqt_optimization_setting
tqt_setting.lr = 1e-5
tqt_setting.steps = 1000
tqt_setting.block_size = 4
tqt_setting.is_scale_trainable = True
tqt_setting.gamma = 0.0
tqt_setting.int_lambda = 0.0
tqt_setting.collecting_device = 'cuda'
```

ESP32-S3 Quantization error

[illegible]

(continues on next page)

(continued from previous page)

| | | |
|--|------------|--------|
| /features/features.10/conv/conv.2/Conv: | ██████████ | 7.459% |
| /features/features.15/conv/conv.0/conv.0.0/Conv: | ██████████ | 7.418% |
| /features/features.5/conv/conv.2/Conv: | ██████████ | 6.852% |
| /features/features.15/conv/conv.1/conv.1.0/Conv: | ██████████ | 6.680% |
| /features/features.11/conv/conv.2/Conv: | ██████████ | 6.381% |
| /features/features.9/conv/conv.2/Conv: | ██████████ | 5.971% |
| /features/features.14/conv/conv.1/conv.1.0/Conv: | ██████████ | 5.716% |
| /features/features.14/conv/conv.0/conv.0.0/Conv: | ██████████ | 5.159% |
| /features/features.4/conv/conv.2/Conv: | ██████████ | 5.090% |
| /features/features.7/conv/conv.2/Conv: | ██████████ | 4.734% |
| /features/features.2/conv/conv.2/Conv: | ██████████ | 4.244% |
| /features/features.8/conv/conv.2/Conv: | ██████████ | 4.103% |
| /features/features.2/conv/conv.1/conv.1.0/Conv: | ██████████ | 4.070% |
| /features/features.12/conv/conv.1/conv.1.0/Conv: | ██████████ | 3.780% |
| /features/features.13/conv/conv.1/conv.1.0/Conv: | ██████████ | 3.755% |
| /features/features.5/conv/conv.1/conv.1.0/Conv: | ██████████ | 3.752% |
| /features/features.13/conv/conv.0/conv.0.0/Conv: | ██████████ | 3.726% |
| /features/features.2/conv/conv.0/conv.0.0/Conv: | ██████████ | 3.653% |
| /features/features.6/conv/conv.1/conv.1.0/Conv: | ██████████ | 3.541% |
| /classifier/classifier.1/Gemm: | ██████████ | 3.391% |
| /features/features.10/conv/conv.1/conv.1.0/Conv: | ██████████ | 3.327% |
| /features/features.3/conv/conv.1/conv.1.0/Conv: | ██████████ | 3.197% |
| /features/features.11/conv/conv.1/conv.1.0/Conv: | ██████████ | 3.168% |
| /features/features.8/conv/conv.1/conv.1.0/Conv: | ██████████ | 3.083% |
| /features/features.9/conv/conv.1/conv.1.0/Conv: | ██████████ | 3.063% |
| /features/features.7/conv/conv.0/conv.0.0/Conv: | ██████████ | 2.819% |
| /features/features.12/conv/conv.0/conv.0.0/Conv: | ██████████ | 2.757% |
| /features/features.4/conv/conv.0/conv.0.0/Conv: | ██████████ | 2.656% |
| /features/features.11/conv/conv.0/conv.0.0/Conv: | ██████████ | 2.573% |
| /features/features.10/conv/conv.0/conv.0.0/Conv: | ██████████ | 2.570% |
| /features/features.17/conv/conv.1/conv.1.0/Conv: | ██████████ | 2.513% |
| /features/features.4/conv/conv.1/conv.1.0/Conv: | ██████████ | 2.172% |
| /features/features.6/conv/conv.0/conv.0.0/Conv: | ██████████ | 1.688% |
| /features/features.7/conv/conv.1/conv.1.0/Conv: | ██████████ | 1.399% |
| /features/features.9/conv/conv.0/conv.0.0/Conv: | ██████████ | 1.272% |
| /features/features.8/conv/conv.0/conv.0.0/Conv: | ██████████ | 1.250% |
| /features/features.5/conv/conv.0/conv.0.0/Conv: | ██████████ | 1.083% |
| /features/features.3/conv/conv.0/conv.0.0/Conv: | ██████████ | 0.813% |
| /features/features.1/conv/conv.0/conv.0.0/Conv: | ██████████ | 0.763% |
| /features/features.0/features.0.0/Conv: | ██████████ | 0.049% |
| Analysing Laverwise quantization error:: 100 | | |

```
→ % | ██████████  
→ 53/53 [04:31<00:00, 5.11s/it]
```

| Layer | NOISE:SIGNAL POWER RATIO |
|--|--------------------------|
| /features/features.1/conv/conv.0/conv.0.0/Conv: | 10.635% |
| /features/features.1/conv/conv.1/Conv: | 9.070% |
| /features/features.14/conv/conv.2/Conv: | 1.356% |
| /features/features.0/features.0.0/Conv: | 1.057% |
| /features/features.17/conv/conv.0/conv.0.0/Conv: | 0.905% |
| /features/features.3/conv/conv.1/conv.1.0/Conv: | 0.649% |
| /features/features.17/conv/conv.2/Conv: | 0.631% |
| /features/features.2/conv/conv.2/Conv: | 0.605% |
| /features/features.16/conv/conv.2/Conv: | 0.572% |
| /features/features.3/conv/conv.2/Conv: | 0.529% |
| /features/features.2/conv/conv.1/conv.1.0/Conv: | 0.505% |
| /features/features.14/conv/conv.1/conv.1.0/Conv: | 0.285% |
| /features/features.2/conv/conv.0/conv.0.0/Conv: | 0.284% |

(continues on next page)

(continued from previous page)

| | | |
|--|---|--------|
| /features/features.4/conv/conv.2/Conv: | ■ | 0.277% |
| /features/features.14/conv/conv.0/conv.0.0/Conv: | | 0.244% |
| /features/features.15/conv/conv.2/Conv: | | 0.242% |
| /features/features.4/conv/conv.0/conv.0.0/Conv: | | 0.235% |
| /features/features.16/conv/conv.0/conv.0.0/Conv: | | 0.147% |
| /features/features.7/conv/conv.2/Conv: | | 0.133% |
| /features/features.11/conv/conv.2/Conv: | | 0.126% |
| /features/features.7/conv/conv.0/conv.0.0/Conv: | | 0.105% |
| /classifier/classifier.1/Gemm: | | 0.104% |
| /features/features.12/conv/conv.2/Conv: | | 0.102% |
| /features/features.3/conv/conv.0/conv.0.0/Conv: | | 0.100% |
| /features/features.16/conv/conv.1/conv.1.0/Conv: | | 0.099% |
| /features/features.15/conv/conv.1/conv.1.0/Conv: | | 0.091% |
| /features/features.15/conv/conv.0/conv.0.0/Conv: | | 0.090% |
| /features/features.4/conv/conv.1/conv.1.0/Conv: | | 0.079% |
| /features/features.5/conv/conv.2/Conv: | | 0.079% |
| /features/features.13/conv/conv.2/Conv: | | 0.072% |
| /features/features.11/conv/conv.1/conv.1.0/Conv: | | 0.068% |
| /features/features.5/conv/conv.1/conv.1.0/Conv: | | 0.064% |
| /features/features.11/conv/conv.0/conv.0.0/Conv: | | 0.062% |
| /features/features.13/conv/conv.0/conv.0.0/Conv: | | 0.061% |
| /features/features.6/conv/conv.2/Conv: | | 0.060% |
| /features/features.10/conv/conv.2/Conv: | | 0.056% |
| /features/features.6/conv/conv.1/conv.1.0/Conv: | | 0.051% |
| /features/features.17/conv/conv.1/conv.1.0/Conv: | | 0.047% |
| /features/features.8/conv/conv.2/Conv: | | 0.040% |
| /features/features.12/conv/conv.0/conv.0.0/Conv: | | 0.040% |
| /features/features.8/conv/conv.1/conv.1.0/Conv: | | 0.039% |
| /features/features.13/conv/conv.1/conv.1.0/Conv: | | 0.038% |
| /features/features.12/conv/conv.1/conv.1.0/Conv: | | 0.034% |
| /features/features.5/conv/conv.0/conv.0.0/Conv: | | 0.033% |
| /features/features.18/features.18.0/Conv: | | 0.029% |
| /features/features.10/conv/conv.0/conv.0.0/Conv: | | 0.025% |
| /features/features.7/conv/conv.1/conv.1.0/Conv: | | 0.023% |
| /features/features.6/conv/conv.0/conv.0.0/Conv: | | 0.022% |
| /features/features.9/conv/conv.2/Conv: | | 0.021% |
| /features/features.10/conv/conv.1/conv.1.0/Conv: | | 0.020% |
| /features/features.8/conv/conv.0/conv.0.0/Conv: | | 0.017% |
| /features/features.9/conv/conv.0/conv.0.0/Conv: | | 0.011% |
| /features/features.9/conv/conv.1/conv.1.0/Conv: | | 0.007% |

* Prec@1 70.543 Prec@5 89.525

ESP32-S3 Quantization results

Experimental results show that when PTQ quantization is applied on ESP32-S3, the quantized model achieves a Prec@1 of 70.543%, which is slightly higher than the quantization accuracy on ESP32-P4.

Note: To further reduce the quantization error, you can try using QAT (Quantization Aware Training). For specific methods, please refer to [PPQ QAT example](#).

3.7.3 Model deployment

Reference example

Image classification base class

- `dl_cls_base.hpp`
- `dl_cls_base.cpp`

Pre-process

`ImagePreprocessor` class contains the common pre-process pipeline, color conversion, crop, resize, normalization, quantize.

- `dl_image_preprocessor.hpp`
- `dl_image_preprocessor.cpp`

Post-process

- `dl_cls_postprocessor.hpp`
- `dl_cls_postprocessor.cpp`
- `imagenet_cls_postprocessor.hpp`
- `imagenet_cls_postprocessor.cpp`

3.8 How to deploy YOLO11n

In this tutorial, we will introduce how to quantize a pre-trained YOLO11n model using ESP-PPQ and deploy the quantized YOLO11n model using ESP-DL.

- *Preparation*
- *Model quantization*
 - *Pre-trained Model*
 - *Calibration Dataset*
 - *8bit Post-Training Quantization*
- *Model deployment*
 - *Object detection base class*
 - *Pre-process*
 - *Post-process*

3.8.1 Preparation

1. *Install ESP_IDF*
2. *Install ESP_PPQ*

3.8.2 Model quantization

Pre-trained Model

You can download pre-trained yolo11n model from [Ultralytics release](#).

Currently, ESP-PPQ supports ONNX, PyTorch, and TensorFlow models. During the quantization process, PyTorch and TensorFlow models are first converted to ONNX models, so the pre-trained yolo11n model needs to be converted to an ONNX model.

Specifically, refer to the script [export_onnx.py](#) to convert the pre-trained yolo11n model to an ONNX model.

In the script, we have overridden the forward method of the Detect class, which offers following advantages:

- **Faster inference.** Compared to the original yolo11n model, operations related to decoding bounding boxes in Detect head are moved from the inference pass to the post-processing phase, resulting in a significant reduction in inference latency. On one hand, operations like `Conv`, `Transpose`, `Slice`, `Split` and `Concat` are time-consuming when applied during inference pass. On the other hand, the inference outputs are first filtered using a score threshold before decoding the boxes in the post-processing pass, which significantly reduces the number of calculations, thereby accelerating the overall inference speed.
- **Lower quantization Error.** The `Concat` and `Add` operators adopt joint quantization in ESP-PPQ. To reduce quantization errors, the box and score are output by separate branches, rather than being concatenated, due to the significant difference in their ranges. Similarly, since the ranges of the two inputs of `Add` and `Sub` differ significantly, the calculations are performed in the post-processing phase to avoid quantization errors.

Calibration Dataset

The calibration dataset needs to match the input format of the model. The calibration dataset should cover all possible input scenarios to better quantize the model. Here, the calibration dataset used in this example is [calib_yolo11n](#).

8bit Post-Training Quantization

ESP32-P4 Quantization settings

The following quantization settings were generated by AutoQuant. To use AutoQuant, please update esp-ppq to the latest version and refer to the [tutorial](#).

```
quant_setting = QuantizationSettingFactory.espd1_setting()
quant_setting.quantize_activation_setting.calib_algorithm = 'percentile'

quant_setting.bias_correct = True
quant_setting.bias_correct_setting.interested_layers = []
quant_setting.bias_correct_setting.block_size = 4
quant_setting.bias_correct_setting.steps = 32

quant_setting.tqt_optimization = True
tqt_setting = quant_setting.tqt_optimization_setting
tqt_setting.lr = 1e-5
```

(continues on next page)

(continued from previous page)

```
tqt_setting.steps = 500
tqt_setting.block_size = 4
tqt_setting.is_scale_trainable = True
tqt_setting.gamma = 0.0
tqt_setting.int_lambda = 0.0
tqt_setting.collecting_device = 'cuda'
```

ESP32-P4 Quantization error

```
Analysing Graphwise Quantization Error(Phrase 2):: 100
```

```
→ % | ██████████  
→ 1/1 [00:00<00:00, 4.59it/s]
```

| Layer | NOISE:SIGNAL POWER RATIO |
|--|--------------------------|
| /model.3/conv/Conv: | 6.440% |
| /model.2/cv2/conv/Conv: | 6.035% |
| /model.2/m.0/cv2/conv/Conv: | 5.410% |
| /model.6/m.0/cv2/conv/Conv: | 5.329% |
| /model.10/m/m.0/attn/proj/conv/Conv: | 5.175% |
| /model.23/cv2.0/cv2.0.1/conv/Conv: | 4.425% |
| /model.4/m.0/cv1/conv/Conv: | 4.371% |
| /model.10/m/m.0/ffn/ffn.1/conv/Conv: | 4.270% |
| /model.4/cv2/conv/Conv: | 4.266% |
| /model.6/cv1/conv/Conv: | 4.050% |
| /model.8/m.0/cv2/conv/Conv: | 3.640% |
| /model.6/m.0/cv3/conv/Conv: | 3.530% |
| /model.5/conv/Conv: | 3.420% |
| /model.4/cv1/conv/Conv: | 3.341% |
| /model.6/cv2/conv/Conv: | 3.242% |
| /model.6/m.0/m/m.0/cv1/conv/Conv: | 3.111% |
| /model.23/cv2.1/cv2.1.1/conv/Conv: | 3.045% |
| /model.2/cv1/conv/Conv: | 2.928% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.1/conv/Conv: | 2.712% |
| /model.8/cv1/conv/Conv: | 2.700% |
| /model.2/m.0/cv1/conv/Conv: | 2.677% |
| /model.1/conv/Conv: | 2.523% |
| /model.23/cv2.1/cv2.1.0/conv/Conv: | 2.514% |
| /model.6/m.0/m/m.0/cv2/conv/Conv: | 2.474% |
| /model.23/cv2.0/cv2.0.0/conv/Conv: | 2.404% |
| /model.6/m.0/m/m.1/cv1/conv/Conv: | 2.325% |
| /model.10/m/m.0/attn/pe/conv/Conv: | 2.323% |
| /model.7/conv/Conv: | 2.322% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.1/conv/Conv: | 2.317% |
| /model.6/m.0/cv1/conv/Conv: | 2.279% |
| /model.4/m.0/cv2/conv/Conv: | 2.273% |
| /model.19/m.0/cv2/conv/Conv: | 2.273% |
| /model.16/m.0/cv2/conv/Conv: | 2.259% |
| /model.16/m.0/cv1/conv/Conv: | 2.122% |
| /model.8/m.0/cv1/conv/Conv: | 2.061% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.1/conv/Conv: | 2.031% |
| /model.13/m.0/cv2/conv/Conv: | 1.982% |
| /model.10/m/m.0/attn/qkv/conv/Conv: | 1.969% |
| /model.10/cv1/conv/Conv: | 1.939% |
| /model.19/cv2/conv/Conv: | 1.879% |
| /model.8/m.0/m/m.0/cv1/conv/Conv: | 1.868% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.1/conv/Conv: | 1.861% |
| /model.8/cv2/conv/Conv: | 1.835% |
| /model.17/conv/Conv: | 1.819% |

(continues on next page)

(continued from previous page)

| | | |
|--|------------|--------|
| /model.19/cv1/conv/Conv: | ██████████ | 1.773% |
| /model.16/cv2/conv/Conv: | ██████████ | 1.750% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.1/conv/Conv: | ██████████ | 1.740% |
| /model.22/m.0/cv2/conv/Conv: | ██████████ | 1.730% |
| /model.19/m.0/cv1/conv/Conv: | ██████████ | 1.706% |
| /model.23/cv2.0/cv2.0.2/Conv: | ██████████ | 1.661% |
| /model.13/cv1/conv/Conv: | ██████████ | 1.635% |
| /model.20/conv/Conv: | ██████████ | 1.635% |
| /model.13/m.0/cv1/conv/Conv: | ██████████ | 1.613% |
| /model.13/cv2/conv/Conv: | ██████████ | 1.594% |
| /model.23/cv2.2/cv2.2.0/conv/Conv: | ██████████ | 1.560% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.1/conv/Conv: | ██████████ | 1.538% |
| /model.6/m.0/m/m.1/cv2/conv/Conv: | ██████████ | 1.513% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.0/conv/Conv: | ██████████ | 1.511% |
| /model.22/cv1/conv/Conv: | ██████████ | 1.456% |
| /model.8/m.0/m/m.0/cv2/conv/Conv: | ██████████ | 1.453% |
| /model.22/cv2/conv/Conv: | ██████████ | 1.384% |
| /model.16/cv1/conv/Conv: | ██████████ | 1.345% |
| /model.8/m.0/m/m.1/cv1/conv/Conv: | ██████████ | 1.336% |
| /model.8/m.0/cv3/conv/Conv: | ██████████ | 1.329% |
| /model.23/cv2.2/cv2.2.1/conv/Conv: | ██████████ | 1.288% |
| /model.10/m/m.0/attn/MatMul: | ██████████ | 1.260% |
| /model.22/m.0/cv3/conv/Conv: | ██████████ | 1.117% |
| /model.10/cv2/conv/Conv: | ██████████ | 1.094% |
| /model.23/cv2.1/cv2.1.2/Conv: | ██████████ | 1.045% |
| /model.22/m.0/m/m.0/cv1/conv/Conv: | ██████████ | 1.025% |
| /model.22/m.0/m/m.0/cv2/conv/Conv: | ██████████ | 0.999% |
| /model.10/m/m.0/attn/MatMul_1: | ██████████ | 0.984% |
| /model.22/m.0/m/m.1/cv2/conv/Conv: | ██████████ | 0.889% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.0/conv/Conv: | ██████████ | 0.864% |
| /model.8/m.0/m/m.1/cv2/conv/Conv: | ██████████ | 0.839% |
| /model.9/cv2/conv/Conv: | ██████████ | 0.800% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.0/conv/Conv: | ██████████ | 0.761% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.0/conv/Conv: | ██████████ | 0.759% |
| /model.22/m.0/cv1/conv/Conv: | ██████████ | 0.750% |
| /model.22/m.0/m/m.1/cv1/conv/Conv: | ██████████ | 0.705% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.0/conv/Conv: | ██████████ | 0.677% |
| /model.10/m/m.0/ffn/ffn.0/conv/Conv: | ██████████ | 0.669% |
| /model.23/cv2.2/cv2.2.2/Conv: | ██████████ | 0.434% |
| /model.9/cv1/conv/Conv: | ██████████ | 0.390% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.0/conv/Conv: | ██████████ | 0.341% |
| /model.0/conv/Conv: | ██████████ | 0.157% |
| /model.23/cv3.2/cv3.2.2/Conv: | ██████████ | 0.079% |
| /model.23/cv3.1/cv3.1.2/Conv: | ██████████ | 0.068% |
| /model.23/cv3.0/cv3.0.2/Conv: | ██████████ | 0.038% |

```
Analysing Layerwise quantization error:: 100
```

→ % | ██████████
→ 89/89 [00:12<00:00, 7.30it/s]

| Layer | NOISE:SIGNAL POWER RATIO |
|-----------------------------|--------------------------|
| /model.1/conv/Conv: | 0.712% |
| /model.0/conv/Conv: | 0.521% |
| /model.3/conv/Conv: | 0.369% |
| /model.2/cv2/conv/Conv: | 0.181% |
| /model.4/m.0/cv1/conv/Conv: | 0.120% |
| /model.2/cv1/conv/Conv: | 0.101% |
| /model.4/m.0/cv2/conv/Conv: | 0.095% |
| /model.2/m.0/cv1/conv/Conv: | 0.071% |

(continues on next page)

(continued from previous page)

| | | |
|--|---|--------|
| /model.4/cv1/conv/Conv: | ■ | 0.069% |
| /model.5/conv/Conv: | ■ | 0.052% |
| /model.4/cv2/conv/Conv: | ■ | 0.045% |
| /model.7/conv/Conv: | ■ | 0.036% |
| /model.10/cv2/conv/Conv: | ■ | 0.029% |
| /model.9/cv2/conv/Conv: | ■ | 0.029% |
| /model.6/cv1/conv/Conv: | ■ | 0.027% |
| /model.2/m.0/cv2/conv/Conv: | ■ | 0.026% |
| /model.13/cv1/conv/Conv: | ■ | 0.024% |
| /model.6/cv2/conv/Conv: | ■ | 0.022% |
| /model.10/cv1/conv/Conv: | ■ | 0.021% |
| /model.10/m/m.0/attn/pe/conv/Conv: | | 0.017% |
| /model.8/cv2/conv/Conv: | | 0.017% |
| /model.16/cv1/conv/Conv: | | 0.016% |
| /model.13/cv2/conv/Conv: | | 0.015% |
| /model.23/cv2.2/cv2.2.0/conv/Conv: | | 0.015% |
| /model.19/m.0/cv1/conv/Conv: | | 0.012% |
| /model.23/cv2.0/cv2.0.0/conv/Conv: | | 0.012% |
| /model.9/cv1/conv/Conv: | | 0.011% |
| /model.16/cv2/conv/Conv: | | 0.011% |
| /model.13/m.0/cv1/conv/Conv: | | 0.010% |
| /model.19/cv2/conv/Conv: | | 0.010% |
| /model.23/cv2.1/cv2.1.0/conv/Conv: | | 0.010% |
| /model.22/m.0/m/m.1/cv1/conv/Conv: | | 0.009% |
| /model.10/m/m.0/attn/proj/conv/Conv: | | 0.009% |
| /model.10/m/m.0/ffn/ffn.0/conv/Conv: | | 0.008% |
| /model.23/cv2.2/cv2.2.1/conv/Conv: | | 0.008% |
| /model.8/cv1/conv/Conv: | | 0.008% |
| /model.22/m.0/cv1/conv/Conv: | | 0.007% |
| /model.19/m.0/cv2/conv/Conv: | | 0.007% |
| /model.19/cv1/conv/Conv: | | 0.007% |
| /model.16/m.0/cv1/conv/Conv: | | 0.006% |
| /model.16/m.0/cv2/conv/Conv: | | 0.006% |
| /model.10/m/m.0/attn/qkv/conv/Conv: | | 0.006% |
| /model.13/m.0/cv2/conv/Conv: | | 0.006% |
| /model.22/cv1/conv/Conv: | | 0.006% |
| /model.23/cv2.2/cv2.2.2/Conv: | | 0.006% |
| /model.23/cv2.0/cv2.0.2/Conv: | | 0.005% |
| /model.22/m.0/m/m.0/cv2/conv/Conv: | | 0.005% |
| /model.8/m.0/cv1/conv/Conv: | | 0.005% |
| /model.23/cv2.1/cv2.1.2/Conv: | | 0.005% |
| /model.6/m.0/m/m.0/cv1/conv/Conv: | | 0.005% |
| /model.6/m.0/m/m.1/cv1/conv/Conv: | | 0.005% |
| /model.8/m.0/m/m.1/cv1/conv/Conv: | | 0.004% |
| /model.8/m.0/m/m.0/cv1/conv/Conv: | | 0.004% |
| /model.6/m.0/m/m.0/cv2/conv/Conv: | | 0.004% |
| /model.20/conv/Conv: | | 0.004% |
| /model.10/m/m.0/ffn/ffn.1/conv/Conv: | | 0.004% |
| /model.22/cv2/conv/Conv: | | 0.004% |
| /model.23/cv2.1/cv2.1.1/conv/Conv: | | 0.004% |
| /model.23/cv2.0/cv2.0.1/conv/Conv: | | 0.004% |
| /model.17/conv/Conv: | | 0.004% |
| /model.8/m.0/m/m.0/cv2/conv/Conv: | | 0.004% |
| /model.6/m.0/cv3/conv/Conv: | | 0.003% |
| /model.6/m.0/cv1/conv/Conv: | | 0.003% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.1/conv/Conv: | | 0.003% |
| /model.22/m.0/m/m.0/cv1/conv/Conv: | | 0.003% |

(continues on next page)

(continued from previous page)

| | | |
|--|--|--------|
| /model.6/m.0/m/m.1/cv2/conv/Conv: | | 0.003% |
| /model.22/m.0/m/m.1/cv2/conv/Conv: | | 0.002% |
| /model.22/m.0/cv3/conv/Conv: | | 0.002% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.1/conv/Conv: | | 0.002% |
| /model.8/m.0/m/m.1/cv2/conv/Conv: | | 0.002% |
| /model.8/m.0/cv3/conv/Conv: | | 0.002% |
| /model.10/m/m.0/attn/MatMul_1: | | 0.002% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.0/conv/Conv: | | 0.001% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.0/conv/Conv: | | 0.001% |
| /model.23/cv3.1/cv3.1.2/Conv: | | 0.001% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.0/conv/Conv: | | 0.001% |
| /model.23/cv3.2/cv3.2.2/Conv: | | 0.001% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.1/conv/Conv: | | 0.001% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.1/conv/Conv: | | 0.001% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.0/conv/Conv: | | 0.001% |
| /model.23/cv3.0/cv3.0.2/Conv: | | 0.001% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.1/conv/Conv: | | 0.000% |
| /model.10/m/m.0/attn/MatMul: | | 0.000% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.0/conv/Conv: | | 0.000% |
| /model.8/m.0/cv2/conv/Conv: | | 0.000% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.0/conv/Conv: | | 0.000% |
| /model.6/m.0/cv2/conv/Conv: | | 0.000% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.1/conv/Conv: | | 0.000% |
| /model.22/m.0/cv2/conv/Conv: | | 0.000% |

ESP32-P4 Quantization results

With the same inputs, The mAP50-95 on COCO val2017 after quantization is 0.373, slightly lower than the float model.

ESP32-S3 Quantization settings

The following quantization settings were generated by AutoQuant. To use AutoQuant, please update esp-ppq to the latest version and refer to the [tutorial](#).

```
quant_setting = QuantizationSettingFactory.espdsl_setting()
quant_setting.quantize_activation_setting.calib_algorithm = 'percentile'

quant_setting.tqt_optimization = True
tqt_setting = quant_setting.tqt_optimization_setting
tqt_setting.lr = 1e-5
tqt_setting.steps = 800
tqt_setting.block_size = 4
tqt_setting.is_scale_trainable = True
tqt_setting.gamma = 0.0
tqt_setting.int_lambda = 0.0
tqt_setting.collecting_device = 'cuda'
```

ESP32-S3 Quantization error

Analysing Graphwise Quantization Error(Phrase 2):: 100

| | |
|--------------------------------------|--------------------------|
| ↪ % | |
| ↪ 1/1 [00:00<00:00, 4.25it/s] | |
| Layer | NOISE:SIGNAL POWER RATIO |
| /model.3/conv/Conv: | 7.039% |
| /model.2/cv2/conv/Conv: | 5.965% |
| /model.10/m/m.0/attn/proj/conv/Conv: | 5.887% |
| /model.2/m.0/cv2/conv/Conv: | 5.726% |
| /model.6/m.0/cv2/conv/Conv: | 5.483% |

(continues on next page)

(continued from previous page)

| | | |
|--|------------|--------|
| /model.4/m.0/cv1/conv/Conv: | ██████████ | 4.815% |
| /model.23/cv2.0/cv2.0.1/conv/Conv: | ██████████ | 4.815% |
| /model.10/m/m.0/ffn/ffn.1/conv/Conv: | ██████████ | 4.569% |
| /model.4/cv2/conv/Conv: | ██████████ | 4.377% |
| /model.6/cv1/conv/Conv: | ██████████ | 4.048% |
| /model.6/m.0/cv3/conv/Conv: | ██████████ | 3.755% |
| /model.8/m.0/cv2/conv/Conv: | ██████████ | 3.517% |
| /model.4/cv1/conv/Conv: | ██████████ | 3.507% |
| /model.5/conv/Conv: | ██████████ | 3.495% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.1/conv/Conv: | ██████████ | 3.472% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.1/conv/Conv: | ██████████ | 3.460% |
| /model.6/cv2/conv/Conv: | ██████████ | 3.369% |
| /model.23/cv2.1/cv2.1.1/conv/Conv: | ██████████ | 3.262% |
| /model.6/m.0/m/m.0/cv1/conv/Conv: | ██████████ | 3.243% |
| /model.2/cv1/conv/Conv: | ██████████ | 2.904% |
| /model.23/cv2.1/cv2.1.0/conv/Conv: | ██████████ | 2.770% |
| /model.8/cv1/conv/Conv: | ██████████ | 2.730% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.1/conv/Conv: | ██████████ | 2.706% |
| /model.10/m/m.0/attn/pe/conv/Conv: | ██████████ | 2.671% |
| /model.23/cv2.0/cv2.0.0/conv/Conv: | ██████████ | 2.626% |
| /model.6/m.0/m/m.0/cv2/conv/Conv: | ██████████ | 2.595% |
| /model.7/conv/Conv: | ██████████ | 2.547% |
| /model.1/conv/Conv: | ██████████ | 2.519% |
| /model.19/m.0/cv2/conv/Conv: | ██████████ | 2.476% |
| /model.6/m.0/m/m.1/cv1/conv/Conv: | ██████████ | 2.471% |
| /model.4/m.0/cv2/conv/Conv: | ██████████ | 2.422% |
| /model.16/m.0/cv2/conv/Conv: | ██████████ | 2.412% |
| /model.6/m.0/cv1/conv/Conv: | ██████████ | 2.371% |
| /model.16/m.0/cv1/conv/Conv: | ██████████ | 2.334% |
| /model.10/m/m.0/attn/qkv/conv/Conv: | ██████████ | 2.159% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.1/conv/Conv: | ██████████ | 2.150% |
| /model.10/cv1/conv/Conv: | ██████████ | 2.135% |
| /model.23/cv2.2/cv2.2.0/conv/Conv: | ██████████ | 2.123% |
| /model.13/m.0/cv2/conv/Conv: | ██████████ | 2.073% |
| /model.22/m.0/cv2/conv/Conv: | ██████████ | 2.059% |
| /model.8/m.0/cv1/conv/Conv: | ██████████ | 2.053% |
| /model.19/cv2/conv/Conv: | ██████████ | 2.049% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.1/conv/Conv: | ██████████ | 2.041% |
| /model.13/cv2/conv/Conv: | ██████████ | 2.027% |
| /model.17/conv/Conv: | ██████████ | 2.001% |
| /model.16/cv2/conv/Conv: | ██████████ | 1.968% |
| /model.8/m.0/m/m.0/cv1/conv/Conv: | ██████████ | 1.916% |
| /model.8/cv2/conv/Conv: | ██████████ | 1.888% |
| /model.23/cv2.0/cv2.0.2/Conv: | ██████████ | 1.870% |
| /model.19/m.0/cv1/conv/Conv: | ██████████ | 1.847% |
| /model.19/cv1/conv/Conv: | ██████████ | 1.846% |
| /model.22/cv1/conv/Conv: | ██████████ | 1.725% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.1/conv/Conv: | ██████████ | 1.716% |
| /model.20/conv/Conv: | ██████████ | 1.710% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.0/conv/Conv: | ██████████ | 1.681% |
| /model.13/cv1/conv/Conv: | ██████████ | 1.669% |
| /model.2/m.0/cv1/conv/Conv: | ██████████ | 1.646% |
| /model.13/m.0/cv1/conv/Conv: | ██████████ | 1.641% |
| /model.6/m.0/m/m.1/cv2/conv/Conv: | ██████████ | 1.639% |
| /model.22/cv2/conv/Conv: | ██████████ | 1.524% |
| /model.8/m.0/m/m.0/cv2/conv/Conv: | ██████████ | 1.489% |
| /model.16/cv1/conv/Conv: | ██████████ | 1.457% |

(continues on next page)

(continued from previous page)

| | | | | |
|--|--|------------|--|--------|
| /model.8/m.0/cv3/conv/Conv: | | ██████████ | | 1.422% |
| /model.10/m/m.0/attn/MatMul: | | ██████████ | | 1.387% |
| /model.8/m.0/m/m.1/cv1/conv/Conv: | | ██████████ | | 1.369% |
| /model.23/cv2.2/cv2.2.1/conv/Conv: | | ██████████ | | 1.275% |
| /model.22/m.0/cv3/conv/Conv: | | ██████████ | | 1.259% |
| /model.10/m/m.0/attn/MatMul_1: | | ██████████ | | 1.195% |
| /model.10/cv2/conv/Conv: | | ██████████ | | 1.190% |
| /model.23/cv2.1/cv2.1.2/Conv: | | ██████████ | | 1.143% |
| /model.9/cv2/conv/Conv: | | ██████████ | | 1.026% |
| /model.22/m.0/m/m.1/cv2/conv/Conv: | | ██████████ | | 0.995% |
| /model.22/m.0/m/m.0/cv2/conv/Conv: | | ██████████ | | 0.994% |
| /model.22/m.0/m/m.0/cv1/conv/Conv: | | ██████████ | | 0.990% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.0/conv/Conv: | | ██████████ | | 0.977% |
| /model.8/m.0/m/m.1/cv2/conv/Conv: | | ██████████ | | 0.966% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.0/conv/Conv: | | ██████████ | | 0.964% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.0/conv/Conv: | | ██████████ | | 0.910% |
| /model.22/m.0/m/m.1/cv1/conv/Conv: | | ██████████ | | 0.768% |
| /model.10/m/m.0/ffn/ffn.0/conv/Conv: | | ██████████ | | 0.763% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.0/conv/Conv: | | ██████████ | | 0.752% |
| /model.22/m.0/cv1/conv/Conv: | | ██████████ | | 0.725% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.0/conv/Conv: | | ██████████ | | 0.564% |
| /model.9/cv1/conv/Conv: | | ██████████ | | 0.381% |
| /model.23/cv2.2/cv2.2.2/Conv: | | ██████████ | | 0.363% |
| /model.0/conv/Conv: | | ██████████ | | 0.172% |
| /model.23/cv3.1/cv3.1.2/Conv: | | ██████████ | | 0.083% |
| /model.23/cv3.2/cv3.2.2/Conv: | | ██████████ | | 0.079% |
| /model.23/cv3.0/cv3.0.2/Conv: | | ██████████ | | 0.047% |

```
Analysing Layerwise quantization error:: 100
```

→ 89/89 [00:12<00:00, 7.40it/s]

| Layer | NOISE:SIGNAL POWER RATIO |
|-----------------------------------|--------------------------|
| /model.0/conv/Conv: | 0.451% |
| /model.1/conv/Conv: | 0.450% |
| /model.3/conv/Conv: | 0.402% |
| /model.2/cv2/conv/Conv: | 0.312% |
| /model.9/cv2/conv/Conv: | 0.222% |
| /model.4/cv2/conv/Conv: | 0.178% |
| /model.10/cv1/conv/Conv: | 0.155% |
| /model.2/cv1/conv/Conv: | 0.145% |
| /model.4/m.0/cv1/conv/Conv: | 0.139% |
| /model.4/cv1/conv/Conv: | 0.137% |
| /model.22/cv1/conv/Conv: | 0.119% |
| /model.5/conv/Conv: | 0.118% |
| /model.16/cv1/conv/Conv: | 0.118% |
| /model.4/m.0/cv2/conv/Conv: | 0.117% |
| /model.22/m.0/cv1/conv/Conv: | 0.104% |
| /model.2/m.0/cv1/conv/Conv: | 0.068% |
| /model.7/conv/Conv: | 0.057% |
| /model.13/cv2/conv/Conv: | 0.053% |
| /model.13/cv1/conv/Conv: | 0.047% |
| /model.16/cv2/conv/Conv: | 0.044% |
| /model.10/cv2/conv/Conv: | 0.043% |
| /model.6/cv2/conv/Conv: | 0.042% |
| /model.19/cv2/conv/Conv: | 0.041% |
| /model.6/cv1/conv/Conv: | 0.039% |
| /model.6/m.0/m/m.1/cv1/conv/Conv: | 0.030% |
| /model.2/m.0/cv2/conv/Conv: | 0.029% |

(continues on next page)

(continued from previous page)

| | | |
|--|---|--------|
| /model.10/m/m.0/attn/qkv/conv/Conv: | █ | 0.029% |
| /model.10/m/m.0/attn/pe/conv/Conv: | █ | 0.027% |
| /model.8/cv2/conv/Conv: | █ | 0.027% |
| /model.19/cv1/conv/Conv: | █ | 0.026% |
| /model.19/m.0/cv1/conv/Conv: | █ | 0.025% |
| /model.22/m.0/m/m.1/cv1/conv/Conv: | █ | 0.025% |
| /model.10/m/m.0/ffn/ffn.0/conv/Conv: | █ | 0.024% |
| /model.23/cv2.1/cv2.1.0/conv/Conv: | █ | 0.023% |
| /model.16/m.0/cv1/conv/Conv: | █ | 0.021% |
| /model.23/cv2.0/cv2.0.0/conv/Conv: | █ | 0.021% |
| /model.13/m.0/cv2/conv/Conv: | █ | 0.020% |
| /model.9/cv1/conv/Conv: | █ | 0.020% |
| /model.23/cv2.2/cv2.2.0/conv/Conv: | █ | 0.019% |
| /model.10/m/m.0/attn/proj/conv/Conv: | █ | 0.018% |
| /model.8/cv1/conv/Conv: | █ | 0.017% |
| /model.16/m.0/cv2/conv/Conv: | █ | 0.017% |
| /model.22/cv2/conv/Conv: | █ | 0.015% |
| /model.13/m.0/cv1/conv/Conv: | █ | 0.014% |
| /model.6/m.0/cv3/conv/Conv: | █ | 0.013% |
| /model.20/conv/Conv: | █ | 0.012% |
| /model.22/m.0/cv3/conv/Conv: | | 0.011% |
| /model.23/cv2.2/cv2.2.1/conv/Conv: | | 0.011% |
| /model.17/conv/Conv: | | 0.011% |
| /model.19/m.0/cv2/conv/Conv: | | 0.010% |
| /model.23/cv2.2/cv2.2.2/Conv: | | 0.010% |
| /model.23/cv2.1/cv2.1.2/Conv: | | 0.009% |
| /model.8/m.0/cv3/conv/Conv: | | 0.009% |
| /model.8/m.0/cv1/conv/Conv: | | 0.009% |
| /model.23/cv2.0/cv2.0.2/Conv: | | 0.009% |
| /model.22/m.0/m/m.0/cv2/conv/Conv: | | 0.008% |
| /model.10/m/m.0/ffn/ffn.1/conv/Conv: | | 0.008% |
| /model.6/m.0/m/m.0/cv2/conv/Conv: | | 0.008% |
| /model.23/cv2.1/cv2.1.1/conv/Conv: | | 0.007% |
| /model.8/m.0/m/m.0/cv1/conv/Conv: | | 0.007% |
| /model.6/m.0/m/m.0/cv1/conv/Conv: | | 0.006% |
| /model.8/m.0/m/m.1/cv1/conv/Conv: | | 0.006% |
| /model.23/cv2.0/cv2.0.1/conv/Conv: | | 0.006% |
| /model.8/m.0/m/m.0/cv2/conv/Conv: | | 0.006% |
| /model.22/m.0/m/m.0/cv1/conv/Conv: | | 0.006% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.0/conv/Conv: | | 0.005% |
| /model.23/cv3.1/cv3.1.2/Conv: | | 0.004% |
| /model.6/m.0/m/m.1/cv2/conv/Conv: | | 0.004% |
| /model.6/m.0/cv1/conv/Conv: | | 0.004% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.1/conv/Conv: | | 0.004% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.1/conv/Conv: | | 0.004% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.1/conv/Conv: | | 0.004% |
| /model.8/m.0/m/m.1/cv2/conv/Conv: | | 0.003% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.1/conv/Conv: | | 0.003% |
| /model.22/m.0/m/m.1/cv2/conv/Conv: | | 0.003% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.0/conv/Conv: | | 0.003% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.0/conv/Conv: | | 0.002% |
| /model.10/m/m.0/attn/MatMul_1: | | 0.002% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.1/conv/Conv: | | 0.001% |
| /model.23/cv3.2/cv3.2.2/Conv: | | 0.001% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.0/conv/Conv: | | 0.001% |
| /model.23/cv3.0/cv3.0.2/Conv: | | 0.001% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.1/conv/Conv: | | 0.001% |

(continues on next page)

(continued from previous page)

| | | |
|--|--|--------|
| /model.23/cv3.2/cv3.2.0/cv3.2.0.0/conv/Conv: | | 0.001% |
| /model.6/m.0/cv2/conv/Conv: | | 0.001% |
| /model.22/m.0/cv2/conv/Conv: | | 0.000% |
| /model.8/m.0/cv2/conv/Conv: | | 0.000% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.0/conv/Conv: | | 0.000% |
| /model.10/m/m.0/attn/MatMul: | | 0.000% |

ESP32-S3 Quantization results

With the same inputs, The mAP50-95 on COCO val2017 after quantization is 0.37, marginally lower than ESP32-P4 quantization results.

Note: If the model inference speed is a higher priority and a certain degree of accuracy loss is acceptable, you may consider quantizing the model with an input size of 320x320 for the YOLO11N model. The model inference speed of different input resolutions can be found in [README.md](#) .

3.8.3 Model deployment

example

Object detection base class

- `dl_detect_base.hpp`
- `dl_detect_base.cpp`

Pre-process

`ImagePreprocessor` class contains the common pre-precoess pipeline, color conversion, crop, resize, normalization, quantize?

- `dl_image_preprocessor.hpp`
- `dl_image_preprocessor.cpp`

Post-process

- `dl_detect_postprocessor.hpp`
- `dl_detect_postprocessor.cpp`
- `dl_detect_yolo11_postprocessor.hpp`
- `dl_detect_yolo11_postprocessor.cpp`

3.9 How to deploy YOLO11n-pose

In this tutorial, we will introduce how to quantize a pre-trained YOLO11n-pose model using ESP-PPQ and deploy the quantized YOLO11n-pose model using ESP-DL.

- *Preparation*
- *Model quantization*
 - *Pre-trained Model*
 - *Calibration Dataset*
 - *8bit Post-Training Quantization*
 - *Quantization-Aware Training*
- *Model deployment*
 - *Object detection base class*
 - *Pre-process*
 - *Post-process*

3.9.1 Preparation

1. [\[?/?\] ESP_IDF](#)
2. [\[?/?\] ESP_PPQ](#)

3.9.2 Model quantization

Pre-trained Model

You can download pre-trained yolo11n-pose model from [Ultralytics release](#).

Currently, ESP-PPQ supports ONNX, PyTorch, and TensorFlow models. During the quantization process, PyTorch and TensorFlow models are first converted to ONNX models, so the pre-trained yolo11n-pose model needs to be converted to an ONNX model.

Specifically, refer to the script [export_onnx.py](#) to convert the pre-trained yolo11n-pose model to an ONNX model.

In the script, we have overridden the forward method of the Pose class, which offers following advantages:

- **Faster inference.** Compared to the original yolo11n-pose model, operations related to decoding bounding boxes and keypoints in Pose head are moved from the inference pass to the post-processing phase, resulting in a significant reduction in inference latency. On one hand, operations like `Conv`, `Transpose`, `Slice`, `Split` and `Concat` are time-consuming when applied during inference pass. On the other hand, the inference outputs are first filtered using a score threshold before decoding the boxes in the post-processing pass, which significantly reduces the number of calculations, thereby accelerating the overall inference speed.
- **Lower quantization Error.** The `Concat` and `Add` operators adopt joint quantization in ESP-PPQ. To reduce quantization errors, the box and score are output by separate branches, rather than being concatenated, due to the significant difference in their ranges. Similarly, since the ranges of the two inputs of `Add` and `Sub` differ significantly, the calculations are performed in the post-processing phase to avoid quantization errors.

Calibration Dataset

The calibration dataset needs to match the input format of the model. The calibration dataset should cover all possible input scenarios to better quantize the model. Here, the calibration dataset used in this example is [calib_yolo11n-pose](#).

8bit Post-Training Quantization

The following quantization settings were generated by AutoQuant. To use AutoQuant, please update esp-ppq to the latest version and refer to the [tutorial](#).

ESP32-P4 Quantization settings

```
quant_setting = QuantizationSettingFactory.espdsl_setting()
quant_setting.quantize_activation_setting.calib_algorithm = 'percentile'

quant_setting.bias_correct = True
quant_setting.bias_correct_setting.interested_layers = []
quant_setting.bias_correct_setting.block_size = 2
quant_setting.bias_correct_setting.steps = 32
```

ESP32-P4 Quantization error

```
Analysing Graphwise Quantization Error(Phrase 1):: 100
```

```
Analysing Graphwise Quantization Error(Phrase 2):: 100
```

| Layer | NOISE:SIGNAL POWER RATIO |
|--|--------------------------|
| /model.22/m.0/cv2/conv/Conv: | 9.927% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.0/conv/Conv: | 9.484% |
| /model.23/cv4.1/cv4.1.0/conv/Conv: | 9.145% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.1/conv/Conv: | 8.567% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.0/conv/Conv: | 8.372% |
| /model.20/conv/Conv: | 8.366% |
| /model.23/cv2.0/cv2.0.1/conv/Conv: | 7.941% |
| /model.19/m.0/cv2/conv/Conv: | 7.861% |
| /model.23/cv4.1/cv4.1.1/conv/Conv: | 7.778% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.1/conv/Conv: | 7.773% |
| /model.23/cv4.0/cv4.0.0/conv/Conv: | 7.769% |
| /model.23/cv4.0/cv4.0.1/conv/Conv: | 7.749% |
| /model.23/cv2.1/cv2.1.1/conv/Conv: | 7.704% |
| /model.10/m/m.0/ffn/ffn.1/conv/Conv: | 7.641% |
| /model.22/m.0/cv3/conv/Conv: | 7.541% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.0/conv/Conv: | 7.432% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.1/conv/Conv: | 7.315% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.0/conv/Conv: | 7.086% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.1/conv/Conv: | 7.036% |
| /model.22/cv1/conv/Conv: | 6.485% |
| /model.19/cv2/conv/Conv: | 6.333% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.0/conv/Conv: | 6.296% |
| /model.22/m.0/m/m.1/cv2/conv/Conv: | 6.255% |
| /model.22/cv2/conv/Conv: | 6.196% |
| /model.17/conv/Conv: | 6.110% |
| /model.23/cv2.2/cv2.2.0/conv/Conv: | 5.841% |
| /model.23/cv4.2/cv4.2.1/conv/Conv: | 5.763% |
| /model.23/cv4.2/cv4.2.0/conv/Conv: | 5.740% |

(continues on next page)

(continued from previous page)

| | | |
|--|------------|--------|
| /model.23/cv2.1/cv2.1.0/conv/Conv: | ██████████ | 5.657% |
| /model.19/cv1/conv/Conv: | ██████████ | 5.583% |
| /model.23/cv2.2/cv2.2.1/conv/Conv: | ██████████ | 5.552% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.1/conv/Conv: | ██████████ | 5.254% |
| /model.6/m.0/cv2/conv/Conv: | ██████████ | 5.245% |
| /model.13/m.0/cv2/conv/Conv: | ██████████ | 5.172% |
| /model.19/m.0/cv1/conv/Conv: | ██████████ | 5.166% |
| /model.22/m.0/m/m.0/cv2/conv/Conv: | ██████████ | 5.136% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.1/conv/Conv: | ██████████ | 5.061% |
| /model.8/m.0/cv2/conv/Conv: | ██████████ | 4.985% |
| /model.10/m/m.0/attn/proj/conv/Conv: | ██████████ | 4.962% |
| /model.22/m.0/m/m.0/cv1/conv/Conv: | ██████████ | 4.609% |
| /model.23/cv4.2/cv4.2.2/Conv: | ██████████ | 4.572% |
| /model.22/m.0/m/m.1/cv1/conv/Conv: | ██████████ | 4.417% |
| /model.16/m.0/cv2/conv/Conv: | ██████████ | 4.411% |
| /model.6/cv1/conv/Conv: | ██████████ | 4.264% |
| /model.23/cv4.1/cv4.1.2/Conv: | ██████████ | 4.264% |
| /model.10/m/m.0/attn/pe/conv/Conv: | ██████████ | 4.161% |
| /model.23/cv2.0/cv2.0.0/conv/Conv: | ██████████ | 4.063% |
| /model.3/conv/Conv: | ██████████ | 3.764% |
| /model.16/cv2/conv/Conv: | ██████████ | 3.694% |
| /model.8/cv1/conv/Conv: | ██████████ | 3.689% |
| /model.13/cv2/conv/Conv: | ██████████ | 3.543% |
| /model.23/cv4.0/cv4.0.2/Conv: | ██████████ | 3.376% |
| /model.22/m.0/cv1/conv/Conv: | ██████████ | 3.363% |
| /model.10/cv1/conv/Conv: | ██████████ | 3.357% |
| /model.8/cv2/conv/Conv: | ██████████ | 3.279% |
| /model.6/m.0/cv3/conv/Conv: | ██████████ | 3.254% |
| /model.8/m.0/cv3/conv/Conv: | ██████████ | 3.219% |
| /model.13/cv1/conv/Conv: | ██████████ | 3.180% |
| /model.10/m/m.0/ffn/ffn.0/conv/Conv: | ██████████ | 3.142% |
| /model.13/m.0/cv1/conv/Conv: | ██████████ | 3.129% |
| /model.10/m/m.0/attn/qkv/conv/Conv: | ██████████ | 3.074% |
| /model.16/m.0/cv1/conv/Conv: | ██████████ | 3.061% |
| /model.2/m.0/cv2/conv/Conv: | ██████████ | 3.024% |
| /model.4/cv1/conv/Conv: | ██████████ | 2.990% |
| /model.6/m.0/m/m.0/cv2/conv/Conv: | ██████████ | 2.844% |
| /model.16/cv1/conv/Conv: | ██████████ | 2.821% |
| /model.8/m.0/m/m.1/cv2/conv/Conv: | ██████████ | 2.807% |
| /model.4/cv2/conv/Conv: | ██████████ | 2.781% |
| /model.4/m.0/cv1/conv/Conv: | ██████████ | 2.742% |
| /model.10/cv2/conv/Conv: | ██████████ | 2.627% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.0/conv/Conv: | ██████████ | 2.613% |
| /model.2/cv2/conv/Conv: | ██████████ | 2.611% |
| /model.6/cv2/conv/Conv: | ██████████ | 2.593% |
| /model.8/m.0/cv1/conv/Conv: | ██████████ | 2.553% |
| /model.10/m/m.0/attn/MatMul_1: | ██████████ | 2.547% |
| /model.7/conv/Conv: | ██████████ | 2.447% |
| /model.5/conv/Conv: | ██████████ | 2.433% |
| /model.10/m/m.0/attn/MatMul: | ██████████ | 2.363% |
| /model.23/cv2.1/cv2.1.2/Conv: | ██████████ | 2.344% |
| /model.6/m.0/m/m.0/cv1/conv/Conv: | ██████████ | 2.305% |
| /model.6/m.0/cv1/conv/Conv: | ██████████ | 2.250% |
| /model.8/m.0/m/m.0/cv2/conv/Conv: | ██████████ | 2.247% |
| /model.2/cv1/conv/Conv: | ██████████ | 2.080% |
| /model.8/m.0/m/m.1/cv1/conv/Conv: | ██████████ | 2.070% |
| /model.23/cv2.2/cv2.2.2/Conv: | ██████████ | 1.977% |

(continues on next page)

(continued from previous page)

| | | |
|-----------------------------------|------------------------|--------|
| /model.6/m.0/m/m.1/cv1/conv/Conv: | <div><div></div></div> | 1.927% |
| /model.9/cv1/conv/Conv: | <div><div></div></div> | 1.926% |
| /model.23/cv2.0/cv2.0.2/Conv: | <div><div></div></div> | 1.859% |
| /model.8/m.0/m/m.0/cv1/conv/Conv: | <div><div></div></div> | 1.694% |
| /model.9/cv2/conv/Conv: | <div><div></div></div> | 1.672% |
| /model.23/cv3.2/cv3.2.2/Conv: | <div><div></div></div> | 1.499% |
| /model.4/m.0/cv2/conv/Conv: | <div><div></div></div> | 1.491% |
| /model.6/m.0/m/m.1/cv2/conv/Conv: | <div><div></div></div> | 1.452% |
| /model.2/m.0/cv1/conv/Conv: | <div><div></div></div> | 1.093% |
| /model.1/conv/Conv: | <div><div></div></div> | 0.834% |
| /model.23/cv3.1/cv3.1.2/Conv: | <div><div></div></div> | 0.568% |
| /model.23/cv3.0/cv3.0.2/Conv: | <div><div></div></div> | 0.128% |
| /model.0/conv/Conv: | <div><div></div></div> | 0.046% |

```
Analysing Layerwise quantization error:: 100
```

→ 98/98 [04:07<00:00, 2.53s/it]

| Layer | NOISE:SIGNAL POWER RATIO |
|--|--------------------------|
| /model.0/conv/Conv: | 0.323% |
| /model.2/cv1/conv/Conv: | 0.155% |
| /model.1/conv/Conv: | 0.128% |
| /model.2/cv2/conv/Conv: | 0.104% |
| /model.8/cv1/conv/Conv: | 0.070% |
| /model.9/cv2/conv/Conv: | 0.049% |
| /model.6/m.0/m.m.0/cv2/conv/Conv: | 0.016% |
| /model.3/conv/Conv: | 0.014% |
| /model.2/m.0/cv1/conv/Conv: | 0.014% |
| /model.2/m.0/cv2/conv/Conv: | 0.014% |
| /model.6/m.0/m.m.1/cv2/conv/Conv: | 0.012% |
| /model.23/cv4.1/cv4.1.1/conv/Conv: | 0.011% |
| /model.5/conv/Conv: | 0.010% |
| /model.9/cv1/conv/Conv: | 0.010% |
| /model.6/cv1/conv/Conv: | 0.010% |
| /model.4/cv2/conv/Conv: | 0.009% |
| /model.4/cv1/conv/Conv: | 0.009% |
| /model.16/m.0/cv2/conv/Conv: | 0.009% |
| /model.19/m.0/cv2/conv/Conv: | 0.009% |
| /model.10/m.m.0/attn/qkv/conv/Conv: | 0.008% |
| /model.10/cv1/conv/Conv: | 0.008% |
| /model.23/cv4.2/cv4.2.0/conv/Conv: | 0.008% |
| /model.13/m.0/cv1/conv/Conv: | 0.008% |
| /model.13/cv1/conv/Conv: | 0.007% |
| /model.8/m.0/cv3/conv/Conv: | 0.007% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.1/conv/Conv: | 0.007% |
| /model.23/cv2.0/cv2.0.2/Conv: | 0.007% |
| /model.8/m.0/m.m.1/cv1/conv/Conv: | 0.007% |
| /model.22/cv2/conv/Conv: | 0.007% |
| /model.6/cv2/conv/Conv: | 0.006% |
| /model.23/cv4.2/cv4.2.2/Conv: | 0.006% |
| /model.16/cv2/conv/Conv: | 0.006% |
| /model.23/cv4.1/cv4.1.0/conv/Conv: | 0.006% |
| /model.23/cv4.2/cv4.2.1/conv/Conv: | 0.006% |
| /model.8/cv2/conv/Conv: | 0.006% |
| /model.16/cv1/conv/Conv: | 0.006% |
| /model.13/cv2/conv/Conv: | 0.006% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.1/conv/Conv: | 0.005% |
| /model.13/m.0/cv2/conv/Conv: | 0.005% |
| /model.7/conv/Conv: | 0.005% |

(continues on next page)

(continued from previous page)

| | | |
|--|--|--------|
| /model.10/cv2/conv/Conv: | | 0.005% |
| /model.22/m.0/m.0/cv2/conv/Conv: | | 0.005% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.0/conv/Conv: | | 0.005% |
| /model.23/cv2.1/cv2.1.2/Conv: | | 0.005% |
| /model.8/m.0/m.1/cv2/conv/Conv: | | 0.005% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.0/conv/Conv: | | 0.005% |
| /model.19/cv2/conv/Conv: | | 0.004% |
| /model.4/m.0/cv2/conv/Conv: | | 0.004% |
| /model.8/m.0/cv1/conv/Conv: | | 0.004% |
| /model.23/cv2.2/cv2.2.1/conv/Conv: | | 0.004% |
| /model.19/cv1/conv/Conv: | | 0.004% |
| /model.23/cv2.0/cv2.0.1/conv/Conv: | | 0.004% |
| /model.10/m.0/m.0/attn/pe/conv/Conv: | | 0.004% |
| /model.23/cv2.2/cv2.2.2/Conv: | | 0.004% |
| /model.22/m.0/m.1/cv2/conv/Conv: | | 0.004% |
| /model.23/cv4.0/cv4.0.0/conv/Conv: | | 0.004% |
| /model.19/m.0/cv1/conv/Conv: | | 0.003% |
| /model.10/m.0/m.0/attn/proj/conv/Conv: | | 0.003% |
| /model.22/m.0/cv3/conv/Conv: | | 0.003% |
| /model.8/m.0/m.0/cv1/conv/Conv: | | 0.003% |
| /model.23/cv2.1/cv2.1.0/conv/Conv: | | 0.003% |
| /model.23/cv3.2/cv3.2.2/Conv: | | 0.002% |
| /model.10/m.0/m.0/attn/MatMul_1: | | 0.002% |
| /model.4/m.0/cv1/conv/Conv: | | 0.002% |
| /model.23/cv4.1/cv4.1.2/Conv: | | 0.002% |
| /model.22/m.0/cv1/conv/Conv: | | 0.002% |
| /model.8/m.0/m.0/cv2/conv/Conv: | | 0.002% |
| /model.22/cv1/conv/Conv: | | 0.002% |
| /model.23/cv4.0/cv4.0.2/Conv: | | 0.002% |
| /model.22/m.0/m.0/cv1/conv/Conv: | | 0.002% |
| /model.22/m.0/m.1/cv1/conv/Conv: | | 0.002% |
| /model.10/m.0/m.0/ffn/ffn.1/conv/Conv: | | 0.002% |
| /model.23/cv4.0/cv4.0.1/conv/Conv: | | 0.002% |
| /model.16/m.0/cv1/conv/Conv: | | 0.002% |
| /model.23/cv2.1/cv2.1.1/conv/Conv: | | 0.002% |
| /model.6/m.0/cv1/conv/Conv: | | 0.002% |
| /model.6/m.0/cv3/conv/Conv: | | 0.002% |
| /model.23/cv2.0/cv2.0.0/conv/Conv: | | 0.002% |
| /model.6/m.0/m.1/cv1/conv/Conv: | | 0.002% |
| /model.6/m.0/m.0/cv1/conv/Conv: | | 0.001% |
| /model.23/cv2.2/cv2.2.0/conv/Conv: | | 0.001% |
| /model.10/m.0/m.0/ffn/ffn.0/conv/Conv: | | 0.001% |
| /model.17/conv/Conv: | | 0.001% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.1/conv/Conv: | | 0.001% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.0/conv/Conv: | | 0.001% |
| /model.20/conv/Conv: | | 0.001% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.1/conv/Conv: | | 0.001% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.1/conv/Conv: | | 0.001% |
| /model.23/cv3.1/cv3.1.2/Conv: | | 0.000% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.0/conv/Conv: | | 0.000% |
| /model.23/cv3.0/cv3.0.2/Conv: | | 0.000% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.0/conv/Conv: | | 0.000% |
| /model.6/m.0/cv2/conv/Conv: | | 0.000% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.0/conv/Conv: | | 0.000% |
| /model.8/m.0/cv2/conv/Conv: | | 0.000% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.1/conv/Conv: | | 0.000% |
| /model.10/m.0/m.0/attn/MatMul: | | 0.000% |

(continues on next page)

(continued from previous page)

| | | |
|------------------------------|--|--------|
| /model.22/m.0/cv2/conv/Conv: | | 0.000% |
|------------------------------|--|--------|

ESP32-P4 Quantization results

With the same inputs, The Pose mAP50:95 on COCO after quantization is 43.9%, which is lower than that of the float model 50.0%.

Quantization-Aware Training

To further improve the accuracy of the quantized model, we adopt the quantization-aware training(QAT) strategy. Here, QAT is performed based on 8-bit quantization.

Quantization settings

- `yolo11n-pose_qat.py`
- `trainer.py`

ESP32-P4 Quantization error

| Layer | NOISE:SIGNAL POWER RATIO |
|--|--------------------------|
| /model.22/m.0/cv2/conv/Conv: | 27.739% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.1/conv/Conv: | 26.872% |
| /model.23/cv4.1/cv4.1.0/conv/Conv: | 26.229% |
| /model.23/cv2.1/cv2.1.1/conv/Conv: | 25.300% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.0/conv/Conv: | 24.625% |
| /model.23/cv2.0/cv2.0.1/conv/Conv: | 23.751% |
| /model.20/conv/Conv: | 23.320% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.0/conv/Conv: | 22.901% |
| /model.23/cv4.1/cv4.1.1/conv/Conv: | 22.516% |
| /model.10/m.m.0/ffn/ffn.1/conv/Conv: | 22.035% |
| /model.19/m.0/cv2/conv/Conv: | 21.569% |
| /model.23/cv4.0/cv4.0.0/conv/Conv: | 21.199% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.1/conv/Conv: | 20.785% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.0/conv/Conv: | 20.597% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.1/conv/Conv: | 20.329% |
| /model.23/cv4.0/cv4.0.1/conv/Conv: | 20.179% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.0/conv/Conv: | 19.983% |
| /model.22/m.0/cv3/conv/Conv: | 19.919% |
| /model.13/m.0/cv2/conv/Conv: | 19.424% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.0/conv/Conv: | 18.893% |
| /model.19/cv2/conv/Conv: | 18.055% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.1/conv/Conv: | 17.915% |
| /model.22/m.0/m.m.1/cv2/conv/Conv: | 17.796% |
| /model.22/cv1/conv/Conv: | 17.777% |
| /model.23/cv4.2/cv4.2.1/conv/Conv: | 17.573% |
| /model.19/cv1/conv/Conv: | 17.116% |
| /model.17/conv/Conv: | 16.869% |
| /model.22/cv2/conv/Conv: | 16.750% |
| /model.23/cv2.2/cv2.2.1/conv/Conv: | 16.540% |
| /model.10/m.m.0/attn/proj/conv/Conv: | 16.491% |
| /model.23/cv2.2/cv2.2.0/conv/Conv: | 16.421% |
| /model.23/cv2.1/cv2.1.0/conv/Conv: | 16.205% |
| /model.23/cv4.2/cv4.2.0/conv/Conv: | 16.116% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.1/conv/Conv: | 15.400% |
| /model.22/m.0/m.m.0/cv2/conv/Conv: | 15.251% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.1/conv/Conv: | 14.851% |

(continues on next page)

(continued from previous page)

| | | |
|--|------------|---------|
| /model.10/m/m.0/attn/pe/conv/Conv: | ██████████ | 14.659% |
| /model.19/m.0/cv1/conv/Conv: | ██████████ | 14.289% |
| /model.22/m.0/m/m.1/cv1/conv/Conv: | ██████████ | 13.038% |
| /model.16/m.0/cv2/conv/Conv: | ██████████ | 12.941% |
| /model.22/m.0/m/m.0/cv1/conv/Conv: | ██████████ | 12.791% |
| /model.23/cv4.2/cv4.2.2/Conv: | ██████████ | 12.508% |
| /model.23/cv4.1/cv4.1.2/Conv: | ██████████ | 12.226% |
| /model.13/cv1/conv/Conv: | ██████████ | 11.821% |
| /model.13/cv2/conv/Conv: | ██████████ | 11.612% |
| /model.13/m.0/cv1/conv/Conv: | ██████████ | 11.515% |
| /model.10/m/m.0/attn/MatMul_1: | ██████████ | 11.303% |
| /model.16/cv2/conv/Conv: | ██████████ | 11.028% |
| /model.10/m/m.0/attn/qkv/conv/Conv: | ██████████ | 10.951% |
| /model.10/cv1/conv/Conv: | ██████████ | 10.755% |
| /model.23/cv2.0/cv2.0.0/conv/Conv: | ██████████ | 10.684% |
| /model.22/m.0/cv1/conv/Conv: | ██████████ | 10.164% |
| /model.10/m/m.0/ffn/ffn.0/conv/Conv: | ██████████ | 9.968% |
| /model.16/m.0/cv1/conv/Conv: | ██████████ | 9.656% |
| /model.23/cv4.0/cv4.0.2/Conv: | ██████████ | 9.566% |
| /model.8/m.0/cv2/conv/Conv: | ██████████ | 9.521% |
| /model.10/cv2/conv/Conv: | ██████████ | 8.068% |
| /model.16/cv1/conv/Conv: | ██████████ | 7.989% |
| /model.23/cv2.1/cv2.1.2/Conv: | ██████████ | 7.969% |
| /model.8/m.0/cv3/conv/Conv: | ██████████ | 7.725% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.0/conv/Conv: | ██████████ | 7.570% |
| /model.8/m.0/m/m.0/cv2/conv/Conv: | ██████████ | 7.339% |
| /model.8/m.0/m/m.1/cv2/conv/Conv: | ██████████ | 7.283% |
| /model.8/cv2/conv/Conv: | ██████████ | 7.092% |
| /model.10/m/m.0/attn/MatMul: | ██████████ | 6.654% |
| /model.8/cv1/conv/Conv: | ██████████ | 6.492% |
| /model.8/m.0/m/m.1/cv1/conv/Conv: | ██████████ | 6.451% |
| /model.23/cv2.0/cv2.0.2/Conv: | ██████████ | 5.990% |
| /model.23/cv2.2/cv2.2.2/Conv: | ██████████ | 5.902% |
| /model.6/m.0/m/m.0/cv2/conv/Conv: | ██████████ | 5.898% |
| /model.6/m.0/cv2/conv/Conv: | ██████████ | 5.881% |
| /model.6/m.0/cv3/conv/Conv: | ██████████ | 5.402% |
| /model.8/m.0/cv1/conv/Conv: | ██████████ | 5.210% |
| /model.23/cv3.2/cv3.2.2/Conv: | ██████████ | 5.126% |
| /model.6/cv1/conv/Conv: | ██████████ | 4.983% |
| /model.9/cv2/conv/Conv: | ██████████ | 4.616% |
| /model.9/cv1/conv/Conv: | ██████████ | 3.934% |
| /model.7/conv/Conv: | ██████████ | 3.906% |
| /model.3/conv/Conv: | ██████████ | 3.654% |
| /model.6/cv2/conv/Conv: | ██████████ | 3.429% |
| /model.8/m.0/m/m.0/cv1/conv/Conv: | ██████████ | 3.319% |
| /model.2/cv2/conv/Conv: | ██████████ | 3.220% |
| /model.6/m.0/m/m.1/cv1/conv/Conv: | ██████████ | 3.191% |
| /model.6/m.0/m/m.0/cv1/conv/Conv: | ██████████ | 3.157% |
| /model.4/cv1/conv/Conv: | ██████████ | 2.893% |
| /model.6/m.0/m/m.1/cv2/conv/Conv: | ██████████ | 2.792% |
| /model.6/m.0/cv1/conv/Conv: | ██████████ | 2.761% |
| /model.5/conv/Conv: | ██████████ | 2.629% |
| /model.4/cv2/conv/Conv: | ██████████ | 2.298% |
| /model.2/cv1/conv/Conv: | ██████████ | 2.107% |
| /model.2/m.0/cv2/conv/Conv: | ██████████ | 2.095% |
| /model.4/m.0/cv1/conv/Conv: | ██████████ | 2.069% |
| /model.23/cv3.1/cv3.1.2/Conv: | ██████████ | 1.744% |

(continues on next page)

(continued from previous page)

```

/model.1/conv/Conv: | 1.631%
/model.2/m.0/cv1/conv/Conv: | 1.583%
/model.4/m.0/cv2/conv/Conv: | 1.126%
/model.23/cv3.0/cv3.0.2/Conv: | 0.535%
/model.0/conv/Conv: | 0.067%
Analysing Layerwise quantization error:: 100% | 98/98 [10:49<00:00, 6.63s/
↪it]
Layer | NOISE:SIGNAL POWER RATIO
/model.9/cv2/conv/Conv: | 2.976%
/model.2/cv2/conv/Conv: | 1.610%
/model.3/conv/Conv: | 0.854%
/model.2/cv1/conv/Conv: | 0.543%
/model.1/conv/Conv: | 0.487%
/model.8/cv1/conv/Conv: | 0.414%
/model.4/cv2/conv/Conv: | 0.397%
/model.0/conv/Conv: | 0.364%
/model.6/m.0/cv3/conv/Conv: | 0.230%
/model.5/conv/Conv: | 0.181%
/model.2/m.0/cv2/conv/Conv: | 0.144%
/model.13/cv2/conv/Conv: | 0.140%
/model.2/m.0/cv1/conv/Conv: | 0.138%
/model.4/cv1/conv/Conv: | 0.129%
/model.16/cv2/conv/Conv: | 0.122%
/model.23/cv4.2/cv4.2.0/conv/Conv: | 0.120%
/model.4/m.0/cv1/conv/Conv: | 0.107%
/model.23/cv4.1/cv4.1.0/conv/Conv: | 0.096%
/model.19/cv2/conv/Conv: | 0.078%
/model.23/cv2.2/cv2.2.2/Conv: | 0.076%
/model.4/m.0/cv2/conv/Conv: | 0.071%
/model.8/m.0/m.1/cv1/conv/Conv: | 0.071%
/model.6/cv2/conv/Conv: | 0.067%
/model.6/cv1/conv/Conv: | 0.066%
/model.17/conv/Conv: | 0.060%
/model.23/cv4.2/cv4.2.1/conv/Conv: | 0.057%
/model.22/m.0/m.1/cv1/conv/Conv: | 0.056%
/model.16/cv1/conv/Conv: | 0.051%
/model.10/cv1/conv/Conv: | 0.050%
/model.23/cv4.2/cv4.2.2/Conv: | 0.046%
/model.22/cv2/conv/Conv: | 0.044%
/model.7/conv/Conv: | 0.043%
/model.10/m.0/attn/pe/conv/Conv: | 0.043%
/model.10/cv2/conv/Conv: | 0.037%
/model.19/cv1/conv/Conv: | 0.037%
/model.8/cv2/conv/Conv: | 0.036%
/model.13/cv1/conv/Conv: | 0.036%
/model.6/m.0/m.1/cv1/conv/Conv: | 0.033%
/model.22/m.0/cv3/conv/Conv: | 0.031%
/model.19/m.0/cv1/conv/Conv: | 0.027%
/model.23/cv3.2/cv3.2.0/cv3.2.0.1/conv/Conv: | 0.026%
/model.8/m.0/cv1/conv/Conv: | 0.025%
/model.19/m.0/cv2/conv/Conv: | 0.025%
/model.8/m.0/cv3/conv/Conv: | 0.024%
/model.10/m.0/attn/qkv/conv/Conv: | 0.023%
/model.8/m.0/m.0/cv1/conv/Conv: | 0.023%
/model.22/m.0/cv1/conv/Conv: | 0.021%
/model.6/m.0/m.0/cv1/conv/Conv: | 0.021%
/model.23/cv2.0/cv2.0.0/conv/Conv: | 0.020%

```

(continues on next page)

(continued from previous page)

| | | |
|--|--|--------|
| /model.6/m.0/cv1/conv/Conv: | | 0.020% |
| /model.23/cv4.0/cv4.0.0/conv/Conv: | | 0.019% |
| /model.9/cv1/conv/Conv: | | 0.018% |
| /model.23/cv4.1/cv4.1.2/Conv: | | 0.018% |
| /model.23/cv2.1/cv2.1.1/conv/Conv: | | 0.018% |
| /model.13/m.0/cv1/conv/Conv: | | 0.016% |
| /model.23/cv2.1/cv2.1.0/conv/Conv: | | 0.016% |
| /model.23/cv4.1/cv4.1.1/conv/Conv: | | 0.016% |
| /model.16/m.0/cv2/conv/Conv: | | 0.015% |
| /model.10/m/m.0/attn/proj/conv/Conv: | | 0.013% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.1/conv/Conv: | | 0.013% |
| /model.8/m.0/m/m.0/cv2/conv/Conv: | | 0.013% |
| /model.16/m.0/cv1/conv/Conv: | | 0.012% |
| /model.23/cv2.2/cv2.2.0/conv/Conv: | | 0.011% |
| /model.20/conv/Conv: | | 0.011% |
| /model.22/m.0/m/m.0/cv1/conv/Conv: | | 0.011% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.1/conv/Conv: | | 0.011% |
| /model.8/m.0/m/m.1/cv2/conv/Conv: | | 0.010% |
| /model.23/cv2.0/cv2.0.2/Conv: | | 0.009% |
| /model.10/m/m.0/attn/MatMul: | | 0.009% |
| /model.22/cv1/conv/Conv: | | 0.009% |
| /model.13/m.0/cv2/conv/Conv: | | 0.008% |
| /model.23/cv2.2/cv2.2.1/conv/Conv: | | 0.008% |
| /model.23/cv2.1/cv2.1.2/Conv: | | 0.007% |
| /model.23/cv3.2/cv3.2.1/cv3.2.1.0/conv/Conv: | | 0.007% |
| /model.22/m.0/m/m.1/cv2/conv/Conv: | | 0.007% |
| /model.6/m.0/m/m.0/cv2/conv/Conv: | | 0.006% |
| /model.22/m.0/m/m.0/cv2/conv/Conv: | | 0.006% |
| /model.23/cv4.0/cv4.0.1/conv/Conv: | | 0.005% |
| /model.23/cv3.2/cv3.2.0/cv3.2.0.0/conv/Conv: | | 0.005% |
| /model.23/cv4.0/cv4.0.2/Conv: | | 0.004% |
| /model.6/m.0/m/m.1/cv2/conv/Conv: | | 0.004% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.1/conv/Conv: | | 0.004% |
| /model.10/m/m.0/ffn/ffn.1/conv/Conv: | | 0.003% |
| /model.23/cv3.2/cv3.2.2/Conv: | | 0.003% |
| /model.10/m/m.0/attn/MatMul_1: | | 0.002% |
| /model.10/m/m.0/ffn/ffn.0/conv/Conv: | | 0.002% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.1/conv/Conv: | | 0.002% |
| /model.23/cv2.0/cv2.0.1/conv/Conv: | | 0.002% |
| /model.23/cv3.1/cv3.1.1/cv3.1.1.0/conv/Conv: | | 0.001% |
| /model.23/cv3.0/cv3.0.2/Conv: | | 0.001% |
| /model.23/cv3.1/cv3.1.2/Conv: | | 0.001% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.0/conv/Conv: | | 0.001% |
| /model.23/cv3.1/cv3.1.0/cv3.1.0.0/conv/Conv: | | 0.001% |
| /model.23/cv3.0/cv3.0.0/cv3.0.0.0/conv/Conv: | | 0.000% |
| /model.6/m.0/cv2/conv/Conv: | | 0.000% |
| /model.23/cv3.0/cv3.0.1/cv3.0.1.1/conv/Conv: | | 0.000% |
| /model.8/m.0/cv2/conv/Conv: | | 0.000% |
| /model.22/m.0/cv2/conv/Conv: | | 0.000% |

ESP32-P4 Quantization results

After applying QAT to 8-bit quantization, the quantized model's Pose mAP50:95 on COCO improves to 44.9% with the same inputs, while cumulative errors of out layers are significantly reduced. Compared to the other two quantization methods, the 8-bit QAT quantized model achieves the highest quantization accuracy with the lowest inference latency.

Note: The mAP results mentioned in this document were computed using Ultralytics version 8.4.50.

3.9.3 Model deployment

example

Object detection base class

- `dl_detect_base.hpp`
- `dl_detect_base.cpp`

Pre-process

`ImagePreprocessor` class contains the common pre-process pipeline, color conversion, crop, resize, normalization, quantize

- `dl_image_preprocessor.hpp`
- `dl_image_preprocessor.cpp`

Post-process

- `dl_detect_postprocessor.hpp`
- `dl_detect_postprocessor.cpp`
- `dl_pose_yolo11_postprocessor.hpp`
- `dl_pose_yolo11_postprocessor.cpp`

3.10 How to Deploy Streaming Models

Time series models are now widely applied in various fields, such as audio processing. Audio models typically have two deployment modes when deployed:

- **Offline mode:** The model receives the complete audio data (e.g., an entire speech file) at once and processes it as a whole.
- **Streaming mode:** In streaming mode, the model receives audio data frame by frame (or chunk by chunk) in real-time, processes it, and outputs intermediate results.

In this tutorial, we will introduce how to quantize a streaming model using ESP-PPQ and deploy the quantized streaming model with ESP-DL.

- *Prerequisites*
 - *Model Quantization*
 - *Automatic Streaming Conversion*

- *How Auto Streaming Conversion Works*
- *Manual Streaming Cache Configuration*
- *Model Deployment*

3.10.1 Prerequisites

1. *Install ESP-IDF*
2. *Install ESP-PPQ*

3.10.2 Model Quantization

Reference example

There are numerous types of time series models. Here, we take the Temporal Convolutional Network (TCN) as an example. If you are unfamiliar with TCNs, please refer to relevant resources for details; we won't elaborate further. Other models should be customized based on their specific structures.

The example code constructs a TCN model: `models.py` (the model is incomplete and used only for demonstration).

ESP-PPQ provides an automatic streaming conversion feature that simplifies the process of creating streaming models. With the `auto_streaming=True` parameter, ESP-PPQ automatically handles the model transformation required for streaming inference.

Note:

- In offline mode, the model input is a complete data segment, and the input shape typically has a large size along the time dimension (e.g., `[1, 16, 15]`).
 - In streaming mode, the model input is continuous data with a smaller time dimension, which matches the chunk size for real-time processing (e.g., `[1, 16, 3]`).
-

Automatic Streaming Conversion

ESP-PPQ provides an automatic streaming conversion feature via the `auto_streaming=True` parameter in the quantization process. When this flag is enabled, ESP-PPQ automatically transforms the model to support streaming inference by:

1. Analyzing the model structure to identify appropriate chunking points
2. Creating internal state management for maintaining context between chunks
3. Generating optimized code suitable for streaming scenarios

How Auto Streaming Conversion Works

The automatic streaming conversion in ESP-PPQ analyzes the model graph and inserts `StreamingCache` nodes at strategic locations to enable temporal context preservation. The conversion process follows these principles:

1. Operation Classification

- **Streaming-enabled operations:** Convolution, pooling, and transpose convolution operations that require temporal context (e.g., `Conv`, `AveragePool`, `MaxPool`, `ConvTranspose`).
- **Bypass operations:** Activation functions, mathematical operations, quantization nodes, and other operations that don't require temporal context (e.g., `Relu`, `Add`, `MatMul`, `LayerNorm`).

2. Window Size Calculation

For streaming-enabled operations, ESP-PPQ calculates the required cache window size based on: - Kernel size and dilation rates - Padding configuration - Stride values

The window size determines how many previous frames need to be cached for proper computation of the current frame.

3. StreamingCache Node Insertion

ESP-PPQ inserts `StreamingCache` nodes before streaming-enabled operations. These nodes: - Maintain a sliding window buffer of historical frames - Adjust tensor shapes to accommodate the cache window - Preserve quantization configurations from the original operation - Manage frame axis alignment for proper temporal processing

4. Padding Adjustment

For streaming operations, ESP-PPQ adjusts padding configurations: - Removes bottom padding to prevent look-ahead into future frames - Maintains symmetric or top-only padding for causal processing

Limitations and Considerations

- Automatic conversion supports convolution-based temporal operations out-of-the-box
- Custom operations or complex temporal dependencies may require manual streaming table configuration
- The conversion assumes the time dimension is along axis 1 (configurable via `streaming_table`)

Here's an example of how to use the auto streaming feature:

```
# Export non-streaming model
quant_ppq_graph = espdl_quantize_torch(
    model=model,
    espdl_export_file=ESPD_MODEL_PATH,
    calib_data_loader=dataloader,
    calib_steps=32, # Number of calibration steps
    input_shape=INPUT_SHAPE, # Input shape for offline mode
    inputs=None,
    target=TARGET, # Quantization target type
    num_of_bits=NUM_OF_BITS, # Number of quantization bits
    dispatching_override=None,
    device=DEVICE,
    error_report=True,
    skip_export=False,
    export_test_values=True,
    verbose=1, # Output detailed log information
)

# Export streaming model with automatic conversion
quant_ppq_graph = espdl_quantize_torch(
    model=model,
```

(continues on next page)

(continued from previous page)

```

    espdll_export_file=ESPDLL_STEAMING_MODEL_PATH,
    calib_data_loader=data_loader,
    calib_steps=32,
    input_shape=INPUT_SHAPE,
    inputs=None,
    target=TARGET,
    num_of_bits=NUM_OF_BITS,
    dispatching_override=None,
    device=DEVICE,
    error_report=True,
    skip_export=False,
    export_test_values=False,
    verbose=1,
    auto_streaming=True, # Enable automatic streaming conversion
    streaming_input_shape=[1, 16, 3], # Input shape for streaming mode
    streaming_table=None,
)

```

Manual Streaming Cache Configuration

For operators that are not automatically supported by ESP-PPQ's streaming conversion feature (such as Transpose, Reshape, Slice, etc.), you can manually insert StreamingCache nodes using the `insert_streaming_cache_on_var` function. This function allows you to specify cache attributes for variables that cannot have StreamingCache inserted automatically.

The `insert_streaming_cache_on_var` function has the following signature:

```

def insert_streaming_cache_on_var(
    var_name: str,
    window_size: int,
    op_name: str = None,
    frame_axis: int = 1
) -> Dict[str, Any]

```

Parameters: - `var_name`: The name of the variable where the streaming cache should be inserted - `window_size`: The size of the cache window (number of frames to cache) - `op_name`: (Optional) The name of the operator associated with the variable - `frame_axis`: (Optional) The axis representing the time dimension, default is 1

The function returns a dictionary containing the streaming cache configuration, which should be added to a `streaming_table` list and passed to the `espdll_quantize_torch` function.

Example usage:

```

streaming_table = []
# Manually specify cache attributes for variables that cannot insert streamingCache_
# automatically
streaming_table.append(
    insert_streaming_cache_on_var("/out_conv/Conv_output_0", output_frame_size - 1)
)
streaming_table.append(insert_streaming_cache_on_var("PPQ_Variable_0", 1, "/Slice"))

quant_ppq_graph = espdll_quantize_torch(
    model=model,
    espdll_export_file=ESPDLL_STEAMING_MODEL_PATH,
    calib_data_loader=data_loader,
    calib_steps=32,

```

(continues on next page)

(continued from previous page)

```

input_shape=INPUT_SHAPE,
inputs=None,
target=TARGET,
num_of_bits=NUM_OF_BITS,
dispatching_override=None,
device=DEVICE,
error_report=True,
skip_export=False,
export_test_values=False,
verbose=1,
auto_streaming=True,
streaming_input_shape=[1, 16, 3],
streaming_table=streaming_table, # Pass the manually configured streaming table
)

```

3.10.3 Model Deployment

Reference example , this example uses pre-generated data to simulate a real-time data stream.

Note: For basic model loading and inference methods, please refer to other documents:

- [How to Load and Test a Model](#)
- [How to Perform Model Inference](#)

In streaming mode, the model receives data in chunks over time rather than requiring the entire input at once. The streaming model processes these chunks sequentially while maintaining internal state between chunks. The deployment code handles splitting the input into appropriate chunks and feeding them to the model. See [app_main.cpp](#) for the following code block:

```

dl::TensorBase *run_streaming_model(dl::Model *model, dl::TensorBase *test_input)
{
    std::map<std::string, dl::TensorBase *> model_inputs = model->get_inputs();
    dl::TensorBase *model_input = model_inputs.begin()->second;
    std::map<std::string, dl::TensorBase *> model_outputs = model->get_outputs();
    dl::TensorBase *model_output = model_outputs.begin()->second;

    if (!test_input) {
        ESP_LOGE(TAG,
            "Model input doesn't have a corresponding test input. Please enable_
↪export_test_values option "
            "in esp-ppq when export espdl model.");
        return nullptr;
    }

    int test_input_size = test_input->get_bytes();
    uint8_t *test_input_ptr = (uint8_t *)test_input->data;
    int model_input_size = model_input->get_bytes();
    uint8_t *model_input_ptr = (uint8_t *)model_input->data;
    int chunks = test_input_size / model_input_size;
    for (int i = 0; i < chunks; i++) {
        // assign chunk data to model input
        memcpy(model_input_ptr, test_input_ptr + i * model_input_size, model_input_
↪size);
    }
}

```

(continues on next page)

(continued from previous page)

```

    model->run(model_input);
}

return model_output;
}

```

This approach allows the model to process long sequences efficiently by breaking them into smaller, manageable chunks. Each chunk is fed to the model sequentially, and the internal state is maintained automatically to ensure continuity across chunks.

Note:

- The number of chunks is calculated based on the ratio between the full input size and the streaming model's input size.
 - ESP-DL streaming models handle internal state management automatically, making deployment straightforward.
 - The output from the streaming model should match the final portion of the equivalent offline model's output.
-

3.11 Quantizing Models with TQT

This document explains why and how to use Trained Quantization Thresholds (TQT) in ESP-PPQ for quantization to achieve higher quantized accuracy. Make sure your ESP-PPQ installation is updated to at least version 1.2.7.

- *Why Use TQT*
 - *Limitations of Post-Training Quantization (PTQ)*
 - *Complexity of Quantization-Aware Training (QAT)*
 - *What TQT Offers*
- *How to Use TQT*
 - *Quick Start*
 - *TQTSetting Parameters*
- *TQT Quantization Examples*
 - *YOLO26n Quantization*
 - *MobileNetV2 Quantization*
- *FAQ*
 - *How to speed up TQT?*
 - *Can I train only model weights without modifying scale?*
 - *Can TQT be used together with Weight Equalization?*

3.11.1 Why Use TQT

TQT (Trained Quantization Thresholds) comes from the paper [Trained Quantization Thresholds for Accurate and Efficient Fixed-Point Inference of Deep Neural Networks](#) (Sambhav R. Jain, Albert Gural, Michael Wu, Chris H. Dick), published at **MLSys 2020**. Since ESP32-series chips currently only support `.espd1` models produced by **Per-Tensor/Per-Channel + Symmetric + Power-of-2** quantization, we have integrated the core idea of TQT into ESP-PPQ, jointly optimizing quantization thresholds (scale) and model weights via **standard backpropagation and gradient descent** to match hardware constraints.

In ESP-PPQ, TQT is implemented as **TrainedQuantizationThresholdPass**. We optimize scale in the log domain and adapt to ESP-DL's **Power-of-2** constraint (e.g. `int_lambda`, `STE`, etc.).

Limitations of Post-Training Quantization (PTQ)

| Method | Pros | Limitations |
|--------|------------------------|--|
| PTQ | Simple, no training | Scale is statistics-based and may be suboptimal; larger errors on sensitive structures (e.g. YOLO26n head) |
| TQT | Finetune scale/weights | Requires calibration data and compute |

Complexity of Quantization-Aware Training (QAT)

Quantization-aware training (QAT) usually inserts fake quantization in full training or finetuning and can achieve good accuracy, but it requires:

- **Full labeled data and long training/finetuning** (even for models that do not use labels, QAT often needs long training/finetuning);
- **More compute and hyperparameter tuning**;
- Extra engineering to integrate with existing PTQ/calibration pipelines.

TQT, by contrast, **does not need labels**: the loss is MSE between floating-point output and quantized output; only a calibration set is needed. Under the Power-of-2 constraint it jointly finetunes weights and $\log_2(\text{scale})$, and often improves accuracy in relatively few steps.

What TQT Offers

- **Learnable scale (still 2^k)**: Optimize $\alpha = \log_2(\text{scale})$ in the log domain; numerically stable and naturally satisfies `POWER_OF_2`. Training will be skipped if the conditions are not met or if disabled.
- **STE and range-precision tradeoff**: Using STE for threshold gradients and a sensible forward/backward design gives a better tradeoff between **representation range** and **accuracy**; in ESP-PPQ this is done via `alpha_ste`.
- **Learnable weights**: Weights are trainable and can be fine-tuned together with scales on a block-wise basis to further reduce quantization error.
- **Alignment with ESP-DL**: With the default `alpha_ste` forward, the forward uses integer exponents; with `int_lambda` the learned α is closer to an integer, which eases export and matches the chip side.
- **No labels**: Only a calibration set is needed for scale/weight finetuning.

3.11.2 How to Use TQT

Quick Start

1. Use ESP-DL default setting and enable TQT

```
from esp_ppq import QuantizationSettingFactory
from esp_ppq.api import espdl_quantize_onnx

quant_setting = QuantizationSettingFactory.espdL_setting()
quant_setting.tqt_optimization = True
quant_setting.tqt_optimization_setting.int_lambda = 0.25 # optional: make exponent
↳ closer to integer
quant_setting.tqt_optimization_setting.steps = 500
quant_setting.tqt_optimization_setting.lr = 1e-5
quant_setting.tqt_optimization_setting.collecting_device = "cuda" # or "cpu"
quant_setting.tqt_optimization_setting.block_size = 2
```

2. Pass the setting into quantization

```
from esp_ppq.api import ENABLE_CUDA_KERNEL
with ENABLE_CUDA_KERNEL():
    quant_ppq_graph = espdl_quantize_onnx(
        onnx_import_file=ONNX_PATH,
        espdl_export_file=ESPDL_MODULE_PATH,
        calib_dataloader=dataloader,
        calib_steps=32,
        input_shape=[1] + INPUT_SHAPE,
        target=TARGET,
        num_of_bits=NUM_OF_BITS,
        collate_fn=collate_fn,
        setting=quant_setting,
        device=DEVICE,
        error_report=False,
        skip_export=False,
        export_test_values=True,
        verbose=0,
        inputs=None,
    )
```

3. Export and return value

- **Returned quant_ppq_graph:** scale is TQT-finetuned 2^{integer} , and can be used for model accuracy evaluation.
- **Exported .espdL file:** exponent comes from $\text{int}(\log_2(\text{config.scale}))$; **export and chip-side inference use the TQT-optimized scale.**

TQTSetting Parameters

| Parameter | Type | Default | Description |
|--------------------|-----------|---------|---|
| interested_layers | List[str] | [] | Names of ops to finetune; if empty, all eligible Conv/Gemm etc. are used |
| steps | int | 500 | Finetuning steps per block |
| lr | float | 1e-5 | Learning rate |
| block_size | int | 4 | Block size for graph splitting; affects stability and speed |
| is_scale_trainable | bool | True | Whether to finetune scale (POWER_OF_2 + LINEAR + SYMMETRICAL). True: train scale and weights; False: train only weights |
| gamma | float | 0.0 | Regularization: MSE(floating-point output, quantized output) |
| int_lambda | float | 0.0 | Regularization: pull alpha toward round(alpha); range [0.0, 1.0] |
| collecting_device | str | cpu | Device for caching calibration data; set to cuda if GPU is available |

3.11.3 TQT Quantization Examples

The following examples show how to enable TQT quantization for **YOLO26n** (detection) and **MobileNetV2** (classification) and export to ESP-DL. Adjust calibration data and model paths to your environment.

Note: The P4 quantization accuracy reported in the YOLO26n and MobileNetV2 examples was measured with Per-Tensor quantization granularity. P4 now supports Per-Channel quantization for Conv/Gemm operators.

YOLO26n Quantization

Preparation

| Item | Description |
|-------------|--|
| Model name | YOLO26n (one2one branch end2end inference) |
| Task | Object detection |
| Input shape | [1, 3, 640, 640] (NCHW) |
| ONNX | yolo26n_o2o.onnx |
| Calibration | calib_yolo26n.zip |
| Note | Non-end2end with one2many is also supported; ONNX: yolo26n_o2m.onnx ; quantization method is the same as end2end |

Quantization script

```
import os
from esp_ppq import QuantizationSettingFactory
from esp_ppq.api import espd_l_quantize_onnx
from torch.utils.data import DataLoader
import torch
from torch.utils.data import Dataset
from torchvision import transforms
from PIL import Image
from onnxsim import simplify
import onnx
import zipfile
import urllib.request
from esp_ppq.api import ENABLE_CUDA_KERNEL

class CaliDataset(Dataset):
    def __init__(self, path, img_shape=640):
        super().__init__()
        self.transform = transforms.Compose(
            [
                transforms.Resize((img_shape, img_shape)),
                transforms.ToTensor(),
                transforms.Normalize(mean=[0, 0, 0], std=[1, 1, 1]),
            ]
        )

        self.imgs_path = []
        self.path = path
        for img_name in os.listdir(self.path):
            img_path = os.path.join(self.path, img_name)
            self.imgs_path.append(img_path)

    def __len__(self):
        return len(self.imgs_path)

    def __getitem__(self, idx):
        img = Image.open(self.imgs_path[idx])
        if img.mode == 'L':
            img = img.convert('RGB')
        img = self.transform(img)
        return img

def report_hook(blocknum, blocksize, total):
    downloaded = blocknum * blocksize
    percent = downloaded / total * 100
    print(f"\rDownloading calibration dataset: {percent:.2f}%", end="")

def quant_yolo26n(imgsz):
    BATCH_SIZE = 32
    INPUT_SHAPE = [3, imgsz, imgsz]
    DEVICE = "cpu"
    TARGET = "esp32p4" # or "esp32s3"
    NUM_OF_BITS = 8
```

(continues on next page)

(continued from previous page)

```

yolo26n_onnx_url = "https://dl.espressif.com/public/yolo26n_o2o.onnx"
ONNX_PATH = "yolo26n_o2o.onnx"
urllib.request.urlretrieve(
    yolo26n_onnx_url, "yolo26n_o2o.onnx", reporthook=report_hook
)

ESPDL_MODLE_PATH = "yolo26n_o2o_ptq_fq_tqt_p4_640.espd1"

yolo26n_caib_url = "https://dl.espressif.com/public/calib_yolo26n.zip"
CALIB_DIR = "calib_yolo26n"
urllib.request.urlretrieve(
    yolo26n_caib_url, "calib_yolo26n.zip", reporthook=report_hook
)
with zipfile.ZipFile("calib_yolo26n.zip", "r") as zip_file:
    zip_file.extractall("./")

model = onnx.load(ONNX_PATH)
sim = True
if sim:
    model, check = simplify(model)
    assert check, "Simplified ONNX model could not be validated"
onnx.save(onnx.shape_inference.infer_shapes(model), ONNX_PATH)

calibration_dataset = CaliDataset(CALIB_DIR, img_shape=imgsz)
dataloader = DataLoader(
    dataset=calibration_dataset, batch_size=BATCH_SIZE, shuffle=False, num_
workers=8,
)

def collate_fn(batch: torch.Tensor) -> torch.Tensor:
    return batch.to(DEVICE)

# default setting
quant_setting = QuantizationSettingFactory.espd1_setting()
# activation calibration algo
quant_setting.quantize_activation_setting.calib_algorithm = "percentile" # kl -->
percentile to get better mAP
# focused logits quantization
quant_setting.quant_config_modify = True
# o2o
quant_setting.quant_config_modify_setting.custom_config = {
    "/model.23/one2one_cv3.0/one2one_cv3.0.2/Conv": 0.0625,
    "/model.23/one2one_cv3.1/one2one_cv3.1.2/Conv": 0.0625,
    "/model.23/one2one_cv3.2/one2one_cv3.2.2/Conv": 0.0625,
}

# o2m (alternative)
# quant_setting.quant_config_modify_setting.custom_config = {
#     "/model.23/cv3.0/cv3.0.2/Conv": 0.0625,
#     "/model.23/cv3.1/cv3.1.2/Conv": 0.0625,
#     "/model.23/cv3.2/cv3.2.2/Conv": 0.0625,
# }

# TQT
quant_setting.tqt_optimization = True
quant_setting.tqt_optimization_setting.collecting_device = "cpu"

```

(continues on next page)

(continued from previous page)

```

quant_setting.tqt_optimization_setting.steps = 200  #300 for o2m
quant_setting.tqt_optimization_setting.block_size = 2
quant_setting.tqt_optimization_setting.lr = 1e-5

quant_ppq_graph = espdL_quantize_onnx(
    onnx_import_file=ONNX_PATH,
    espdL_export_file=ESPDL_MODLE_PATH,
    calib_dataloader=dataloader,
    calib_steps=32,
    input_shape=[1] + INPUT_SHAPE,
    target=TARGET,
    num_of_bits=NUM_OF_BITS,
    collate_fn=collate_fn,
    setting=quant_setting,
    device=DEVICE,
    error_report=True,
    skip_export=False,
    export_test_values=False,
    verbose=0,
    inputs=None,
)
return quant_ppq_graph

if __name__ == "__main__":
    quant_yolo26n(imgsz=640)

```

Focused Logits Quantization

In detection models, unlike backbone/neck, **detection head outputs** are very sensitive to quantization error. For models like YOLO26n, the classification branch outputs logits that are **inputs to Sigmoid**; after Sigmoid they become class confidence or scores. Using the same calibration-derived scale for these logits as for other layers often leads to **scale that is too large (quantization step too coarse)**, distorting class scores and reducing mAP.

- **Sigmoid has a limited effective input range:** $\sigma(x) = 1/(1+\exp(-x))$ saturates quickly for large absolute x —output tends to 0 when x is very negative and to 1 when very positive; only the middle range (roughly -4 to 4) changes meaningfully. So the logits that actually discriminate are in this **limited range**; outside it they sit in saturation and barely change.
- **Saturation on both sides; detection cares more about positive samples:** In object detection we care more about **positive samples** (with object, high confidence), i.e. logits on the positive side and Sigmoid output near 1. On both sides, if logits are quantized too coarsely (scale too large, step too big), many different logits map to the same quantized level: near saturation they get “squashed” to 0 or 1, and in the effective middle range fine-grained distinction is lost, so scores are distorted and mAP drops.

So for **logits fed into Sigmoid** (the last Conv outputs of the three head branches one2one_cv3.0/1/2.2 in the example), we use **Focused logits quantization**: assign **finer scale** (e.g. $0.0625 = 2^{-4}$) to these layers so that, while keeping Power-of-2, the quantization step is smaller, more levels are kept in Sigmoid’s effective range, saturation is delayed, and discrimination on the positive side is preserved, stabilizing or improving mAP. For other detection models or different export structures, identify which layers feed Sigmoid and adjust custom_config accordingly.

Quantization accuracy on ESP32-P4

Accuracy after quantizing yolo26n (size=640 pixels) on COCO val2017:

| Config | mAP50-95(o2m) | mAP50-95(e2e) | Note |
|--------------|---------------|---------------|---|
| PTQ (no TQT) | 0.342 | 0.332 | Calibration only |
| PTQ + TQT | 0.371 | 0.363 | Calibration + TQT scale/weight finetuning |

Results show that TQT significantly improves mAP for both end2end and non-end2end models.

Note: For faster inference, you can use size=512 pixels. Experiments show that with size=512 pixels and end2end inference, the 8-bit PTQ model reaches mAP50-95 of 0.315. After TQT, mAP50-95 improves to 0.341, representing a gain of 2.6 percentage points.

MobileNetV2 Quantization

Quantization script

```
import os
import subprocess
from typing import Iterable, Tuple, List, Tuple

import torch
from datasets.imagenet_util import (
    evaluate_ppq_module_with_imagenet,
    load_imagenet_from_directory,
)
from esp_ppq import QuantizationSettingFactory, QuantizationSetting
from esp_ppq.api import espdl_quantize_onnx, get_target_platform
from torch.utils.data import DataLoader
import torchvision.datasets as datasets
import torchvision.transforms as transforms
from torch.utils.data.dataset import Subset
import urllib.request
import zipfile

def quant_setting_mobilenet_v2(
    onnx_path: str,
    optim_quant_method: List[str] = None,
) -> Tuple[QuantizationSetting, str]:
    """
    Quantize onnx model with optim_quant_method.

    Args:
        optim_quant_method (List[str]): support 'MixedPrecisionQuantization',
        ↳ 'LayerwiseEqualizationQuantization'
        ↳ 'MixedPrecisionQuantization': if some layers in model have larger errors in
        ↳ 8-bit quantization, dispatching
        the layers to 16-bit quantization. You can_
    """
```

(continues on next page)

(continued from previous page)

```

→ remove or add layers according to your
                                needs.
    -'LayerwiseEqualization_quantization' using weight equalization strategy,
→ which is proposed by Markus Nagel.
                                Refer to paper https://openaccess.
→ thecvf.com/content_ICCV_2019/papers/Nagel_Data-Free_Quantization_Through_Weight_
→ Equalization_and_Bias_Correction_ICCV_2019_paper.pdf for more information.
                                Since ReLU6 exists in MobilenetV2,
→ convert ReLU6 to ReLU for better precision.

Returns:
    (tuple): [QuantizationSetting, str]
    '''
    quant_setting = QuantizationSettingFactory.espdsl_setting()
    if optim_quant_method is not None:
        if "MixedPrecision_quantization" in optim_quant_method:
            # These layers have larger errors in 8-bit quantization, dispatching to
→ 16-bit quantization.
            # You can remove or add layers according to your needs.
            quant_setting.dispatching_table.append(
                "/features/features.1/conv/conv.0/conv.0.0/Conv",
                get_target_platform(TARGET, 16),
            )
            quant_setting.dispatching_table.append(
                "/features/features.1/conv/conv.0/conv.0.2/Clip",
                get_target_platform(TARGET, 16),
            )
        elif "LayerwiseEqualization_quantization" in optim_quant_method:
            # layerwise equalization
            quant_setting.equalization = True
            quant_setting.equalization_setting.iterations = 4
            quant_setting.equalization_setting.value_threshold = 0.4
            quant_setting.equalization_setting.opt_level = 2
            quant_setting.equalization_setting.interested_layers = None
            # replace ReLU6 with ReLU
            onnx_path = onnx_path.replace("mobilenet_v2.onnx", "mobilenet_v2_relu.onnx")
→ )
        else:
            raise ValueError(
                "Please set optim_quant_method correctly. Support 'MixedPrecision_
→ quantization', 'LayerwiseEqualization_quantization'"
            )

    return quant_setting, onnx_path

def collate_fn1(x: Tuple) -> torch.Tensor:
    return torch.cat([sample[0].unsqueeze(0) for sample in x], dim=0)

def collate_fn2(batch: torch.Tensor) -> torch.Tensor:
    return batch.to(DEVICE)

def report_hook(blocknum, blocksize, total):
    downloaded = blocknum * blocksize
    percent = downloaded / total * 100

```

(continues on next page)

(continued from previous page)

```

print(f"\rDownloading calibration dataset: {percent:.2f}%", end="")

if __name__ == "__main__":
    BATCH_SIZE = 32
    INPUT_SHAPE = [3, 224, 224]
    DEVICE = "cpu" # 'cuda' or 'cpu', if you use cuda, please make sure that cuda
    ↪ is available
    TARGET = "esp32p4" # 'c', 'esp32s3' or 'esp32p4'
    NUM_OF_BITS = 8
    ONNX_PATH = "./models/torch/mobilenet_v2.onnx" # 'models/onnx/mobilenet_v2.onnx'
    ESPDL_MODEL_PATH = "models/onnx/mobilenet_v2.espd1"
    CALIB_DIR = "./imagenet"

    # Download mobilenet_v2 model from onnx models and dataset
    imagenet_url = "https://dl.espressif.com/public/imagenet_calib.zip"
    os.makedirs(CALIB_DIR, exist_ok=True)
    if not os.path.exists("imagenet_calib.zip"):
        urllib.request.urlretrieve(
            imagenet_url, "imagenet_calib.zip", reporthook=report_hook
        )
    if not os.path.exists(os.path.join(CALIB_DIR, "calib")):
        with zipfile.ZipFile("imagenet_calib.zip", "r") as zip_file:
            zip_file.extractall(CALIB_DIR)
    CALIB_DIR = os.path.join(CALIB_DIR, "calib")

    # -----
    # Prepare Calibration Dataset
    # -----
    if os.path.exists(CALIB_DIR):
        print(f"load imagenet calibration dataset from directory: {CALIB_DIR}")
        dataset = datasets.ImageFolder(
            CALIB_DIR,
            transforms.Compose(
                [
                    transforms.Resize(256),
                    transforms.CenterCrop(224),
                    transforms.ToTensor(),
                    transforms.Normalize(
                        mean=[0.485, 0.456, 0.406], std=[0.229, 0.224, 0.225]
                    ),
                ]
            ),
        )
        dataset = Subset(dataset, indices=[_ for _ in range(0, 1024)])
        dataloader = DataLoader(
            dataset=dataset,
            batch_size=BATCH_SIZE,
            shuffle=False,
            num_workers=4,
            pin_memory=False,
            collate_fn=collate_fn1,
        )
    else:
        # Random calibration dataset only for debug
        print("load random calibration dataset")

```

(continues on next page)

(continued from previous page)

```

def load_random_calibration_dataset() -> Iterable:
    return [torch.rand(size=INPUT_SHAPE) for _ in range(BATCH_SIZE)]

# Load training data for creating a calibration dataloader.
dataloader = DataLoader(
    dataset=load_random_calibration_dataset(),
    batch_size=BATCH_SIZE,
    shuffle=False,
)

# -----
# Quantize ONNX Model.
# -----

quant_setting = QuantizationSettingFactory.espdn_setting()
# TQT
quant_setting.tqt_optimization = True
quant_setting.tqt_optimization_setting.collecting_device = "cpu"
quant_setting.tqt_optimization_setting.steps = 500
quant_setting.tqt_optimization_setting.block_size = 4
quant_setting.tqt_optimization_setting.lr = 1e-4

quant_ppq_graph = espdn_quantize_onnx(
    onnx_import_file=ONNX_PATH,
    espdn_export_file=ESPDN_MODEL_PATH,
    calib_dataloader=dataloader,
    calib_steps=32,
    input_shape=[1] + INPUT_SHAPE,
    target=TARGET,
    num_of_bits=NUM_OF_BITS,
    collate_fn=collate_fn2,
    setting=quant_setting,
    device=DEVICE,
    error_report=True,
    skip_export=False,
    export_test_values=False,
    verbose=1,
)

# -----
# Evaluate Quantized Model.
# -----

evaluate_ppq_module_with_imagenet(
    model=quant_ppq_graph,
    imagenet_validation_dir=CALIB_DIR,
    batchsize=BATCH_SIZE,
    device=DEVICE,
    verbose=1,
)

```

Quantization results and analysis

When using the TQT strategy for 8-bit quantization optimization, the model achieves a Top-1 accuracy of 71.775%. Compared to the per-channel quantized model on ESP32-P4 (Top-1 accuracy of 70.850%), TQT improves Top-1 accuracy by 1.306 percentage points, bringing it closer to the float32 model accuracy (71.878%). This demonstrates that even under strict 8-bit quantization constraints, TQT can effectively mitigate performance degradation caused by quantization error through learnable optimization of quantization thresholds, enabling the quantized model to approach floating-point model accuracy.

3.11.4 FAQ

How to speed up TQT?

With a GPU, put calibration data on the GPU.

First set `collecting_device` to `cuda`:

```
quant_setting.tqt_optimization_setting.collecting_device = "cuda"
```

Then run quantization inside `ENABLE_CUDA_KERNEL`:

```
with ENABLE_CUDA_KERNEL():
    quant_ppq_graph = espdl_quantize_onnx(
        onnx_import_file=ONNX_PATH,
        espdl_export_file=ESPDL_MODULE_PATH,
        calib_dataloader=dataloader,
        calib_steps=32,
        input_shape=[1] + INPUT_SHAPE,
        target=TARGET,
        num_of_bits=NUM_OF_BITS,
        collate_fn=collate_fn,
        setting=quant_setting,
        device=DEVICE,
        error_report=False,
        skip_export=False,
        export_test_values=False,
        verbose=0,
        inputs=None,
    )
```

Increasing `block_size` (e.g. 2–4) reduces the number of blocks and total time, but too large can be unstable; try 4 first.

Can I train only model weights without modifying scale?

Yes. Set `is_scale_trainable` to `False`.

```
quant_setting.tqt_optimization_setting.is_scale_trainable = False
```

Can TQT be used together with Weight Equalization?

Yes. TQT can be applied in combination with Weight Equalization. For models such as `espdet_pico`, this combination can further enhance quantization performance.

```
quant_setting.tqt_optimization_setting.equalization = True  
quant_setting.tqt_optimization_setting.tqt_optimization = True
```


API REFERENCE

4.1 Tensor API Reference

Tensor is the fundamental data type in esp-dl, used for storing multi-type data such as int8, int16, float, etc., similar to the tensor in PyTorch. We have implemented some common tensor operations. Please refer to the following APIs for details.

4.1.1 Header File

- esp-dl/dl/tensor/include/dl_tensor_base.hpp

4.1.2 Classes

class **ExponentInfo**

Exponent info for per-tensor / per-channel quantization.

Per-tensor: m_exponent only, zero heap allocation. Per-channel: heap-allocated m_exponents array. Provides operator int() so existing DL_SCALE (tensor->exponent) code works unchanged.

A failed per-channel allocation leaves the object in the invalid state reported by *is_valid()*; such an object describes no scale at all and its tensor must be rejected by the caller.

Public Functions

inline **ExponentInfo** (int exponent = 0)

Construct a per-tensor *ExponentInfo* with a single exponent value.

Parameters

exponent – The exponent value for per-tensor quantization. Default is 0.

inline **ExponentInfo** (const std::vector<int> &exponents)

Construct an *ExponentInfo* from a vector of exponents.

Parameters

exponents – Vector of exponent values. If size <= 1, uses per-tensor mode; otherwise uses per-channel mode with heap allocation.

inline **~ExponentInfo** ()

Destroy the *ExponentInfo* object and free heap-allocated memory.

inline **ExponentInfo** (const *ExponentInfo* &other)

Copy constructor.

Parameters

other – The *ExponentInfo* object to copy from.

inline *ExponentInfo* &**operator=** (const *ExponentInfo* &other)

Copy assignment operator.

Parameters

other – The *ExponentInfo* object to assign from.

Returns

Reference to this object.

inline **ExponentInfo** (*ExponentInfo* &&other) noexcept

Move constructor.

Parameters

other – The *ExponentInfo* object to move from.

inline *ExponentInfo* &**operator=** (*ExponentInfo* &&other) noexcept

Move assignment operator.

Parameters

other – The *ExponentInfo* object to move from.

Returns

Reference to this object.

inline *ExponentInfo* &**operator=** (int value)

Assign a single integer value as per-tensor exponent.

Parameters

value – The exponent value to assign.

Returns

Reference to this object.

inline int **get** (int ch = -1) const

Get exponent value.

Parameters

ch – Channel index. -1 (default) returns per-tensor value. ch >= 0 returns per-channel value if available, otherwise per-tensor.

Returns

The exponent value for the specified channel or per-tensor exponent.

inline **operator int** () const

Implicit conversion to int, returns the per-tensor exponent value.

Returns

The per-tensor exponent value.

inline bool **is_per_channel** () const

Check if using per-channel quantization.

Returns

true if per-channel exponents are stored, false otherwise.

inline bool **is_valid** () const

Check whether this object describes a usable scale.

Returns

false only when a per-channel exponent array could not be allocated. Quantized data governed by such an object cannot be interpreted, so its tensor must be rejected.

inline int **channel_size** () const

Get the number of channels.

Returns

Number of channels for per-channel mode, 1 for per-tensor mode, or 0 when invalid.

inline const int ***data** () const

Get pointer to exponent data.

Returns

Pointer to per-channel exponents array if available, otherwise pointer to per-tensor exponent.

inline bool **operator==** (const *ExponentInfo* &other) const

Compare two *ExponentInfo* objects for equality.

Parameters

other – The *ExponentInfo* object to compare with.

Returns

true if both are valid and have the same exponent values, false otherwise.

inline bool **operator!=** (const *ExponentInfo* &other) const

Compare two *ExponentInfo* objects for inequality.

Parameters

other – The *ExponentInfo* object to compare with.

Returns

true if exponent values differ, false if equal.

class **TensorBase**

This class is designed according to PyTorch Tensor. *TensorBase* is required to ensure that the first address are aligned to 16 bytes and the memory size should be a multiple of 16 bytes.

TODO:: Implement more functions

Public Functions

TensorBase (std::vector<int> shape, const void *element, int exponent = 0, dtype_t dtype = DATA_TYPE_FLOAT, bool deep = true, uint32_t caps = MALLOC_CAP_DEFAULT)

Construct a *TensorBase* object.

Parameters

- **shape** – Shape of tensor
- **element** – Pointer of data
- **exponent** – Exponent of tensor, default is 0

- **dtype** – Data type of element, default is float
- **deep** – True: malloc memory and copy data, false: use the pointer directly
- **caps** – Bitwise OR of `MALLOC_CAP_*` flags indicating the type of memory to be returned

TensorBase (std::vector<int> shape, const void *element, const std::vector<int> &exponents, dtype_t dtype = DATA_TYPE_FLOAT, bool deep = true, uint32_t caps = MALLOC_CAP_DEFAULT)

Construct a *TensorBase* object with per-channel exponents.

Warning: If the per-channel exponents cannot be allocated, the tensor is left empty (`data == nullptr`, `exponent.is_valid() == false`) and must not be used.

Parameters

- **shape** – Shape of tensor
- **element** – Pointer of data
- **exponents** – Per-channel exponents
- **dtype** – Data type of element, default is float
- **deep** – True: malloc memory and copy data, false: use the pointer directly
- **caps** – Bitwise OR of `MALLOC_CAP_*` flags indicating the type of memory to be returned

inline virtual ~**TensorBase** ()

Destroy the *TensorBase* object.

inline void ***operator new** (size_t size)

Allocate the tensor object itself.

`MALLOC_CAP_DEFAULT` prefers PSRAM when one is present and falls back to internal RAM otherwise, so a model holding many tensors does not spend internal RAM on the objects themselves.

Parameters

size – Size of the object in bytes

Returns

Pointer to the allocated memory

inline void **operator delete** (void *ptr)

Deallocate the tensor object.

Parameters

ptr – Pointer previously returned by operator new

bool **assign** (*TensorBase* *tensor)

Assign tensor to this tensor.

Parameters

tensor –

Returns

true if assign successfully, otherwise false.

bool **assign** (std::vector<int> shape, const void *element, int exponent, dtype_t dtype)

Assign data to this tensor.

Parameters

- **shape** –
- **element** –
- **exponent** –
- **dtype** –

Returns

true if assign successfully, otherwise false.

inline int **get_size** ()

Get the size of Tensor.

Returns

the size of Tensor.

inline int **get_aligned_size** ()

Get the aligned size of Tensor.

Returns

the aligned size of Tensor.

inline size_t **get_dtype_bytes** ()

Get the dtype size, in bytes.

Returns

the size of dtype.

inline const char ***get_dtype_string** ()

Get the dtype string of Tensor.

Returns

the string of Tensor's dtype.

inline int **get_bytes** ()

Get the bytes of Tensor.

Returns

the bytes of Tensor.

inline int **get_aligned_bytes** ()

Get the bytes of Tensor.

Returns

the bytes of Tensor.

inline virtual void ***get_element_ptr** ()

Get data pointer. If *cache(preload data pointer)* is not null, return cache pointer, otherwise return data pointer.

Returns

the pointer of Tensor's data

template<typename T>

inline T ***get_element_ptr** ()

Get data pointer by the specified template. If *cache(preload data pointer)* is not null, return cache pointer, otherwise return data pointer.

Returns

the pointer of Tensor's data

TensorBase &**set_element_ptr** (void *data)

Set the data pointer of Tensor.

Parameters

data – point to data memory

Returns

TensorBase& self

inline const std::vector<int> &**get_shape** () const

Get the shape of Tensor.

Returned by reference: operators query the shape several times per forward and the copies were costing more than the work they guarded.

Returns

std::vector<int> the shape of Tensor

TensorBase &**set_shape** (const std::vector<int> shape)

Set the shape of Tensor.

Parameters

shape – the shape of Tensor.

Returns

Tensor.

inline int **get_exponent** ()

Get the exponent of Tensor.

Returns

int the exponent of Tensor

inline dtype_t **get_dtype** ()

Get the data type of Tensor.

Returns

dtype_t the data type of Tensor

inline uint32_t **get_caps** ()

Get the memory flags of Tensor.

Returns

uint32_t the memory flags of Tensor

TensorBase ***reshape** (std::vector<int> shape)

Change a new shape to the Tensor without changing its data.

Parameters

shape – the target shape

Returns

TensorBase *self

template<typename T>

TensorBase ***flip** (const std::vector<int> &axes)

Flip the input Tensor along the specified axes.

Parameters

axes – the specified axes

Returns*TensorBase*& self*TensorBase* ***transpose** (*TensorBase* *input, std::vector<int> perm = {})

Reverse or permute the axes of the input Tensor.

Parameters

- **input** – the input Tensor
- **perm** – the new arrangement of the dims. if perm == {}, the dims arrangement will be reversed.

Returns*TensorBase* *self

template<typename T>

TensorBase ***transpose** (T *input_element, std::vector<int> &input_shape, std::vector<int> &input_axis_offset, std::vector<int> &perm)

Reverse or permute the axes of the input Tensor.

Parameters

- **input_element** – the input data pointer
- **input_shape** – the input data shape
- **input_axis_offset** – the input data axis offset
- **perm** – the new arrangement of the dims. if perm == {}, the dims arrangement will be reversed.

Returns*TensorBase* *selfbool **is_same_shape** (*TensorBase* *tensor)

Check the shape is the same as the shape of input.

Parameters**tensor** – Input tensor pointer**Returns**

- true: same shape
- false: not

bool **equal** (*TensorBase* *tensor, float epsilon = 1e-6, bool verbose = false)

Compare the shape and data of two Tensor.

Parameters

- **tensor** – Input tensor
- **epsilon** – The max error of two element
- **verbose** – If true, print the detail of results

Returns

true if two tensor is equal otherwise false

TensorBase ***slice** (const std::vector<int> &start, const std::vector<int> &end, const std::vector<int> &axes = {}, const std::vector<int> &step = {})

Produces a slice of the this tensor along multiple axes.

Warning: The length of start, end and step must be same as the shape of input tensor

Parameters

- **start** – Starting indices
- **end** – Ending indices
- **axes** – Axes that starts and ends apply to.
- **step** – Slice step, step = 1 if step is not specified

Returns

TensorBase* Output tensor pointer, created by this slice function

```
template<typename T>
TensorBase *pad (T *input_element, const std::vector<int> &input_shape, const std::vector<int> &pads, const
padding_mode_t mode, TensorBase *const_value = nullptr)
```

Pad input tensor.

Parameters

- **input_element** – Data pointer of input tensor
- **input_shape** – Shape of input tensor
- **pads** – The number of padding elements to add, pads format should be: [x1_begin, x2_begin, ..., x1_end, x2_end,...]
- **mode** – Supported modes: constant(default), reflect, edge
- **const_value** – (Optional) A scalar value to be used if the mode chosen is constant

Returns

Output tensor pointer

```
TensorBase *pad (TensorBase *input, const std::vector<int> &pads, const padding_mode_t mode, TensorBase
*const_value = nullptr)
```

Pad input tensor.

Parameters

- **input** – Input tensor pointer
- **pads** – Padding elements to add, pads format should be: [x1_begin, x2_begin, ..., x1_end, x2_end,...]
- **mode** – Supported modes: constant(default), reflect, edge
- **const_value** – (Optional) A scalar value to be used if the mode chosen is constant

Returns

Output tensor pointer

```
template<typename T>
bool compare_elements (const T *gt_elements, float epsilon = 1e-6, bool verbose = false)
```

Compare the elements of two Tensor.

Parameters

- **gt_elements** – The ground truth elements
- **epsilon** – The max error of two element
- **verbose** – If true, print the detail of results

Returns

true if all elements are equal otherwise false

int **get_element_index** (const std::vector<int> &axis_index)

Get the index of element.

Parameters

axis_index – The coordinates of element

Returns

int the index of element

std::vector<int> **get_element_coordinates** (int index)

Get the coordinates of element.

Parameters

index – The index of element

Returns

The coordinates of element

template<typename T>

T **get_element** (int index)

Get a element of Tensor by index.

Parameters

index – The index of element

Returns

The element of tensor

template<typename T>

T **get_element** (const std::vector<int> &axis_index)

Get a element of Tensor.

Parameters

axis_index – The index of element

Returns

The element of tensor

void **memset** (int value)

Set a element of Tensor by index.

Parameters

value – The value of element

void **rand** ()

Fill tensor data with random bytes from hardware RNG.

Uses `esp_fill_random()` to fill the tensor's internal buffer with random bytes. Requires ESP-IDF (`esp_random.h`).

size_t **set_preload_addr** (void *addr, size_t size)

Set preload address of Tensor.

Parameters

- **addr** – The address of preload data, should be aligned to 16 bytes
- **size** – Size of the preload buffer, in bytes

Returns

The number of bytes claimed at addr, or 0 if the buffer is too small

inline virtual void **preload** ()

Copy the data of Tensor into its preload buffer.

Call after any in-place layout rewrite (reset_bias_layout, reset_param_layout) so the buffer holds the layout the kernels expect.

void **reset_bias_layout** (quant_type_t op_quant_type, bool is_depthwise)

Reset the layout of Tensor.

Warning: Only available for Convolution. Don't use it unless you know exactly what it does.

Parameters

- **op_quant_type** – The quant type of operation
- **is_depthwise** – Whether is depthwise convolution

void **push** (*TensorBase* *new_tensor, int dim)

Push new_tensor to current tensor. The time series dimension size of new tensor must be lesser or equal than that of the current tensor.”.

Parameters

- **new_tensor** – The new tensor will be pushed
- **dim** – Specify the dimension on which to perform streaming stack pushes

virtual void **print** (bool print_data = false)

print the information of *TensorBase*

Parameters

print_data – Whether print the data

Public Members

int **size**

size of element including padding

std::vector<int> **shape**

shape of Tensor

dtype_t **dtype**

data type of element

ExponentInfo **exponent**

exponent of element (per-tensor or per-channel)

bool **auto_free**
 free element when object destroy

std::vector<int> **axis_offset**
 element offset of each axis

void ***data**
 data pointer

void ***cache**
 cache pointer[ⓘ] used for preload and do not need to free

uint32_t **caps**
 flags indicating the type of memory

Public Static Functions

static void **slice** (*TensorBase* *input, *TensorBase* *output, const std::vector<int> &start, const std::vector<int> &end, const std::vector<int> &axes = {}, const std::vector<int> &step = {})

Produces a slice along multiple axes.

Warning: The length of start, end and step must be same as the shape of input tensor

Parameters

- **input** – Input Tensor
- **output** – Output Tensor
- **start** – Starting indices
- **end** – Ending indices
- **axes** – Axes that starts and ends apply to.
- **step** – Slice step, step = 1 if step is not specified

4.2 Module API Reference

The Module is the base class for operators in esp-dl, and all operators inherit from this base class. This base class defines the basic interfaces for operators, enabling the model layer to automatically execute operators and manage memory planning.

4.2.1 Header File

- esp-dl/dl/module/include/dl_module_base.hpp

4.2.2 Classes

class **Module**

Base class for module.

Public Functions

Module (const char *name = NULL, module_inplace_t inplace = MODULE_NON_INPLACE, quant_type_t quant_type = QUANT_TYPE_NONE)

Construct a new *Module* object.

Parameters

- **name** – Name of module.
- **inplace** – Inplace operation mode
- **quant_type** – Quantization type

virtual **~Module** ()

Destroy the *Module* object. Return resource.

inline void ***operator new** (size_t size)

Allocate the module object itself.

MALLOC_CAP_DEFAULT prefers PSRAM when one is present and falls back to internal RAM otherwise, so a model's modules do not spend internal RAM on the objects themselves.

Parameters

size – Size of the object in bytes

Returns

Pointer to the allocated memory

inline void **operator delete** (void *ptr)

Deallocate the module object.

Parameters

ptr – Pointer previously returned by operator new

inline virtual std::vector<int> **get_outputs_index** ()

Get the tensor index of this module's outputs.

Returns

Tensor index of model's tensors

inline virtual bool **is_lut_module** () const

Whether this module uses a lookup table (LUT) as an extra input.

LUT modules load the table from the model initializer and append it to `m_inputs_index`.

Returns

true if the module is a LUT module, false otherwise

```
virtual std::vector<std::vector<int>> get_output_shape (std::vector<std::vector<int>> &input_shapes) = 0
```

Calculate output shape by input shape.

Parameters

input_shapes – Input shapes

Returns

outputs shapes

```
virtual void forward (ModelContext *context, runtime_mode_t mode = RUNTIME_MODE_AUTO) = 0
```

Build the module, high-level interface for *Module* layer.

Parameters

- **context** – *Model* context including all inputs and outputs and other runtime information
- **mode** – Runtime mode, default is RUNTIME_MODE_AUTO

```
inline virtual void forward_args (void *args)
```

Run the module, Low-level interface for base layer and multi-core processing.

Parameters

args – ArgsType, arithArgsType, resizeArgsType and so on

```
inline virtual void print ()
```

print module information

```
inline virtual void set_preload_addr (void *addr, size_t size)
```

set preload RAM pointer

Parameters

- **addr** – Internal RAM address, should be aligned to 16 bytes
- **size** – The size of RAM address

```
inline virtual void preload ()
```

Perform a preload operation.

| |
|--|
| <p>Warning: Not implemented</p> |
|--|

```
inline virtual void reset ()
```

reset all state of module, include inputs and outputs and preload cache setting

```
virtual void run (TensorBase *input, TensorBase *output, runtime_mode_t mode =  
RUNTIME_MODE_SINGLE_CORE)
```

Run the module with single input and single output.

Parameters

- **input** – Input tensor
- **output** – Output tensor
- **mode** – Runtime mode

```
virtual void run (std::vector<dl::TensorBase*> inputs, std::vector<dl::TensorBase*> outputs, runtime_mode_t  
mode = RUNTIME_MODE_SINGLE_CORE)
```

Run the module by inputs and outputs.

Parameters

- **inputs** – Input tensors
- **outputs** – Output tensors
- **mode** – Runtime mode

Public Members

char ***name**

Name of module.

module_inplace_t **inplace**

Inplace type.

quant_type_t **quant_type**

Quantization type.

std::vector<int> **m_inputs_index**

Tensor index of model's tensors that used for inputs.

std::vector<int> **m_outputs_index**

Tensor index of model's tensors that used for outputs.

Public Static Functions

static inline *Module* ***deserialize** (fbs::FbsModel *fbs_model, std::string node_name)

create module instance by node serialization information

Parameters

- **fbs_model** – Flatbuffer's model
- **node_name** – The node name in model's graph

Returns

The pointer of module instance

4.2.3 Header File

- `esp-dl/dl/module/include/dl_module_creator.hpp`

4.2.4 Classes

class **ModuleCreator**

Singleton class for registering modules.

Public Types

using **Creator** = std::function<*Module**(fbs::FbsModel*, std::string)>

Module creator function type.

Public Functions

inline void **register_module** (const std::string &op_type, *Creator* creator)

Register a module creator to the module creator map This function allows for the dynamic registration of new module types and their corresponding creator functions at runtime. By associating the module type name with the creator function, the system can flexibly create instances of various modules.

Parameters

- **op_type** – The module type name, used as the key in the map
- **creator** – The module creator function, used to create modules of a specific type

inline *Module* ***create** (fbs::FbsModel *fbs_model, const std::string &op_type, const std::string name)

Create module instance pointer.

Parameters

- **fbs_model** – Flatbuffer model pointer
- **op_type** – Module/Operator type
- **name** – *Module* name

Returns

Module instance pointer

inline void **register_dl_modules** ()

Pre-register the already implemented modules.

inline void **print** ()

Print all modules has been registered.

inline void **clear** ()

Clear all modules has been registered.

Public Static Functions

static inline *ModuleCreator* ***get_instance** ()

Get instance of *ModuleCreator* by this function. It is only safe method to get instance of *ModuleCreator* because *ModuleCreator* is a singleton class.

Returns

ModuleCreator instance pointer

4.3 Model API Reference

This section covers model loading and static memory planning, making it convenient for users to directly load and run ESPDL models.

4.3.1 Header File

- `esp-dl/dl/model/include/dl_model_base.hpp`

4.3.2 Macros

```
DL_LOG_INFER_LATENCY_INIT_WITH_SIZE (size)
DL_LOG_INFER_LATENCY_INIT ()
DL_LOG_INFER_LATENCY_START ()
DL_LOG_INFER_LATENCY_END ()
DL_LOG_INFER_LATENCY_PRINT (prefix, key)
DL_LOG_INFER_LATENCY_END_PRINT (prefix, key)
DL_LOG_INFER_LATENCY_ARRAY_INIT_WITH_SIZE (n, size)
DL_LOG_INFER_LATENCY_ARRAY_INIT (n)
DL_LOG_INFER_LATENCY_ARRAY_START (i)
DL_LOG_INFER_LATENCY_ARRAY_END (i)
DL_LOG_INFER_LATENCY_ARRAY_PRINT (i, prefix, key)
DL_LOG_INFER_LATENCY_ARRAY_END_PRINT (i, prefix, key)
```

4.3.3 Classes

class **Model**

Neural Network *Model*.

Public Functions

Model (const char *rodata_address_or_partition_label_or_path, fbs::model_location_type_t location = fbs::MODEL_LOCATION_IN_FLASH_RODATA, int max_internal_size = 0, memory_manager_t mm_type = MEMORY_MANAGER_GREEDY, const uint8_t *key = nullptr, bool param_copy = true, const std::map<std::string, std::vector<int>> &input_shapes = {})

Create the *Model* object by rodata address or partition label.

Parameters

- **rodata_address_or_partition_label_or_path** – The address of model data while location is `MODEL_LOCATION_IN_FLASH_RODATA`. The label of partition while location is `MODEL_LOCATION_IN_FLASH_PARTITION`. The path of model while location is `MODEL_LOCATION_IN_SDCARD`.
- **location** – The model location.
- **max_internal_size** – In bytes. Limit the max internal size usage. Only take effect when there's a PSRAM, and you want to alloc memory on internal RAM first.
- **mm_type** – Type of memory manager
- **key** – The key of encrypted model.
- **param_copy** – Set to false to avoid copy model parameters from FLASH to PSRAM. Only set this param to false when your PSRAM resource is very tight. This saves PSRAM and sacrifices the performance of model inference because the frequency of PSRAM is higher than FLASH. Only takes effect when `MODEL_LOCATION_IN_FLASH_RODATA(CONFIG_SPIRAM_RODATA not set)` or `MODEL_LOCATION_IN_FLASH_PARTITION`.
- **input_shapes** – Optional map to override graph input shapes. The key is the graph input name and the value is the shape. If empty, the shapes stored in the model are used.

Model (const char *rodata_address_or_partition_label_or_path, int model_index, fbs::model_location_type_t location = fbs::MODEL_LOCATION_IN_FLASH_RODATA, int max_internal_size = 0, memory_manager_t mm_type = MEMORY_MANAGER_GREEDY, const uint8_t *key = nullptr, bool param_copy = true, const std::map<std::string, std::vector<int>> &input_shapes = {})

Create the *Model* object by rodata address or partition label.

Parameters

- **rodata_address_or_partition_label_or_path** – The address of model data while location is `MODEL_LOCATION_IN_FLASH_RODATA`. The label of partition while location is `MODEL_LOCATION_IN_FLASH_PARTITION`. The path of model while location is `MODEL_LOCATION_IN_SDCARD`.
- **model_index** – The model index of packed models.
- **location** – The model location.
- **max_internal_size** – In bytes. Limit the max internal size usage. Only take effect when there's a PSRAM, and you want to alloc memory on internal RAM first.
- **mm_type** – Type of memory manager
- **key** – The key of encrypted model.
- **param_copy** – Set to false to avoid copy model parameters from FLASH to PSRAM. Only set this param to false when your PSRAM resource is very tight. This saves PSRAM and sacrifices the performance of model inference because the frequency of PSRAM is higher than FLASH. Only takes effect when `MODEL_LOCATION_IN_FLASH_RODATA(CONFIG_SPIRAM_RODATA not set)` or `MODEL_LOCATION_IN_FLASH_PARTITION`.
- **input_shapes** – Optional map to override graph input shapes. The key is the graph input name and the value is the shape. If empty, the shapes stored in the model are used.

Model (const char *rodata_address_or_partition_label_or_path, const char *model_name, fbs::model_location_type_t location = fbs::MODEL_LOCATION_IN_FLASH_RODATA, int max_internal_size = 0, memory_manager_t mm_type = MEMORY_MANAGER_GREEDY, const uint8_t *key = nullptr, bool param_copy = true, const std::map<std::string, std::vector<int>> &input_shapes = {})

Create the *Model* object by rodata address or partition label.

Parameters

- **rodata_address_or_partition_label_or_path** – The address of model data while location is `MODEL_LOCATION_IN_FLASH_RODATA`. The label of partition while location is `MODEL_LOCATION_IN_FLASH_PARTITION`. The path of model while location is `MODEL_LOCATION_IN_SDCARD`.
- **model_name** – The model name of packed models.
- **location** – The model location.
- **max_internal_size** – In bytes. Limit the max internal size usage. Only take effect when there's a PSRAM, and you want to alloc memory on internal RAM first.
- **mm_type** – Type of memory manager
- **key** – The key of encrypted model.
- **param_copy** – Set to false to avoid copy model parameters from FLASH to PSRAM. Only set this param to false when your PSRAM resource is very tight. This saves PSRAM and sacrifices the performance of model inference because the frequency of PSRAM is higher than FLASH. Only takes effect when `MODEL_LOCATION_IN_FLASH_RODATA(CONFIG_SPIRAM_RODATA not set)` or `MODEL_LOCATION_IN_FLASH_PARTITION`.
- **input_shapes** – Optional map to override graph input shapes. The key is the graph input name and the value is the shape. If empty, the shapes stored in the model are used.

Model (fbs::FbsModel *fbs_model, int internal_size = 0, memory_manager_t mm_type = MEMORY_MANAGER_GREEDY, const std::map<std::string, std::vector<int>> &input_shapes = {})

Create the *Model* object by fbs_model.

Parameters

- **fbs_model** – The fbs model.
- **internal_size** – Internal ram size, in bytes
- **mm_type** – Type of memory manager
- **input_shapes** – Optional map to override graph input shapes. The key is the graph input name and the value is the shape. If empty, the shapes stored in the model are used.

virtual ~**Model** ()

Destroy the *Model* object.

virtual esp_err_t **load** (const char *rodata_address_or_partition_label_or_path, fbs::model_location_type_t location = fbs::MODEL_LOCATION_IN_FLASH_RODATA, const uint8_t *key = nullptr, bool param_copy = true)

Load model graph and parameters from FLASH or sdcard.

Parameters

- **rodata_address_or_partition_label_or_path** – The address of model data while location is `MODEL_LOCATION_IN_FLASH_RODATA`. The label of partition while location is `MODEL_LOCATION_IN_FLASH_PARTITION`. The path of model while location is `MODEL_LOCATION_IN_SDCARD`.
- **location** – The model location.
- **key** – The key of encrypted model.

- **param_copy** – Set to false to avoid copy model parameters from FLASH to PSRAM. Only set this param to false when your PSRAM resource is very tight. This saves PSRAM and sacrifices the performance of model inference because the frequency of PSRAM is higher than FLASH. Only takes effect when `MODEL_LOCATION_IN_FLASH_RODATA(CONFIG_SPIRAM_RODATA not set)` or `MODEL_LOCATION_IN_FLASH_PARTITION`.

Returns

- `ESP_OK` Success
- `ESP_FAIL` Failed

virtual esp_err_t **load** (const char *rodata_address_or_partition_label_or_path, fbs::model_location_type_t location = fbs::MODEL_LOCATION_IN_FLASH_RODATA, int model_index = 0, const uint8_t *key = nullptr, bool param_copy = true)

Load model graph and parameters from FLASH or sdcard.

Parameters

- **rodata_address_or_partition_label_or_path** – The address of model data while location is `MODEL_LOCATION_IN_FLASH_RODATA`. The label of partition while location is `MODEL_LOCATION_IN_FLASH_PARTITION`. The path of model while location is `MODEL_LOCATION_IN_SDCARD`.
- **location** – The model location.
- **model_index** – The model index of packed models.
- **key** – The key of encrypted model.
- **param_copy** – Set to false to avoid copy model parameters from FLASH to PSRAM. Only set this param to false when your PSRAM resource is very tight. This saves PSRAM and sacrifices the performance of model inference because the frequency of PSRAM is higher than FLASH. Only takes effect when `MODEL_LOCATION_IN_FLASH_RODATA(CONFIG_SPIRAM_RODATA not set)` or `MODEL_LOCATION_IN_FLASH_PARTITION`.

Returns

- `ESP_OK` Success
- `ESP_FAIL` Failed

virtual esp_err_t **load** (const char *rodata_address_or_partition_label_or_path, fbs::model_location_type_t location = fbs::MODEL_LOCATION_IN_FLASH_RODATA, const char *model_name = nullptr, const uint8_t *key = nullptr, bool param_copy = true)

Load model graph and parameters from FLASH or sdcard.

Parameters

- **rodata_address_or_partition_label_or_path** – The address of model data while location is `MODEL_LOCATION_IN_FLASH_RODATA`. The label of partition while location is `MODEL_LOCATION_IN_FLASH_PARTITION`. The path of model while location is `MODEL_LOCATION_IN_SDCARD`.
- **location** – The model location.
- **model_name** – The model name of packed models.
- **key** – The key of encrypted model.

- **param_copy** – Set to false to avoid copy model parameters from FLASH to PSRAM. Only set this param to false when your PSRAM resource is very tight. This saves PSRAM and sacrifices the performance of model inference because the frequency of PSRAM is higher than FLASH. Only takes effect when MODEL_LOCATION_IN_FLASH_RODATA(CONFIG_SPIRAM_RODATA not set) or MODEL_LOCATION_IN_FLASH_PARTITION.

Returns

- ESP_OK Success
- ESP_FAIL Failed

virtual esp_err_t **load** (fbs::FbsModel *fbs_model)

Load model graph and parameters from Flatbuffers model.

Parameters

fbs_model – The FlatBuffers model

Returns

- ESP_OK Success
- ESP_FAIL Failed

virtual void **build** (size_t max_internal_size, memory_manager_t mm_type = MEMORY_MANAGER_GREEDY, bool preload = false, const std::map<std::string, std::vector<int>>> &input_shapes = {})

Allocate memory for the model.

Parameters

- **max_internal_size** – In bytes. Limit the max internal size usage. Only take effect when there's a PSRAM, and you want to alloc memory on internal RAM first.
- **mm_type** – Type of memory manager
- **preload** – Whether to preload the model's parameters to internal ram (not implemented yet)
- **input_shapes** – Optional map to override graph input shapes. The key is the graph input name and the value is the shape. If empty, the shapes stored in the model are used.

virtual void **run** (runtime_mode_t mode = RUNTIME_MODE_SINGLE_CORE)

Run the model module by module.

Parameters

mode – Runtime mode.

virtual void **run** (TensorBase *input, runtime_mode_t mode = RUNTIME_MODE_SINGLE_CORE)

Run the model module by module.

Parameters

- **input** – The model input.
- **mode** – Runtime mode.

virtual void **run** (std::map<std::string, TensorBase*> &user_inputs, runtime_mode_t mode = RUNTIME_MODE_SINGLE_CORE, std::map<std::string, TensorBase*> user_outputs = {})

Run the model module by module.

Parameters

- **user_inputs** – The model inputs.
- **mode** – Runtime mode.
- **user_outputs** – It's for debug to specify the output of the intermediate layer; Under normal use, there is no need to pass a value to this parameter. If no parameter is passed, the default is the graphical output, which can be obtained through `Model::get_outputs()`.

virtual void **run** (int stage_num, int stage_index, runtime_mode_t mode =
 RUNTIME_MODE_SINGLE_CORE)

Run a single stage of the model.

The execution plan is split into `stage_num` near-equal segments and only the segment indexed by `stage_index` is executed. The stage progress is managed by the caller (no state is kept inside the model), so a full inference is done by calling this for `stage_index` from 0 to `stage_num - 1`. Inputs/outputs are handled the same way as the other `run()` overloads (assign inputs before running stage 0, read outputs after running the last stage).

Parameters

- **stage_num** – Total number of stages to split the execution plan into (≥ 1).
- **stage_index** – Index of the stage to execute, in range $[0, \text{stage_num})$.
- **mode** – Runtime mode.

void **minimize** ()

Minimize the model.

esp_err_t **test** ()

Test whether the model inference result is correct. The model should contain `test_inputs` and `test_outputs`. Enable `export_test_values` option in `esp-ppq` to use this api.

Returns

esp_err_t

std::map<std::string, mem_info_t> **get_memory_info** ()

Get memory info.

Returns

Memory usage statistics on internal and PSRAM.

std::map<std::string, module_info> **get_module_info** ()

Get module info.

Returns

return Type and latency of each module.

void **print_module_info** (const std::map<std::string, module_info> &info, bool sort_module_by_latency =
 false)

Print the module info obtained by `get_module_info` function.

Parameters

- **info** –
- **sort_module_by_latency** –

void **profile_memory** ()

Print model memory summary.

void **profile_module** (bool sort_module_by_latency = false)

Print module info summary. (Name, Type, Latency)

Parameters

sort_module_by_latency – True The module is printed in latency decreasing sort.
False The module is printed in ONNX topological sort.

void **profile** (bool sort_module_by_latency = false)

Combination of profile_memory & profile_module.

Parameters

sort_module_by_latency – True The module is printed in latency decreasing sort.
False The module is printed in ONNX topological sort.

virtual std::map<std::string, *TensorBase*> &**get_inputs** ()

Get inputs of model.

Returns

The map of model input's name and TensorBase*

virtual *TensorBase* ***get_input** ()

Get the only input of model.

Returns

TensorBase*

virtual *TensorBase* ***get_input** (const std::string &name)

Get input of model by name.

Parameters

name – input name

Returns

TensorBase*

virtual *TensorBase* ***get_intermediate** (const std::string &name)

Get intermediate *TensorBase* of model.

Note: When using memory manager, the content of *TensorBase*'s data may be overwritten by the outputs of other

Parameters

name – The name of intermediate Tensor. operators.

Returns

The intermediate TensorBase*.

virtual std::map<std::string, *TensorBase*> &**get_outputs** ()

Get outputs of model.

Returns

The map of model output's name and TensorBase*

virtual *TensorBase* ***get_output** ()

Get the only output of model.

Returns

TensorBase*

virtual *TensorBase* ***get_output** (const std::string &name)

Get output of model by name.

Parameters

name – output name

Returns

TensorBase*

std::string **get_metadata_prop** (const std::string &key)

Get the model's metadata prop.

Parameters

key – The key of metadata prop

Returns

The value of metadata prop

virtual void **print** ()

Print the model.

virtual void **reset** ()

Reset the model. This function resets the model context and all modules, but does not reload the model or rebuild the execution plan.

inline virtual *fbs::FbsModel* ***get_fbs_model** ()

Get the fbs model instance.

Returns

fbs::FbsModel *

4.3.4 Header File

- esp-dl/dl/model/include/dl_model_context.hpp

4.3.5 Macros

CONTEXT_PARAMETER_OFFSET

Offset for parameter tensors

4.3.6 Classes

class **ModelContext**

Model Context class including variable tensors and parameters.

Public Functions

inline **ModelContext** ()

Constructor for *ModelContext*. Initializes the PSRAM and internal root pointers to nullptr.

inline **~ModelContext** ()

Destructor for *ModelContext*. Clears all resources and tensors.

int **add_tensor** (const std::string name, bool is_paramter = false, *TensorBase* *tensor = nullptr)

Adds a tensor to the parameter or variable list.

Parameters

- **name** – The name of the tensor.
- **is_paramter** – Whether the tensor is a parameter (default: false).
- **tensor** – Pointer to the *TensorBase* object (default: nullptr).

Returns

int Returns the index of the added tensor.

int **push_back_tensor** (*TensorBase* *tensor, bool is_paramter = false)

Push back a tensor.

Parameters

- **tensor** – Pointer to the *TensorBase* object.
- **is_paramter** – Whether the tensor is a parameter (default: false).

Returns

int Returns the index of the added tensor.

void **update_tensor** (int index, *TensorBase* *tensor)

Updates the tensor at the specified index.

Parameters

- **index** – The index of the tensor to update.
- **tensor** – Pointer to the new *TensorBase* object.

TensorBase ***get_tensor** (int index)

Gets the tensor by its index.

Parameters

index – The index of the tensor.

Returns

*TensorBase** Returns the pointer to the *TensorBase* object, or nullptr if the index is invalid.

TensorBase ***get_tensor** (const std::string &name)

Gets the tensor by its name.

Parameters

name – The name of the tensor.

Returns

*TensorBase** Returns the pointer to the *TensorBase* object, or nullptr if the name is not found.

int **get_tensor_index** (const std::string &name)

Gets the tensor index by its name.

Parameters

name – The name of the tensor.

Returns

int Returns index if the name is found, else -1

bool **has_tensor** (const std::string &name) const

Checks if a tensor exists by its name.

Parameters

name – The name of the tensor.

Returns

bool Returns true if the tensor exists, false otherwise.

int **get_variable_index** (const std::string &name)

Gets the variable tensor index by its name.

Parameters

name – The name of the tensor.

Returns

int Returns index if the name is found and is variable tensor, else -1

inline int **get_variable_count** ()

Gets the count of variable tensors.

Returns

int Returns the number of variable tensors.

inline int **get_parameter_count** ()

Gets the count of parameter tensors.

Returns

int Returns the number of parameter tensors.

bool **root_alloc** (size_t internal_size, size_t psram_size, int alignment = 16)

Allocates memory for PSRAM and internal roots.

Parameters

- **internal_size** – The size of the internal memory in bytes.
- **psram_size** – The size of the PSRAM memory in bytes.
- **alignment** – The alignment of the memory in bytes.

Returns

Bool Return true if the allocation is successful, false otherwise.

inline void ***get_psram_root** ()

Gets the pointer to the PSRAM root.

Returns

Void* Returns the pointer to the PSRAM root.

inline void ***get_internal_root** ()

Gets the pointer to the internal root.

Returns

Void* Returns the pointer to the internal root.

size_t **get_parameter_memory_size** (mem_info_t &mem_info, bool copy)

Gets the size of the parameters in bytes.

Parameters

- **mem_info** – The size of the memory used by the parameters in bytes, filtered by copy option.
- **copy** – Filter the parameters by auto_free.

Returns

size_t Returns the total size of the parameters memory in bytes.

size_t **get_variable_memory_size** (mem_info_t &mem_info)

Get the variable memory size object.

Parameters

mem_info – The size of the memory used by the variables in bytes.

Returns

size_t Returns the total size of the variables memory in bytes.

inline void **root_free** ()

Frees the memory allocated for PSRAM and internal roots. This function ensures proper cleanup of allocated memory.

inline void **root_reset** ()

Resets the context by clearing variables, parameters, and name-to-index map. This is used to reset the state of the context for a new inference or after an inference.

inline void **minimize** ()

Minimizes the context by clearing the name-to-index map. This is used to free unnecessary intermediate variables during the inference.

inline void **release_tensors** ()

Drops all tensor references without deleting the tensors. Used by contexts that only borrow tensors owned by the caller.

inline void **clear** ()

Clears all resources and tensors in the context. This includes clearing variables, parameters, name-to-index map, and freeing memory.

Public Members

std::vector<TensorBase*> **m_variables**

Variable tensors of model, the first one is nullptr

std::vector<TensorBase*> **m_parameters**

Parameters of model, the first one is nullptr

4.3.7 Header File

- esp-dl/dl/model/include/dl_memory_manager.hpp

4.3.8 Classes

class **MemoryManagerBase**

Memory manager base class, each model has its own memory manager TODO: share memory manager with different models.

Subclassed by *dl::MemoryManagerGreedy*

Public Functions

inline **MemoryManagerBase** (int alignment = 16)

Construct a new Memory Manager Base object.

Parameters

alignment – Memory address alignment

inline virtual **~MemoryManagerBase** ()

Destroy the MemoryManager object. Return resource.

virtual bool **alloc** (fbs::FbsModel *fbs_model, std::vector<dl::module::Module*> &execution_plan, *ModelContext* *context, const std::map<std::string, std::vector<int>> &input_shapes = {}) = 0

Allocate memory for each tensor, include all input and output tensors.

Parameters

- **fbs_model** – FlatBuffer's *Model*
- **execution_plan** – Topological sorted module list
- **context** – *Model* context
- **input_shapes** – Optional map to override graph input shapes. The key is the graph input name and the value is the shape. If empty, the shapes stored in fbs_model are used.

Returns

Bool Return true if the allocation is successful, false otherwise.

Public Members

int **alignment**

The root pointer needs to be aligned must be a power of two

class **TensorInfo**

Tensor info, include tensor name, shape, dtype, size, time range and call times, which is used to plan model memory.

Public Functions

TensorInfo (std::string &name, int time_begin, int time_end, std::vector<int> shape, dtype_t dtype, int exponent, bool is_internal = false)

Construct a new Tensor Info object.

Parameters

- **name** – Tensor name
- **time_begin** – Tensor lifetime begin
- **time_end** – Tensor lifetime end
- **shape** – Tensor shape
- **dtype** – Tensor dtype
- **exponent** – Tensor exponent
- **is_internal** – Is tensor in internal RAM or not

inline ~**TensorInfo** ()

Destroy the Tensor Info object.

void **set_inplace_leader_tensor** (*TensorInfo* *tensor)

Set the inplace leader tensor object.

Parameters

tensor – Inplace leader tensor

inline void **set_inplace_follower_dirty_tensor** (*TensorInfo* *tensor)

Set the inplace follower dirty tensor object.

Parameters

tensor – Inplace follower dirty tensor

inline void **set_inplace_follower_clean_tensor** (*TensorInfo* *tensor)

Set the inplace follower clean tensor object.

Parameters

tensor – Inplace follower clean tensor

inline std::pair<*TensorInfo**, *TensorInfo*> **get_inplace_follower_tensor** ()

Get the inplace follower tensor object.

Returns

std::pair<TensorInfo *, TensorInfo *>

void **update_time** (int new_time)

Update Tensor lifetime.

Parameters

new_time – new tensor lifetime

TensorBase ***create_tensor** (void *internal_root, void *psram_root)

Create a *TensorBase* object according to *TensorInfo*.

Parameters

- **internal_root** – Internal RAM root pointer
- **psram_root** – PSRAM root pointer

Returns

TensorBase*

inline bool **is_inplaced** ()

Is inplace or not.

Returns

true if inplace else false

inline uint32_t **get_offset** ()

Get the tensor offset.

Returns

uint32_t

inline void **set_offset** (uint32_t offset)

Set the tensor offset.

Parameters**offset** –inline uint32_t **get_internal_offset** ()

Get the internal offset.

Returns

uint32_t

inline bool **get_internal_state** ()

Get the internal state.

Returns

true if is internal else false

inline void **set_internal_state** (bool is_internal)

Set the internal state.

Parameters**is_internal** –inline void **set_internal_offset** (uint32_t offset)

Set the internal offset.

Parameters**offset** –inline int **get_time_end** ()

Get the lifetime end.

Returns

int

inline int **get_time_begin** ()

Get the lifetime begin.

Returns

int

inline size_t **get_size** ()

Get the tensor size.

Returns

size_t

```
inline std::string get_name ()
```

Get the tensor name.

Returns

std::string

```
inline std::vector<int> get_shape ()
```

Get the tensor shape.

Returns

std::vector<int>

```
inline void print ()
```

print tensor info

class **MemoryChunk**

Memory chunk, include size, is free, offset, alignment and tensor, which is used to simulate memory allocation.

Public Functions

MemoryChunk (size_t size, int is_free, int alignment = 16)

Construct a new Memory Chunk object.

Parameters

- **size** – Memory chunk size
- **is_free** – Whether free or not
- **alignment** – Memory chunk alignment

MemoryChunk (*TensorInfo* *tensor, int alignment = 16)

Construct a new Memory Chunk object.

Parameters

- **tensor** – *TensorInfo*
- **alignment** – Memory chunk alignment

```
inline ~MemoryChunk ()
```

Destroy the Memory Chunk object.

MemoryChunk ***merge_free_chunk** (*MemoryChunk* *chunk)

Merge continuous free chunk.

Parameters

chunk –

Returns

MemoryChunk*

MemoryChunk ***insert** (*TensorInfo* *tensor)

Insert tensor into free chunk.

Parameters

tensor –

Returns

MemoryChunk*

MemoryChunk ***extend** (*TensorInfo* *tensor)

Extend free chunk and insert tensor.

Parameters

tensor –

Returns

MemoryChunk*

inline void **free** ()

Free memory chunk, set is_free to true and set tensor to nullptr.

Public Members

size_t **size**

Memory chunk size

bool **is_free**

Whether memory chunk is free or not

int **offset**

Offset relative to root pointer

int **alignment**

Memory address alignment

TensorInfo ***tensor**

Info of the tensor which occupies the memory

4.3.9 Header File

- esp-dl/dl/model/include/dl_memory_manager_greedy.hpp

4.3.10 Classes

class **MemoryManagerGreedy** : public dl::MemoryManagerBase

Greedy memory manager that allocates memory for tensors in execution order, prioritizing internal RAM allocation first.

Public Functions

inline **MemoryManagerGreedy** (int max_internal_size, int alignment = 16)

Constructs a greedy memory manager with specified constraints.

Parameters

- **max_internal_size** – Maximum allowed internal RAM usage in bytes
- **alignment** – Memory address alignment requirement (default: 16 bytes)

inline **~MemoryManagerGreedy** ()

Destructor that releases all managed memory resources.

virtual bool **alloc** (fbs::FbsModel *fbs_model, std::vector<dl::module::Module*> &execution_plan,
ModelContext *context, const std::map<std::string, std::vector<int>> &input_shapes = {})
override

Allocates memory for all network tensors following greedy strategy.

Parameters

- **fbs_model** – FlatBuffer model containing network architecture
- **execution_plan** – Execution graph ordered by computation dependencies
- **context** – Device-specific runtime configuration
- **input_shapes** – Optional map to override shapes of graph inputs for allocation

Returns

bool True if successful allocation, false if memory insufficient

void **free** ()

Releases all allocated memory including tensor buffers and memory pools.

4.4 Fbs API Reference

The esp-dl model utilizes FlatBuffers to store information about parameters and the computation graph. Taking into account the encryption requirements of some models, this part has not been open-sourced. However, we provide a set of APIs to facilitate users in loading and parsing esp-dl models.

4.4.1 Header File

- [esp-dl/fbs_loader/include/fbs_loader.hpp](#)

4.4.2 Classes

class **FbsLoader**

Class for parser the flatbuffers.

Public Functions

FbsLoader (const char *rodata_address_or_partition_label_or_path = nullptr, model_location_type_t location = MODEL_LOCATION_IN_FLASH_RODATA)

Construct a new *FbsLoader* object.

Parameters

- **rodata_address_or_partition_label_or_path** – The address of model data while location is MODEL_LOCATION_IN_FLASH_RODATA. The label of partition while location is MODEL_LOCATION_IN_FLASH_PARTITION. The path of model while location is MODEL_LOCATION_IN_SDCARD.
- **location** – The model location.

~FbsLoader ()

Destroy the *FbsLoader* object.

FbsModel ***load** (const uint8_t *key = nullptr, bool param_copy = true)

Load the model. If there are multiple sub-models, the first sub-model will be loaded.

Parameters

- **key** – NULL or a 128-bit AES key, like {0x00, 0x01, 0x02, 0x03, 0x04, 0x05, 0x06, 0x07, 0x08, 0x09, 0x0a, 0x0b, 0x0c, 0x0d, 0x0e, 0x0f}
- **param_copy** – Set to false to avoid copy model parameters from FLASH to PSRAM. Only set this param to false when your PSRAM resource is very tight. This saves PSRAM and sacrifices the performance of model inference because the frequency of PSRAM is higher than FLASH. Only takes effect when MODEL_LOCATION_IN_FLASH_RODATA(CONFIG_SPIRAM_RODATA not set) or MODEL_LOCATION_IN_FLASH_PARTITION.

Returns

Return nullptr if loading fails. Otherwise return the pointer of *FbsModel*.

FbsModel ***load** (const int model_index, const uint8_t *key = nullptr, bool param_copy = true)

Load the model by model index.

Parameters

- **model_index** – The index of model.
- **key** – NULL or a 128-bit AES key, like {0x00, 0x01, 0x02, 0x03, 0x04, 0x05, 0x06, 0x07, 0x08, 0x09, 0x0a, 0x0b, 0x0c, 0x0d, 0x0e, 0x0f}.
- **param_copy** – Set to false to avoid copy model parameters from FLASH to PSRAM. Only set this param to false when your PSRAM resource is very tight. This saves PSRAM and sacrifices the performance of model inference because the frequency of PSRAM is higher than FLASH. Only takes effect when MODEL_LOCATION_IN_FLASH_RODATA(CONFIG_SPIRAM_RODATA not set) or MODEL_LOCATION_IN_FLASH_PARTITION.

Returns

Return nullptr if loading fails. Otherwise return the pointer of *FbsModel*.

FbsModel ***load** (const char *model_name, const uint8_t *key = nullptr, bool param_copy = true)

Load the model by model name.

Parameters

- **model_name** – The name of model.

- **key** – NULL or a 128-bit AES key, like {0x00, 0x01, 0x02, 0x03, 0x04, 0x05, 0x06, 0x07, 0x08, 0x09, 0x0a, 0x0b, 0x0c, 0x0d, 0x0e, 0x0f}
- **param_copy** – Set to false to avoid copy model parameters from FLASH to PSRAM. Only set this param to false when your PSRAM resource is very tight. This saves PSRAM and sacrifices the performance of model inference because the frequency of PSRAM is higher than FLASH. Only takes effect when MODEL_LOCATION_IN_FLASH_RODATA(CONFIG_SPIRAM_RODATA not set) or MODEL_LOCATION_IN_FLASH_PARTITION.

Returns

Return nullptr if loading fails. Otherwise return the pointer of *FbsModel*.

int **get_model_num** ()

Get the number of models.

Returns

The number of models

void **list_models** ()

List all model's name.

std::string **get_model_name** (int model_index)

Get the name of a packed model by its index.

Note: Only valid for packed multi-model formats (PDL1/PDL2/PDL3).

Parameters

model_index – The index of the model in the packed package.

Returns

The model entry name, or an empty string when the flatbuffers is empty, the index is out of range, or the loaded file is not a packed multi-model format.

const char* **get_model_location_string** ()

Get the model location string.

Returns

The model location string.

fbs_file_format_t **get_model_format** ()

Get the format of the loaded model/package.

Returns

The format of the model, or FBS_FILE_FORMAT_UNK if the flatbuffers is empty or the format is unrecognized.

esp_err_t **get_package_version** (char *out_version, size_t out_size)

Get the package version string of a PDL3 package.

Note: Only valid for the PDL3 format.

Parameters

- **out_version** – Output buffer that receives the '\0' terminated version string.

- **out_size** – Size of the output buffer in bytes. Must be at least 16 bytes to hold the full field.

Returns

ESP_OK on success. ESP_ERR_NOT_SUPPORTED if the package is not PDL3.
ESP_ERR_INVALID_ARG / ESP_ERR_INVALID_SIZE on bad arguments.

uint32_t **get_package_size** ()

Get the package_size field of a PDL3 package.

Note: Only valid for the PDL3 format.

Returns

The valid byte count of the PDL3 package, or 0 if the package is not PDL3.

esp_err_t **get_package_sha256** (uint8_t out_sha256[32])

Get the package_sha256 field stored in a PDL3 package header.

Note: Only valid for the PDL3 format. This returns the digest stored in the package, it does not recompute it.

Parameters

out_sha256 – Output buffer that receives the 32-byte digest.

Returns

ESP_OK on success. ESP_ERR_NOT_SUPPORTED if the package is not PDL3.
ESP_ERR_INVALID_ARG on bad arguments.

esp_err_t **calc_package_sha256** (uint8_t out_sha256[32])

Recompute the SHA256 digest of a PDL3 package.

The digest is computed over the package bytes [0, package_size), where the 32 bytes of the package_sha256 field are treated as all zeros. Only the PDL3 header and the data within package_size are read.

Parameters

out_sha256 – Output buffer that receives the recomputed 32-byte digest.

Returns

ESP_OK on success. ESP_ERR_NOT_SUPPORTED if the package is not PDL3.
ESP_ERR_INVALID_ARG on bad arguments.

bool **verify_package_sha256** ()

Verify the integrity of a PDL3 package.

Recomputes the SHA256 digest (see calc_package_sha256) and compares it with the package_sha256 field stored in the header.

Returns

true if the package is PDL3 and the recomputed digest matches the stored digest, false otherwise.

4.4.3 Header File

- `esp-dl/fbs_loader/include/fbs_model.hpp`

4.4.4 Classes

class **FbsModel**

Flatbuffer model object.

Public Functions

FbsModel (const void *data, size_t size, model_location_type_t location, bool encrypt, bool rodata_move, bool auto_free, bool param_copy)

Construct a new *FbsModel* object.

Parameters

- **data** – The data of model flatbuffers.
- **size** – The size of model flatbuffers in bytes.
- **location** – The location of model flatbuffers.
- **encrypt** – Whether the model flatbuffers is encrypted or not.
- **rodata_move** – Whether the model flatbuffers is moved from FLASH rodata to PSRAM.
- **auto_free** – Whether to free the model flatbuffers data when destroy this class instance.
- **param_copy** – Whether to copy the parameter in flatbuffers.

~FbsModel ()

Destroy the *FbsModel* object.

void **print** ()

Print the model information.

std::vector<std::string> **topological_sort** ()

Return vector of node name in the order of execution.

Returns

topological sort of node name.

esp_err_t **get_operation_attribute** (std::string node_name, std::string attribute_name, int &ret_value)

Get the attribute of node.

Parameters

- **node_name** – The name of operation.
- **attribute_name** – The name of attribute.
- **ret_value** – The attribute value.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

```
esp_err_t get_operation_attribute (std::string node_name, std::string attribute_name, float
                                     &ret_value)
```

Get the attribute of node.

Parameters

- **node_name** – The name of operation.
- **attribute_name** – The name of attribute.
- **ret_value** – The attribute value.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

```
esp_err_t get_operation_attribute (std::string node_name, std::string attribute_name, std::string
                                     &ret_value)
```

Get the attribute of node.

Parameters

- **node_name** – The name of operation.
- **attribute_name** – The name of attribute.
- **ret_value** – The attribute value.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

```
esp_err_t get_operation_attribute (std::string node_name, std::string attribute_name, std::vector<int>
                                     &ret_value)
```

Get the attribute of node.

Parameters

- **node_name** – The name of operation.
- **attribute_name** – The name of attribute.
- **ret_value** – The attribute value.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

```
esp_err_t get_operation_attribute (std::string node_name, std::string attribute_name,
                                     std::vector<float> &ret_value)
```

Get the attribute of node.

Parameters

- **node_name** – The name of operation.
- **attribute_name** – The name of attribute.
- **ret_value** – The attribute value.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

```
esp_err_t get_operation_attribute (std::string node_name, std::string attribute_name, dl::quant_type_t
                                     &ret_value)
```

Get the attribute of node.

Parameters

- **node_name** – The name of operation.
- **attribute_name** – The name of attribute.
- **ret_value** – The attribute value.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

esp_err_t **get_operation_attribute** (std::string node_name, std::string attribute_name, dl::activation_type_t &ret_value)

Get the attribute of node.

Parameters

- **node_name** – The name of operation.
- **attribute_name** – The name of attribute.
- **ret_value** – The attribute value.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

esp_err_t **get_operation_attribute** (std::string node_name, std::string attribute_name, dl::resize_mode_t &ret_value)

Get the attribute of node.

Parameters

- **node_name** – The name of operation.
- **attribute_name** – The name of attribute.
- **ret_value** – The attribute value.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

esp_err_t **get_operation_attribute** (std::string node_name, std::string attribute_name, dl::TensorBase *&ret_value)

Get the attribute of node.

Parameters

- **node_name** – The name of operation.
- **attribute_name** – The name of attribute.
- **ret_value** – The attribute value.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

esp_err_t **get_operation_input_shape** (std::string node_name, int index, std::vector<int> &ret_value)

Get operation input shape.

Parameters

- **node_name** – The name of operation.
- **index** – The index of inputs
- **ret_value** – Return shape value.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

esp_err_t **get_operation_output_shape** (std::string node_name, int index, std::vector<int> &ret_value)

Get operation output shape.

Parameters

- **node_name** – The name of operation.
- **index** – The index of outputs
- **ret_value** – Return shape value.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

esp_err_t **get_operation_inputs_and_outputs** (std::string node_name, std::vector<std::string> &inputs, std::vector<std::string> &outputs)

Get the attribute of node.

Parameters

- **node_name** – The name of operation.
- **inputs** – The vector of operation inputs.
- **outputs** – The vector of operation outputs.

Returns

esp_err_t Return ESP_OK if get successfully. Otherwise return ESP_FAIL.

std::string **get_operation_type** (std::string node_name)

Get operation type, “Conv”, “Linear” etc.

Parameters

node_name – The name of operation

Returns

The type of operation.

dl::TensorBase* **get_operation_parameter** (std::string node_name, int index = 1, uint32_t caps = MALLOC_CAP_DEFAULT)

Return if the variable is a parameter.

Parameters

- **node_name** – The name of operation
- **index** – The index of the variable
- **caps** – Bitwise OR of MALLOC_CAP_* flags indicating the type of memory to be returned

Returns

dl::TensorBase*

dl::TensorBase* **get_parameter** (std::string tensor_name, uint32_t caps = MALLOC_CAP_DEFAULT)

Get a parameter tensor by initializer name.

Parameters

- **tensor_name** – The initializer name.

- **caps** – Bitwise OR of `MALLOC_CAP_*` flags indicating the type of memory to be returned.

Returns

*dl::TensorBase**

`esp_err_t get_operation_lut_name` (std::string node_name, std::string &lut_name, std::string attribute_name = "lut")

Resolve and validate the initializer name referenced by a LUT attribute.

Parameters

- **node_name** – The name of operation.
- **lut_name** – The resolved LUT initializer name.
- **attribute_name** – The name of LUT attribute.

Returns

`esp_err_t` ESP_OK when the attribute references an existing initializer.

*dl::TensorBase** `get_operation_lut` (std::string node_name, uint32_t caps = MALLOC_CAP_DEFAULT, std::string attribute_name = "lut")

Get LUT(Look Up Table) if the operation has LUT.

Parameters

- **node_name** – The name of operation
- **caps** – Bitwise OR of `MALLOC_CAP_*` flags indicating the type of memory to be returned
- **attribute_name** – The name of LUT attribute

Returns

*dl::TensorBase**

bool `is_parameter` (std::string name)

return true if the variable is a parameter

Parameters

name – Variable name

Returns

true if the variable is a parameter else false

const void *`get_tensor_raw_data` (std::string tensor_name)

Get the raw data of FlatBuffers::Dl::Tensor.

Parameters

tensor_name – The name of Tensor.

Returns

uint8_t * The pointer of raw data.

dl::dtype_t `get_tensor_dtype` (std::string tensor_name)

Get the element type of tensor tensor.

Parameters

tensor_name – The tensor name.

Returns

FlatBuffers::Dl::TensorDataType

std::vector<int> **get_tensor_shape** (std::string tensor_name)

Get the shape of tensor.

Parameters

tensor_name – The name of tensor.

Returns

std::vector<int> The shape of tensor.

std::vector<int> **get_tensor_exponents** (std::string tensor_name)

Get the exponents of tensor.

Warning: When quantization is PER_CHANNEL, the size of exponents is same as out_channels. When quantization is PER_TENSOR, the size of exponents is 1.

Parameters

tensor_name – The name of tensor.

Returns

The exponents of tensor.

dl::dtype_t **get_value_info_dtype** (std::string var_name)

Get the element type of value_info.

Parameters

var_name – The value_info name.

Returns

dl::dtype_t

std::vector<int> **get_value_info_shape** (std::string var_name)

Get the shape of value_info.

Parameters

var_name – The value_info name.

Returns

the shape of value_info.

int **get_value_info_exponent** (std::string var_name)

Get the exponent of value_info. Only support PER_TENSOR quantization.

Parameters

var_name – The value_info name.

Returns

the exponent of value_info

const void ***get_test_input_tensor_raw_data** (std::string tensor_name)

Get the raw data of test input tensor.

Parameters

tensor_name – The name of test input tensor.

Returns

uint8_t * The pointer of raw data.

const void ***get_test_output_tensor_raw_data** (std::string tensor_name)

Get the raw data of test output tensor.

Parameters

tensor_name – The name of test output tensor.

Returns

uint8_t * The pointer of raw data.

dl::TensorBase ***get_test_input_tensor** (std::string tensor_name)

Get the test input tensor.

Parameters

tensor_name – The name of test input tensor.

Returns

The pointer of tensor.

dl::TensorBase ***get_test_output_tensor** (std::string tensor_name)

Get the test output tensor.

Parameters

tensor_name – The name of test output tensor.

Returns

The pointer of tensor.

std::vector<std::string> **get_test_outputs_name** ()

Get the name of test outputs.

Returns

the name of test outputs

std::vector<std::string> **get_graph_inputs** ()

Get the graph inputs.

Returns

the name of inputs

std::vector<std::string> **get_graph_outputs** ()

Get the graph outputs.

Returns

the name of ounputs

void **clear_map** ()

Clear all map.

void **load_map** ()

Load all map.

std::string **get_model_name** ()

Get the model name.

Returns

the name of model

int64_t **get_model_version** ()

Get the model version.

Returns

The version of model

std::string **get_model_doc_string**()

Get the model doc string.

Returns

The doc string of model

std::string **get_model_metadata_prop**(const std::string &key)

Get the model's metadata prop.

Parameters

key – The key of metadata prop

Returns

The value of metadata prop

void **get_model_size**(size_t *internal_size, size_t *psram_size, size_t *psram_rodata_size, size_t *flash_size)

Get the model size.

Parameters

- **internal_size** – Flatbuffers model internal RAM usage
- **psram_size** – Flatbuffers model PSRAM usage
- **psram_rodata_size** – Flatbuffers model PSRAM rodata usage. If CONFIG_SPIRAM_RODATA option is on, \ Flatbuffers model in FLASH rodata will be copied to PSRAM
- **flash_size** – Flatbuffers model FLASH usage

Public Members

bool **m_param_copy**

copy flatbuffers param or not.