

# ESP32-H2

## Hardware Design Guidelines






Release master  
Espressif Systems  
Jul 04, 2025

# Table of contents

|   |          |
|---|----------|
| <b>Table of contents</b>  | <b>i</b> |
| <b>1 Latest Version of This Document</b>  | <b>3</b> |
| 1.1 About This Document   | 3        |
| 1.1.1 Introduction  | 3        |
| 1.1.2 Latest Version of This Document   | 3        |
| 1.2 Product Overview  | 3        |
| 1.3 Schematic Checklist   | 4        |
| 1.3.1 Overview  | 4        |
| 1.3.2 Power Supply  | 4        |
| 1.3.3 Chip Power-up and Reset Timing  | 6        |
| 1.3.4 Flash   | 7        |
| 1.3.5 Clock Source  | 7        |
| 1.3.6 RF  | 8        |
| 1.3.7 UART  | 10       |
| 1.3.8 SPI   | 10       |
| 1.3.9 Strapping Pins  | 10       |
| 1.3.10 GPIO   | 11       |
| 1.3.11 ADC  | 13       |
| 1.3.12 USB  | 13       |
| 1.4 PCB Layout Design   | 13       |
| 1.4.1 General Principles of PCB Layout for the Chip                                       | 13       |
| 1.4.2 Power Supply  | 13       |
| 1.4.3 Crystal   | 15       |
| 1.4.4 RF  | 17       |
| 1.4.5 UART  | 19       |
| 1.4.6 General Principles of PCB Layout for Modules (Positioning a Module on a Base Board) | 19       |
| 1.4.7 USB   | 21       |
| 1.4.8 Typical Layout Problems and Solutions   | 21       |
| 1.5 Hardware Development  | 22       |
| 1.5.1 ESP32-H2 Modules  | 22       |
| 1.5.2 ESP32-H2 Development Boards   | 22       |
| 1.5.3 Download Guidelines   | 22       |
| 1.6 Related Documentation and Resources   | 23       |
| 1.7 Glossary  | 23       |
| 1.8 Revision History  | 24       |
| 1.9 Disclaimer and Copyright Notice   | 24       |



This document provides guidelines for the [ESP32-H2 SoC](#).

|   |   |   |
|---|---|---|
|  |  |  |
| <a href="#">Schematic Checklist</a>   | <a href="#">PCB Layout Design</a>   | <a href="#">Hardware Development</a>  |



# Chapter 1

## Latest Version of This Document

Check the link to make sure that you use the latest version of this document: <https://docs.espressif.com/projects/esp-hardware-design-guidelines/en/latest/esp32h2/index.html>

### 1.1 About This Document

#### 1.1.1 Introduction

The hardware design guidelines advise on how to integrate ESP32-H2 into a product. These guidelines will help to achieve optimal performance of your product, ensuring technical accuracy and adherence to Espressif's standards. The guidelines are intended for hardware and application engineers.

The document assumes that you possess a certain level of familiarity with the ESP32-H2 SoC. In case you lack prior knowledge, we recommend utilizing this document in conjunction with the [ESP32-H2 Series Datasheet](#).

#### 1.1.2 Latest Version of This Document

Check the link to make sure that you use the latest version of this document: <https://docs.espressif.com/projects/esp-hardware-design-guidelines/en/latest/esp32h2/index.html>

### 1.2 Product Overview

ESP32-H2 is a system on a chip that integrates the following features:

- Bluetooth® 5 (LE)
- 802.15.4 Thread/Zigbee
- High-performance 32-bit RISC-V single-core processor
- Multiple peripherals
- Built-in security hardware

Powered by 40 nm technology, ESP32-H2 provides a robust, highly-integrated platform, which helps meet the continuous demands for efficient power usage, compact design, security, high performance, and reliability. Typical application scenarios for ESP32-H2 include:

- Smart Home

- Industrial Automation
- Health Care
- Consumer Electronics
- Smart Agriculture
- POS Machines
- Service Robot
- Generic Low-power IoT Sensor Hubs
- Generic Low-power IoT Data Loggers

For more information about ESP32-H2, please refer to [ESP32-H2 Series Datasheet](#).

---

**Note:** Unless otherwise specified, “ESP32-H2” used in this document refers to the series of chips, instead of a specific chip variant.

---

## 1.3 Schematic Checklist

### 1.3.1 Overview

The integrated circuitry of ESP32-H2 requires only 17 electrical components (resistors, capacitors, and inductors) and a crystal. The high integration of ESP32-H2 allows for simple peripheral circuit design. This chapter details the schematic design of ESP32-H2.

The following figure shows a reference schematic design of ESP32-H2. It can be used as the basis of your schematic design.

Any basic ESP32-H2 circuit design may be broken down into the following major building blocks:

- *Power supply*
- *Chip power-up and reset timing*
- *Flash*
- *Clock source*
- *RF*
- *UART*
- *Strapping pins*
- *GPIO*
- *ADC*
- *USB*

The rest of this chapter details the specifics of circuit design for each of these sections.

### 1.3.2 Power Supply

The general recommendations for power supply design are:

- When using a single power supply, the recommended power supply voltage is 3.3 V and the output current is no less than 350 mA.
- It is suggested to add an ESD protection diode at each power entrance.

The power scheme is shown in [ESP32-H2 Series Datasheet](#) > Figure *ESP32-H2 Power Scheme*.

More information about power supply pins can be found in [ESP32-H2 Series Datasheet](#) > Section *Power Supply*.

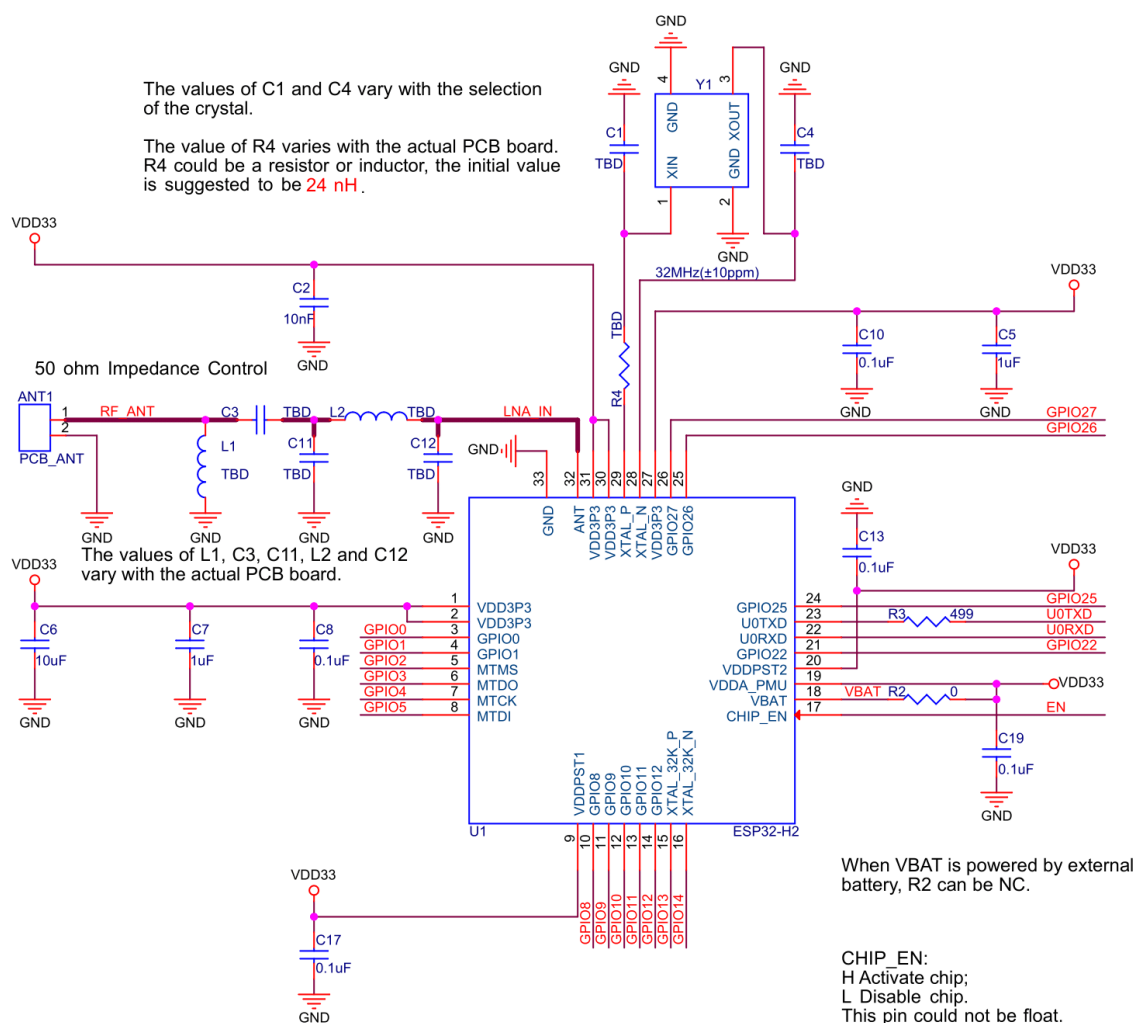


Fig. 1: ESP32-H2 Reference Schematic



## Digital Power Supply

ESP32-H2 has pin9 VDDPST1 and pin20 VDDPST2 as the digital power supply pin(s) working in a voltage range of 3.0 V ~ 3.6 V. It is recommended to add an extra 0.1  $\mu$ F decoupling capacitor close to the pin(s).

## Analog Power Supply

ESP32-H2's VDD3P3, VBAT, and VDDA\_PMU pins are the analog power supply pins, working at 3.0 V ~ 3.6 V.

For VDD3P3 at pin1 and pin2, when ESP32-H2 is transmitting signals, there may be a sudden increase in the current draw, causing power rail collapse. Therefore, it is highly recommended to add a 10  $\mu$ F capacitor to the power rail, which can work in conjunction with the 1  $\mu$ F and 0.1  $\mu$ F capacitor(s).

It is suggested to add an extra 10  $\mu$ F capacitor at the power entrance. If the power entrance is close to VDD3P3 at pin1 and pin2, then two 10  $\mu$ F capacitors can be merged into one.

If VBAT is powered separately by an external power supply, R2 is not required and the operating voltage range is 3.0 V to 3.6 V.

### 1.3.3 Chip Power-up and Reset Timing

ESP32-H2's CHIP\_EN pin can enable the chip when it is high and reset the chip when it is low.

When ESP32-H2 uses a 3.3 V system power supply, the power rails need some time to stabilize before CHIP\_EN is pulled up and the chip is enabled. Therefore, CHIP\_EN needs to be asserted high after the 3.3 V rails have been brought up.

To reset the chip, keep the reset voltage  $V_{IL\_nRST}$  in the range of  $(-0.3 \sim 0.25 \times VDD)$  V. To avoid reboots caused by external interferences, make the CHIP\_EN trace as short as possible.

Figure *ESP32-H2 Power-up and Reset Timing* shows the power-up and reset timing of ESP32-H2.

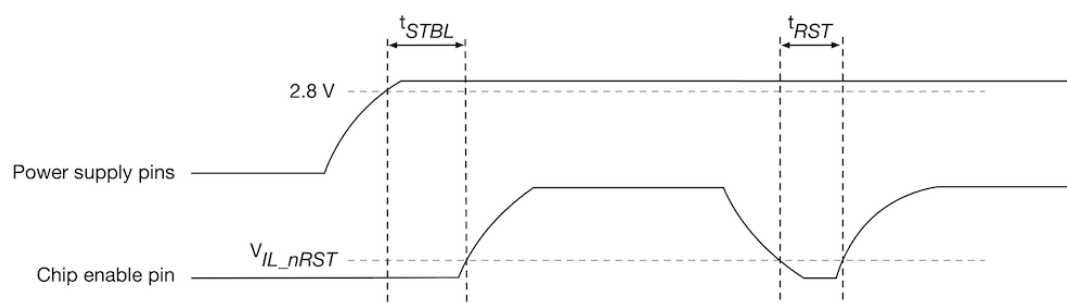


Fig. 2: ESP32-H2 Power-up and Reset Timing

Table *Description of Timing Parameters for Power-up and Reset* provides the specific timing requirements.

Table 1: Description of Timing Parameters for Power-up and Reset

| Parameter  | Description   | Minimum ( $\mu$ s) |
|------------|---|--------------------|
| $t_{STBL}$ | Time reserved for the power rails to stabilize before the CHIP_EN pin is pulled high to activate the chip | 50                 |
| $t_{RST}$  | Time reserved for CHIP_EN to stay below $V_{IL\_nRST}$ to reset the chip                                  | 50                 |

#### Attention:

- CHIP\_EN must not be left floating.

- To ensure the correct power-up and reset timing, it is advised to add an RC delay circuit at the CHIP\_EN pin. The recommended setting for the RC delay circuit is usually  $R = 10\text{ k}\Omega$  and  $C = 1\text{ }\mu\text{F}$ . However, specific parameters should be adjusted based on the characteristics of the actual power supply and the power-up and reset timing of the chip.
- If the user application has one of the following scenarios:
  - Slow power rise or fall, such as during battery charging.
  - Frequent power on/off operations.
  - Unstable power supply, such as in photovoltaic power generation.
 Then, the RC circuit itself may not meet the timing requirements, resulting in the chip being unable to boot correctly. In this case, additional designs need to be added, such as:
  - Adding an external reset chip or a watchdog chip, typically with a threshold of around 3.0 V.
  - Implementing reset functionality through a button or the main controller.

### 1.3.4 Flash

ESP32-H2 series of chips have in-package 2 MB or 4 MB flash. The pins for flash are not bonded out.

### 1.3.5 Clock Source

ESP32-H2 supports two external clock sources:

- *External crystal clock source (Compulsory)*
- *Low-Power clock source (Optional)*

#### External Crystal Clock Source (Compulsory)

The ESP32-H2 firmware only supports 32 MHz crystal.

The circuit for the crystal is shown in Figure *ESP32-H2 Schematic for External Crystal*. Note that the accuracy of the selected crystal should be within  $\pm 10\text{ ppm}$ .

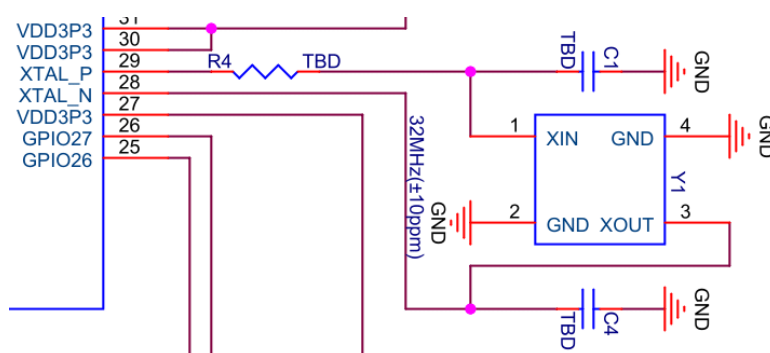


Fig. 3: ESP32-H2 Schematic for External Crystal

Please add a series component on the XTAL\_P clock trace. Initially, it is suggested to use an inductor of 24 nH to reduce the impact of high-frequency crystal harmonics on RF performance, and the value should be adjusted after an overall test.

The initial values of external capacitors C1 and C4 can be determined according to the formula:

$$C_L = \frac{C1 \times C4}{C1 + C4} + C_{stray}$$

where the value of  $C_L$  (load capacitance) can be found in the crystal's datasheet, and the value of  $C_{stray}$  refers to the PCB's stray capacitance. The values of C1 and C4 need to be further adjusted after an overall test as below:

1. Select TX tone mode using the [Certification and Test Tool](#).
2. Observe the 2.4 GHz signal with a radio communication analyzer or a spectrum analyzer and demodulate it to obtain the actual frequency offset.
3. Adjust the frequency offset to be within  $\pm 10$  ppm (recommended) by adjusting the external load capacitance.
  - When the center frequency offset is positive, it means that the equivalent load capacitance is small, and the external load capacitance needs to be increased.
  - When the center frequency offset is negative, it means the equivalent load capacitance is large, and the external load capacitance needs to be reduced.
  - External load capacitance at the two sides are usually equal, but in special cases, they may have slightly different values.

**Note:**

- Defects in the manufacturing of crystal (for example, large frequency deviation of more than  $\pm 10$  ppm, unstable performance within the operating temperature range, etc) may lead to the malfunction of ESP32-H2, resulting in a decrease of the RF performance.
- It is recommended that the amplitude of the crystal is greater than 500 mV.
- When Bluetooth connection fails, after ruling out software problems, you may follow the steps mentioned above to ensure that the frequency offset meets the requirements by adjusting capacitors at the two sides of the crystal.

**Low-Power Clock Source (Optional)**

ESP32-H2 supports an external 32.768 kHz crystal to act as the Low-Power clock. The external Low-Power clock source enhances timing accuracy and consequently decreases average power consumption, without impacting functionality.

Figure [ESP32-H2 Schematic for 32.768 kHz Crystal](#) shows the schematic for the external 32.768 kHz crystal.

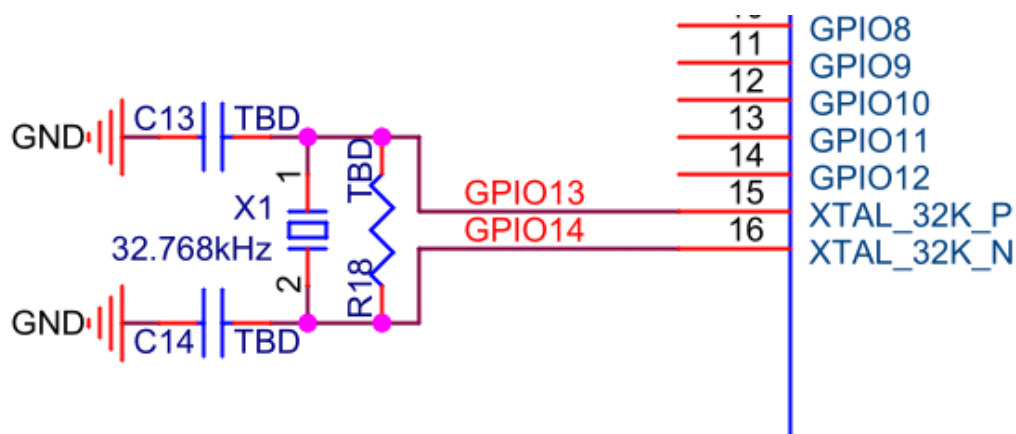


Fig. 4: ESP32-H2 Schematic for 32.768 kHz Crystal

Please note the requirements for the 32.768 kHz crystal:

- Equivalent series resistance (ESR)  $\leq 70$  k $\Omega$ .
- Load capacitance at both ends should be configured according to the crystal's specification.

The parallel resistor R is used for biasing the crystal circuit ( $5\text{ M}\Omega < R \leq 10\text{ M}\Omega$ ).

In general, you do not need to populate the resistor.

If the Low-Power clock source is not required, then the pins for the 32.768 kHz crystal can be used as GPIOs.

**1.3.6 RF**

## RF Circuit

ESP32-H2's RF circuit is mainly composed of three parts, the RF traces on the PCB board, the chip matching circuit, the antenna and the antenna matching circuit. Each part should meet the following requirements:

- For the RF traces on the PCB board, 50  $\Omega$  impedance control is required.
- For the chip matching circuit, it must be placed close to the chip. A CLCCL structure is preferred.
  - The CLCCL structure forms a bandpass filter, which is mainly used to adjust impedance points, suppress harmonics, and suppress low-frequency noise (especially in applications such as electrical lighting where the effect is significant). If there is no AC-to-DC circuit in the user application, a simpler CLC structure can be considered.
  - The RF matching circuit is shown in Figure [ESP32-H2 Schematic for RF Matching](#).
- For the antenna and the antenna matching circuit, to ensure radiation performance, the antenna's characteristic impedance must be around 50  $\Omega$ . Adding a CLC matching circuit near the antenna is recommended to adjust the antenna. However, if the available space is limited and the antenna impedance point can be guaranteed to be 50  $\Omega$  by simulation, then there is no need to add a matching circuit near the antenna.

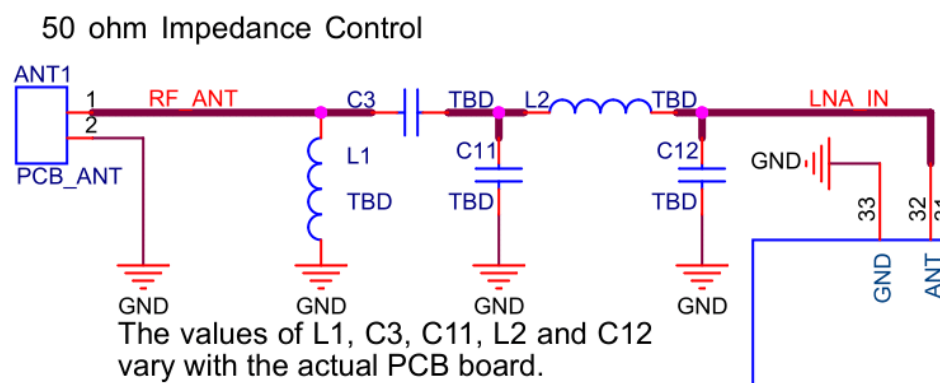


Fig. 5: ESP32-H2 Schematic for RF Matching

## RF Tuning

The RF matching parameters vary with the board, so the ones used in Espressif modules could not be applied directly. Follow the instructions below to do RF tuning.

Figure [ESP32-H2 RF Tuning Diagram](#) shows the general process of RF tuning.

In the matching circuit, define the port near the chip as Port 1 and the port near the antenna as Port 2. S11 describes the ratio of the signal power reflected back from Port 1 to the input signal power, the transmission performance is best if the matching impedance is conjugate to the chip impedance. S21 is used to describe the transmission loss of signal from Port 1 to Port 2. If S11 is close to the chip conjugate point  $35+j0$  and S21 is less than -35 dB at 4.8 GHz and 7.2 GHz, the matching circuit can satisfy transmission requirements.

Connect the two ends of the matching circuit to the network analyzer, and test its signal reflection parameter S11 and transmission parameter S21. Adjust the values of the components in the circuit until S11 and S21 meet the requirements. If your PCB design of the chip strictly follows the PCB design stated in Chapter [PCB Layout Design](#), you can refer to the value ranges in Table [Recommended Value Ranges for Components](#) to debug the matching circuit.

Table 2: Recommended Value Ranges for Components

| Reference Designator | Recommended Value Range | Serial No.         |
|----------------------|-------------------------|--------------------|
| C11                  | 1.2 ~ 1.8 pF            | GRM0335C1H1RXBA01D |
| L2                   | 2.4 ~ 3.0 nH            | LQP03TN2NXB02D     |
| C12                  | 1.8 ~ 1.2 pF            | GRM0335C1H1RXBA01D |

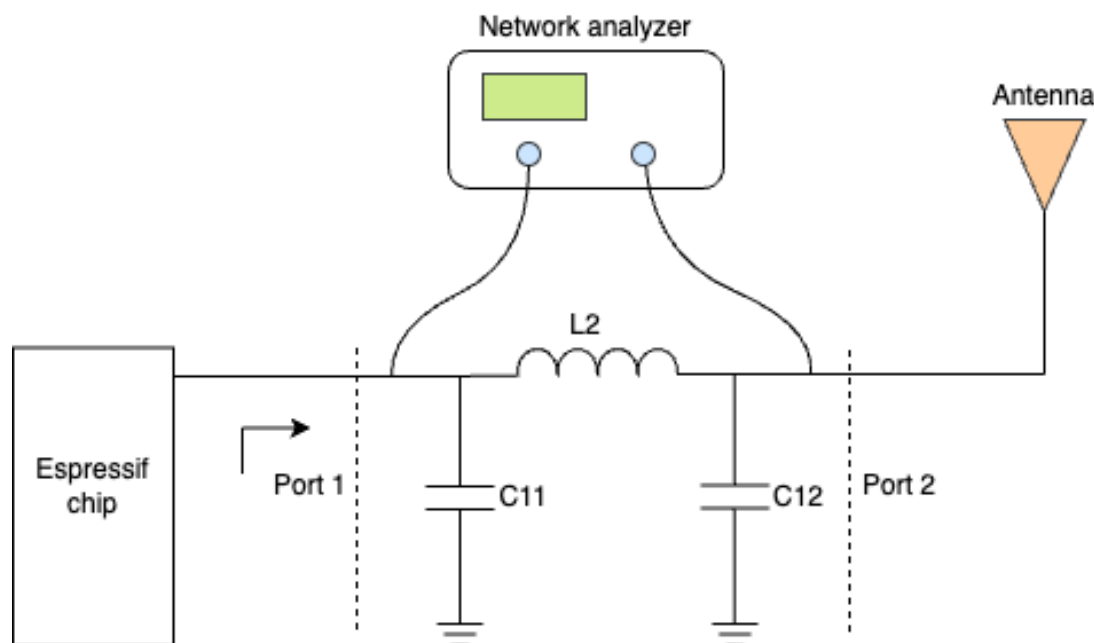


Fig. 6: ESP32-H2 RF Tuning Diagram

If the components are in the 0201 SMD package size, please use a stub in the PCB design of the RF matching circuit near the chip. If the antenna input impedance is not 50 ohm, an additional set of RF matching is recommended for antenna tuning.

**Note:** If RF function is not required, then the RF pin can be left floating.

### 1.3.7 UART

Usually, UART0 is used as the serial port for download and log printing. For instructions on download over UART0, please refer to Section [Download Guidelines](#). It is recommended to connect a 499  $\Omega$  series resistor to the U0TXD line to suppress harmonics.

If possible, use other UART interfaces as serial ports for communication. For these interfaces, it is suggested to add a series resistor to the TX line to suppress harmonics.

### 1.3.8 SPI

When using the SPI function, to improve EMC performance, add a series resistor (or ferrite bead) and a capacitor to ground on the SPI\_CLK trace. If space allows, it is recommended to also add a series resistor and capacitor to ground on other SPI traces. Ensure that the RC/LC components are placed close to the pins of the chip or module.

### 1.3.9 Strapping Pins

At each startup or reset, a chip requires some initial configuration parameters, such as in which boot mode to load the chip, etc. These parameters are passed over via the strapping pins. After reset, the strapping pins work as normal function pins.

GPIO8, GPIO9, and GPIO25 are strapping pins.

All the information about strapping pins is covered in [ESP32-H2 Series Datasheet](#) > Chapter *Boot Configurations*.

In this document, we will mainly cover the strapping pins related to boot mode.

After chip reset is released, the combination of GPIO8 and GPIO9 controls the boot mode. See Table [Boot Mode Control](#).

Table 3: Boot Mode Control

| Boot Mode                        | GPIO8       | GPIO9       |
|----------------------------------|-------------|-------------|
| Default Config                   | –(Floating) | 1 (Pull-up) |
| SPI Boot                         | Any value   | 1           |
| Joint Download Boot <sup>1</sup> | 1           | 0           |

Signals applied to the strapping pins should have specific *setup time* and *hold time*. For more information, see Figure [Setup and Hold Times for Strapping Pins](#) and Table [Description of Timing Parameters for Strapping Pins](#).

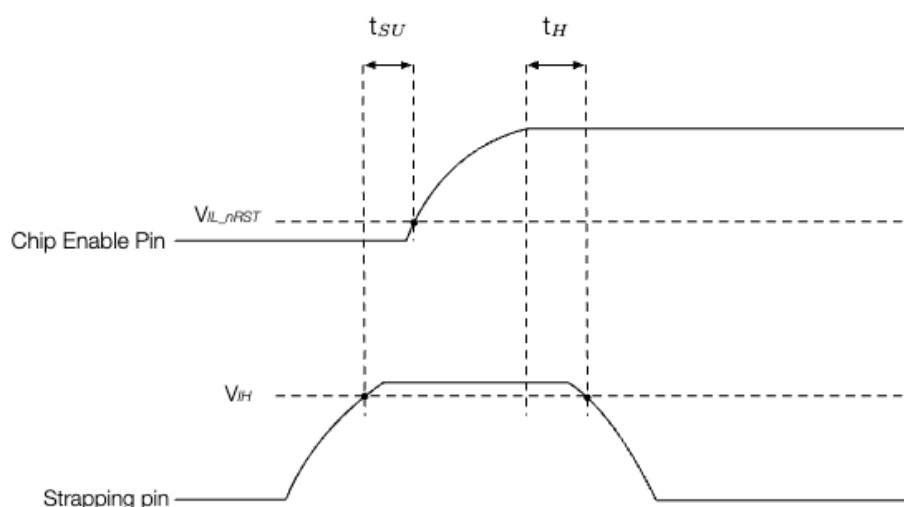


Fig. 7: Setup and Hold Times for Strapping Pins

Table 4: Description of Timing Parameters for Strapping Pins

| Parameter | Description   | Minimum (ms) |
|-----------|---|--------------|
| $t_{SU}$  | Time reserved for the power rails to stabilize before the chip enable pin (CHIP_EN) is pulled high to activate the chip.                            | 0            |
| $t_H$     | Time reserved for the chip to read the strapping pin values after CHIP_EN is already high and before these pins start operating as regular IO pins. | 3            |

**Attention:**

- It is recommended to place a pull-up resistor at the GPIO9 pin.
- Do not add high-value capacitors at GPIO9, or the chip may enter download mode.

### 1.3.10 GPIO

The pins of ESP32-H2 can be configured via IO MUX or GPIO matrix. IO MUX provides the default pin configurations (see [ESP32-H2 Series Datasheet](#) > Appendix *ESP32-H2 Consolidated Pin Overview*), whereas the GPIO matrix

<sup>1</sup> Joint Download Boot mode supports the following download methods:

- USB-Serial-JTAG Download Boot
- UART Download Boot

is used to route signals from peripherals to GPIO pins. For more information about IO MUX and GPIO matrix, please refer to [ESP32-H2 Technical Reference Manual](#) > Chapter *IO MUX and GPIO Matrix*.

Some peripheral signals have already been routed to certain GPIO pins, while some can be routed to any available GPIO pins. For details, please refer to [ESP32-H2 Series Datasheet](#) > Section *Peripherals*.

When using GPIOs, please:

- Pay attention to the states of strapping pins during power-up.
- Pay attention to the default configurations of the GPIOs after reset. The default configurations can be found in the table below. It is recommended to add a pull-up or pull-down resistor to pins in the high-impedance state or enable the pull-up and pull-down during software initialization to avoid extra power consumption.

Table 5: IO MUX Pin Functions

| Name       | No. | Function 0 | Function 1 | Function 2 | Reset | Notes  |
|------------|-----|------------|------------|------------|-------|--------|
| GPIO0      | 3   | GPIO0      | GPIO0      | FSPIQ      | 0     | —      |
| GPIO1      | 4   | GPIO1      | GPIO1      | FSPICS0    | 0     | R      |
| MTMS       | 5   | MTMS       | GPIO2      | FSPIWP     | 1     | R      |
| MTDO       | 6   | MTDO       | GPIO3      | FSPIHD     | 1     | R      |
| MTCK       | 7   | MTCK       | GPIO4      | FSPICLK    | 1*    | R      |
| MTDI       | 8   | MTDI       | GPIO5      | FSPID      | 1     | R      |
| GPIO8      | 10  | GPIO8      | GPIO8      | —          | 1     | —      |
| GPIO9      | 11  | GPIO9      | GPIO9      | —          | 3     | —      |
| GPIO10     | 12  | GPIO10     | GPIO10     | —          | 0     | R      |
| GPIO11     | 13  | GPIO11     | GPIO11     | —          | 0     | R      |
| GPIO12     | 14  | GPIO12     | GPIO12     | —          | 0     | —      |
| XTAL_32K_P | 15  | GPIO13     | GPIO13     | —          | 0     | R      |
| XTAL_32K_N | 16  | GPIO14     | GPIO14     | —          | 0     | R      |
| GPIO22     | 21  | GPIO22     | GPIO22     | —          | 0     | —      |
| U0RXD      | 22  | U0RXD      | GPIO23     | FSPICS1    | 3     | —      |
| U0TXD      | 23  | U0TXD      | GPIO24     | FSPICS2    | 4     | —      |
| GPIO25     | 24  | GPIO25     | GPIO25     | FSPICS3    | 1     | —      |
| GPIO26     | 25  | GPIO26     | GPIO26     | FSPICS4    | 1     | R, USB |
| GPIO27     | 26  | GPIO27     | GPIO27     | FSPICS5    | 3*    | R, USB |

- 0 –input disabled, in high impedance state (IE = 0)
- 1 –input enabled, in high impedance state (IE = 1)
- 2 –input enabled, pull-down resistor enabled (IE = 1, WPD = 1)
- 3 –input enabled, pull-up resistor enabled (IE = 1, WPU = 1)
- 4 –output enabled, pull-up resistor enabled (OE = 1, WPU = 1)
- 1\* –When the value of eFuse bit EFUSE\_DIS\_PAD\_JTAG is
  - 0, input enabled, pull-up resistor enabled (IE = 1, WPU = 1)
  - 1, input enabled, in high impedance state (IE = 1)
- 3\* –input enabled, pull-up resistor enabled (IE = 1, WPU = 0, USB\_WPU = 1). See details in **Notes**.

**Notes:**

- R –These pins have analog functions.
- USB –USB pull-up resistor is enabled.
  - By default, the USB function is enabled for USB pins (i.e., GPIO26 and GPIO27), and the pin pull-up is decided by the USB pull-up. The USB pull-up is controlled by USB\_SERIAL\_JTAG\_DP/DM\_PULLUP and the pull-up resistor value is controlled by USB\_SERIAL\_JTAG\_PULLUP\_VALUE. For details, see [ESP32-H2 Technical Reference Manual](#) > Chapter *USB Serial/JTAG Controller*.
  - When the USB function is disabled, USB pins are used as regular GPIOs and the pin's internal weak pull-up and pull-down resistors are disabled by default (configurable by IO\_MUX\_GPIOn\_FUN\_WPU/WPD). For details, see [ESP32-H2 Technical Reference Manual](#) > Chapter *IO MUX and GPIO Matrix (GPIO, IO MUX)*.

### 1.3.11 ADC

Please add a 0.1  $\mu$ F filter capacitor between ESP pins and ground when using the ADC function to improve accuracy.

The calibrated ADC results after hardware calibration and [software calibration](#) are shown in the list below. For higher accuracy, you may implement your own calibration methods.

- When ATTEN=0 and the effective measurement range is 0 ~ 1000 mV, the total error is  $\pm 7$  mV.
- When ATTEN=1 and the effective measurement range is 0 ~ 1300 mV, the total error is  $\pm 8$  mV.
- When ATTEN=2 and the effective measurement range is 0 ~ 1900 mV, the total error is  $\pm 12$  mV.
- When ATTEN=3 and the effective measurement range is 0 ~ 3300 mV, the total error is  $\pm 23$  mV.

### 1.3.12 USB

ESP32-H2 integrates a USB Serial/JTAG controller that supports USB 2.0 full-speed device.

GPIO26 and GPIO27 can be used as D- and D+ of USB respectively. It is recommended to populate 22/33 ohm series resistors between the mentioned pins and the USB connector. Also, reserve a footprint for a capacitor to ground on each trace. Note that both components should be placed close to the chip.

Note that upon power-up, the USB\_D+ signal will fluctuate between high and low states. The high-level signal is relatively strong and requires a robust pull-down resistor to drive it low. Therefore, if you need a stable initial state, adding an external pull-up resistor is recommended to ensure a consistent high-level output voltage at startup.

ESP32-H2 also supports download functions and log message printing via USB. For details please refer to [Section Download Guidelines](#).

## 1.4 PCB Layout Design

This chapter introduces the key points of how to design an ESP32-H2 PCB layout using an ESP32-H2 module (see [Figure ESP32-H2 Reference PCB Layout](#)) as an example.

### 1.4.1 General Principles of PCB Layout for the Chip

It is recommended to use a four-layer PCB design:

- Layer 1 (TOP): Signal traces and components.
- Layer 2 (GND): No signal traces here to ensure a complete GND plane.
- Layer 3 (POWER): GND plane should be applied to better isolate the RF and crystal. Route power traces and a few signal traces on this layer, provided that there is a complete GND plane under the RF and crystal.
- Layer 4 (BOTTOM): Route a few signal traces here. It is not recommended to place any components on this layer.

A two-layer PCB design can also be used:

- Layer 1 (TOP): Signal traces and components.
- Layer 2 (BOTTOM): Do not place any components on this layer and keep traces to a minimum. Please make sure there is a complete GND plane for the chip, RF, and crystal.

### 1.4.2 Power Supply

[Figure ESP32-H2 Power Traces in a Four-layer PCB Design](#) shows the overview of the power traces in a four-layer PCB design.



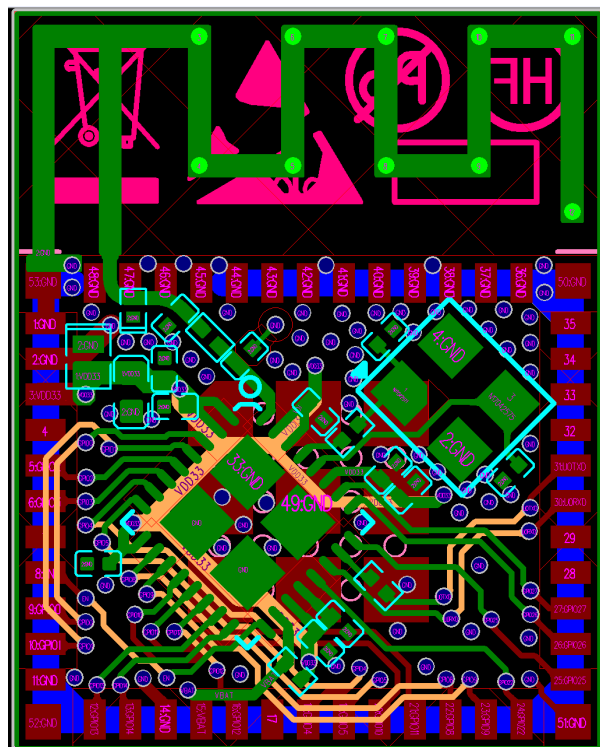


Fig. 8: ESP32-H2 Reference PCB Layout

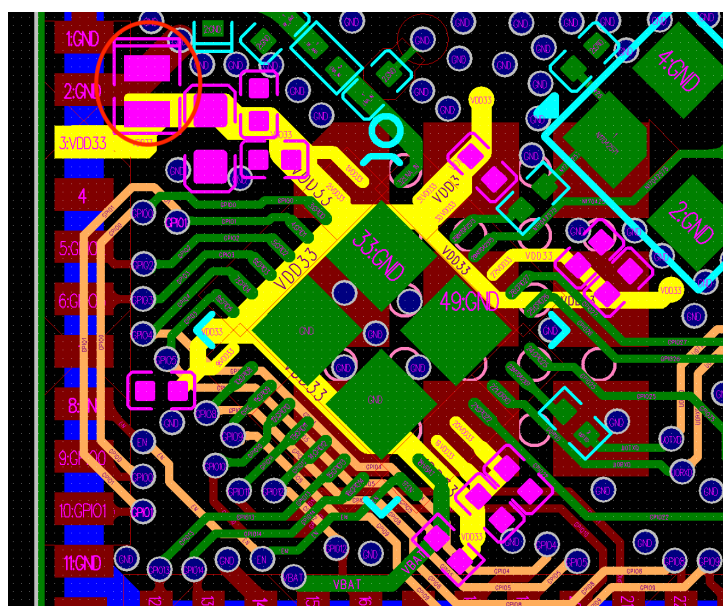


Fig. 9: ESP32-H2 Power Traces in a Four-layer PCB Design

## General Guidelines

- Four-layer PCB design is preferred.
- The power traces should be routed on the inner third layer whenever possible.
- Vias are required for the power traces to go through the layers and get connected to the pins on the top layer. There should be at least two vias if the main power traces need to cross layers. The drill diameter on other power traces should be no smaller than the width of the power traces.
- The ground pad at the bottom of the chip should be connected to the ground plane through at least nine ground vias.
- If you need to add a thermal pad EPAD under the chip on the bottom of the module, it is recommended to employ a square grid on the EPAD, cover the gaps with solder paste, and place ground vias in the gaps, as shown in Figure [ESP32-H2 Power Traces in a Four-layer PCB Design](#). This can avoid chip displacement caused by tin leakage and bubbles when soldering the module EPAD to the substrate.

## 3.3 V Power Layout

The 3.3 V power traces, highlighted in yellow, are routed as shown in Figure [ESP32-H2 Power Traces in a Four-layer PCB Design](#).

The 3.3 V power layout should meet the following guidelines:

- The ESD protection diode is placed next to the power port (circled in red in Figure [ESP32-H2 Power Traces in a Four-layer PCB Design](#)). The power trace should have a 10  $\mu$ F capacitor on its way before entering into the chip, and a 0.1  $\mu$ F or 1  $\mu$ F capacitor could also be used in conjunction. After that, the power traces are divided into several branches using a star-shaped topology, which reduces the coupling between different power pins. Note that all decoupling capacitors should be placed close to the corresponding power pin, and ground vias should be added close to the capacitor's ground pad to ensure a short return path.
- In Figure [ESP32-H2 Power Traces in a Four-layer PCB Design](#), the 10  $\mu$ F capacitor is shared by the analog power supply VDD3P3 at pin1 and pin2, and the power entrance since the analog power is close to the chip power entrance. If the chip power entrance is not near VDD3P3 at pin1 and pin2, it is recommended to add a 10  $\mu$ F capacitor to both the chip power entrance and VDD3P3 at pin1 and pin2. Also, reserve two 1  $\mu$ F capacitors if space permits.
- The width of the main power traces should be no less than 20 mil. The width of VDD3P3 at pin1 and pin2 power traces should be no less than 15 mil. The recommended width of other power traces is 10 mil.

## Analog Power Layout

The analog power layout should meet the following guidelines:

- VDD3P3 at pin1 and pin2 analog power supply should be surrounded by ground copper. It is required to add GND isolation between VDD3P3 at pin1 and pin2, power trace and the surrounding GPIO and RF traces, and place vias whenever possible.

## 1.4.3 Crystal

Figure [ESP32-H2 Crystal Layout \(with Keep-out Area on Top Layer\)](#) shows a reference PCB layout where the crystal is connected to the ground through vias and a keep-out area is maintained around the crystal on the top layer for ground isolation.

Figure [ESP32-H2 Crystal Layout \(without Keep-out Area on Top Layer\)](#) shows the layout for the crystal that is connected to the ground through vias but there is no keep-out area on the top layer for ground isolation.

If there is sufficient ground on the top layer, it is recommended to maintain a keep-out area around the crystal for ground isolation. This helps to reduce the value of parasitic capacitance and suppress temperature conduction, which can otherwise affect the frequency offset. If there is no sufficient ground, do not maintain any keep-out area.

The layout of the crystal should follow the guidelines below:

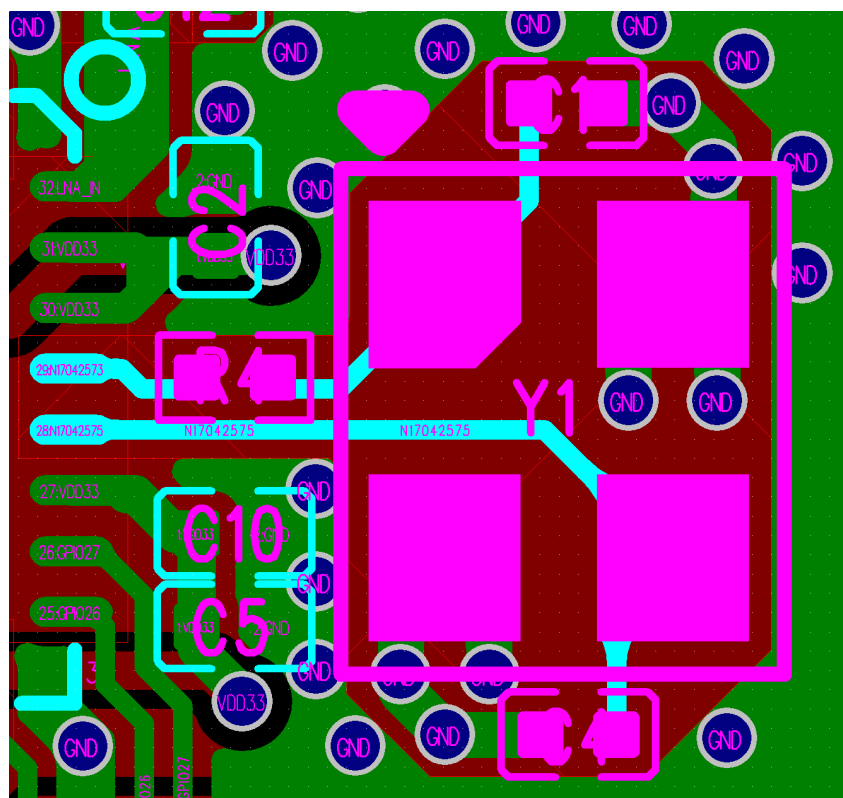


Fig. 10: ESP32-H2 Crystal Layout (with Keep-out Area on Top Layer)

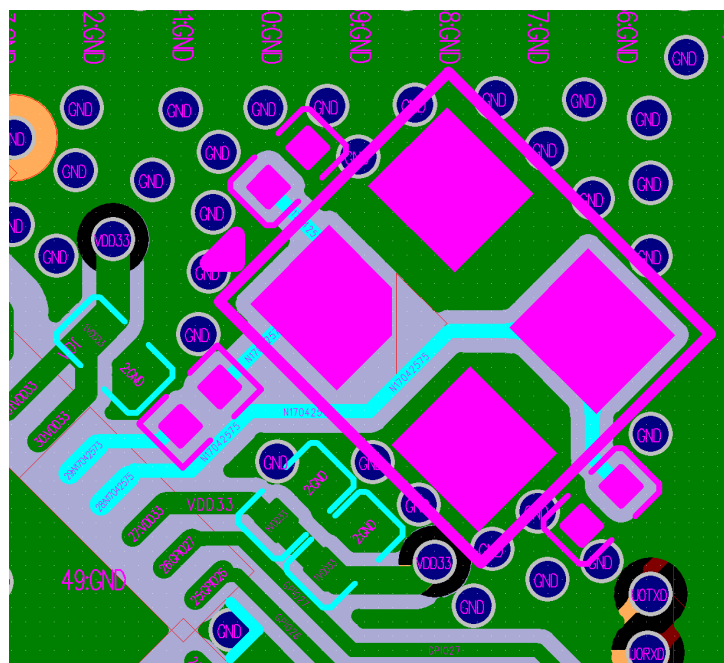


Fig. 11: ESP32-H2 Crystal Layout (without Keep-out Area on Top Layer)

- Ensure a complete GND plane for the RF, crystal, and chip.
- The crystal should be placed far from the clock pin to avoid interference on the chip. The gap should be at least 1.8 mm. It is good practice to add high-density ground via stitching around the clock trace for better isolation.
- There should be no vias for the clock input and output traces.
- Components in series to the crystal trace should be placed close to the chip side.
- The external matching capacitors should be placed on the two sides of the crystal, preferably at the end of the clock trace, but not connected directly to the series components. This is to make sure the ground pad of the capacitor is close to that of the crystal.
- Do not route high-frequency digital signal traces under the crystal. It is best not to route any signal trace under the crystal. The vias on the power traces on both sides of the crystal clock trace should be placed as far away from the clock trace as possible, and the two sides of the clock trace should be surrounded by ground copper.
- As the crystal is a sensitive component, do not place any magnetic components nearby that may cause interference, for example large inductance component, and ensure that there is a clean large-area ground plane around the crystal.

#### 1.4.4 RF

The RF trace is routed as shown highlighted in pink in Figure *ESP32-H2 RF Layout in a Four-layer PCB Design*.

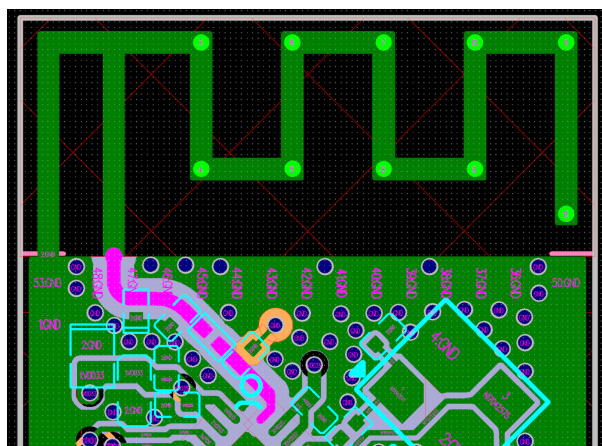


Fig. 12: ESP32-H2 RF Layout in a Four-layer PCB Design

The RF layout should meet the following guidelines:

- The RF trace should have a 50  $\Omega$  characteristic impedance. The reference plane is the layer next to the chip. For designing the RF trace at 50  $\Omega$  impedance, you could refer to the PCB stack-up design shown below.
- A CLC matching circuit is required for chip tuning. Please use 0201 components and place them close to the pin in a zigzag. In other words, the two capacitors should not be oriented in the same direction to minimize interference.
- Add a stub on the grounding capacitor near the chip side in the CLC matching circuit to suppress the second harmonics. It is preferable to keep the stub length 15 mil, and determine the stub width according to the PCB stack-up so that the characteristic impedance of the stub is 100  $\Omega \pm 10\%$ . In addition, please connect the stub via to the third layer, and maintain a keep-out area on the first and second layers. The trace highlighted in figure below is the stub. Note that a stub is not required for package types of 0402 and above.
- For PCB antennas, make sure to validate them through both simulation and real-world testing on a development board. It is recommended to include an additional CLC matching circuit for antenna tuning. Place this circuit as close to the antenna as possible.
- The RF trace should have a consistent width and not branch out. It should be as short as possible with dense ground vias around for interference shielding.

| Thickness (mm) | Impedance (Ohm) | Gap (mil) | Width (mil) | Gap (mil) |
|----------------|-----------------|-----------|-------------|-----------|
| -              | 50              | 12.2      | 12.6        | 12.2      |

| Stack up  | Material             | Base copper (oz) | Finished Layer Thickness (mil) | DK  |
|-----------|----------------------|------------------|--------------------------------|-----|
| CM        |                      |                  | 0.4                            | 4   |
| L1_Top    | Finished Copper 1 oz | 0.33             | 0.8 ( Min )                    |     |
| PP        | 7628 TG150 RC50%     |                  | 8.22                           | 4.6 |
| L2_Gnd    |                      | 1                | 1.2                            |     |
| Core      | Core                 |                  | Adjustable                     | 4.6 |
| L3_Power  |                      | 1                | 1.2                            |     |
| PP        | 7628 TG150 RC50%     |                  | 8.22                           | 4.6 |
| L4_Bottom | Finished Copper 1 oz | 0.33             | 0.8 ( Min )                    |     |
| SM        |                      |                  | 0.4                            | 4   |

Fig. 13: ESP32-H2 PCB Stack-up Design

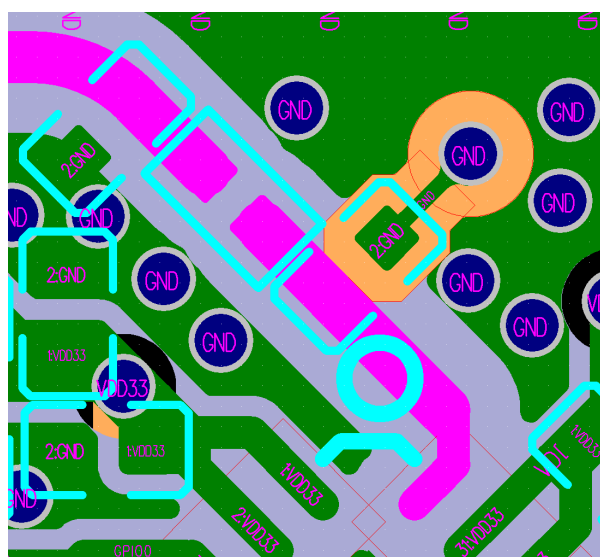


Fig. 14: ESP32-H2 Stub in a Four-layer PCB Design

- The RF trace should be routed on the outer layer without vias, i.e., should not cross layers. The RF trace should be routed at a 135° angle, or with circular arcs if trace bends are required.
- The ground plane on the adjacent layer needs to be complete. Do not route any traces under the RF trace whenever possible.
- There should be no high-frequency signal traces routed close to the RF trace. The RF antenna should be placed away from high-frequency components, such as crystals, DDR SDRAM, high-frequency clocks, etc. In addition, the USB port, USB-to-serial chip, UART signal lines (including traces, vias, test points, header pins, etc.) must be as far away from the antenna as possible. The UART signal line should be surrounded by ground copper and ground vias.

### 1.4.5 UART

Figure [ESP32-H2 UART Layout](#) shows the UART layout.

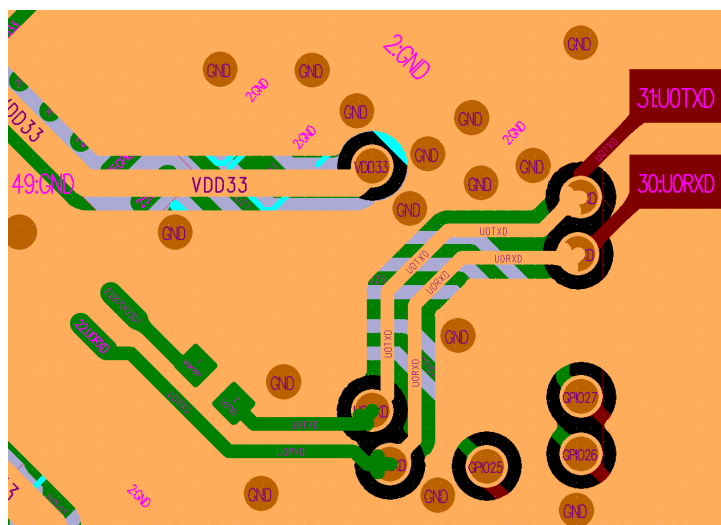


Fig. 15: ESP32-H2 UART Layout

The UART layout should meet the following guidelines:

- The series resistor on the U0TXD trace needs to be placed close to the chip side and away from the crystal.
- The U0TXD and U0RXD traces on the top layer should be as short as possible.
- The UART trace should be surrounded by ground copper and ground vias stitching.

### 1.4.6 General Principles of PCB Layout for Modules (Positioning a Module on a Base Board)

If module-on-board design is adopted, attention should be paid while positioning the module on the base board. The interference of the baseboard on the module's antenna performance should be minimized.

It is suggested to place the module's on-board PCB antenna outside the base board, and the feed point of the antenna closest to the board. In the following example figures, positions with mark ✓ are strongly recommended, while positions without a mark are not recommended.

If the PCB antenna cannot be placed outside the board, please ensure a clearance of at least 15 mm (in all directions) around the antenna area (no copper, routing, or components on it), and place the feed point of the antenna closest to the board. If there is a base board under the antenna area, it is recommended to cut it off to minimize its impact on the antenna. Figure [Keepout Zone for ESP32-H2 Module's Antenna on the Base Board](#) shows the suggested clearance for modules whose antenna feed point is on the left.

When designing an end product, attention should be paid to the interference caused by the housing of the antenna and it is recommended to carry out RF verification. It is necessary to test the throughput and communication signal range of the whole product to ensure the product's actual RF performance.

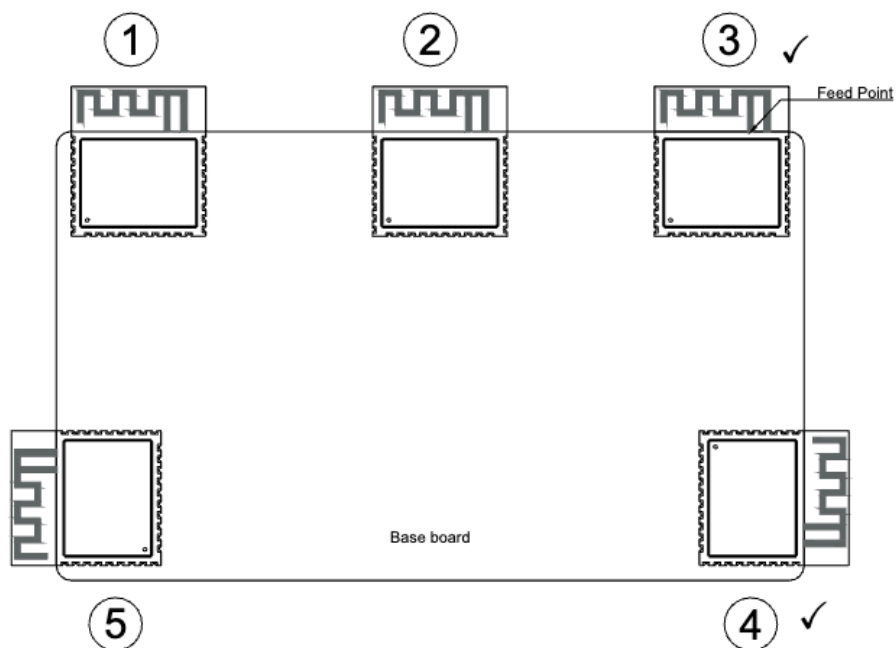


Fig. 16: Placement of ESP32-H2 Modules on Base Board (antenna feed point on the right)

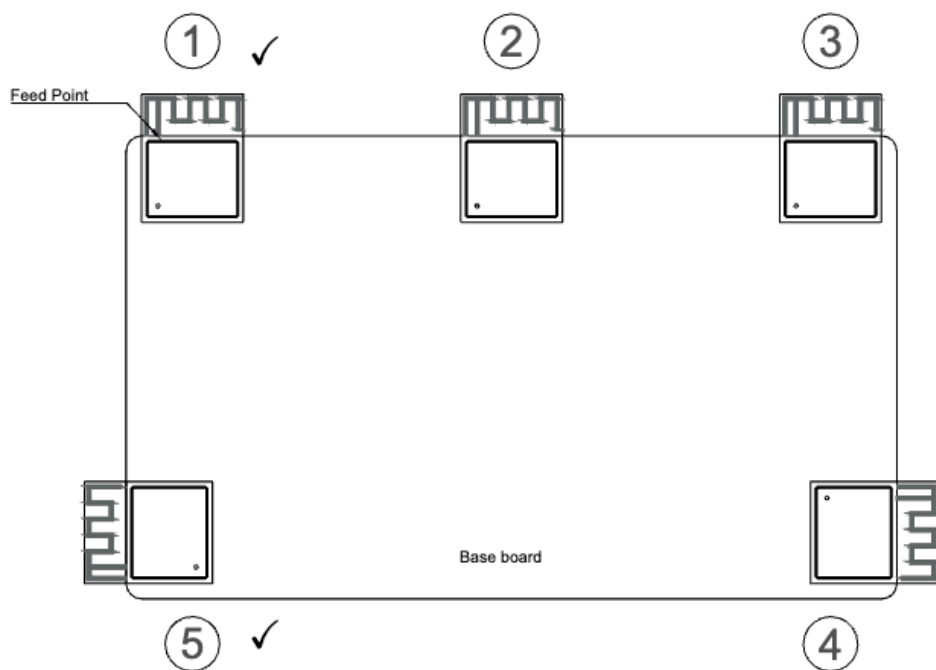


Fig. 17: Placement of ESP32-H2 Modules on Base Board (antenna feed point on the left)

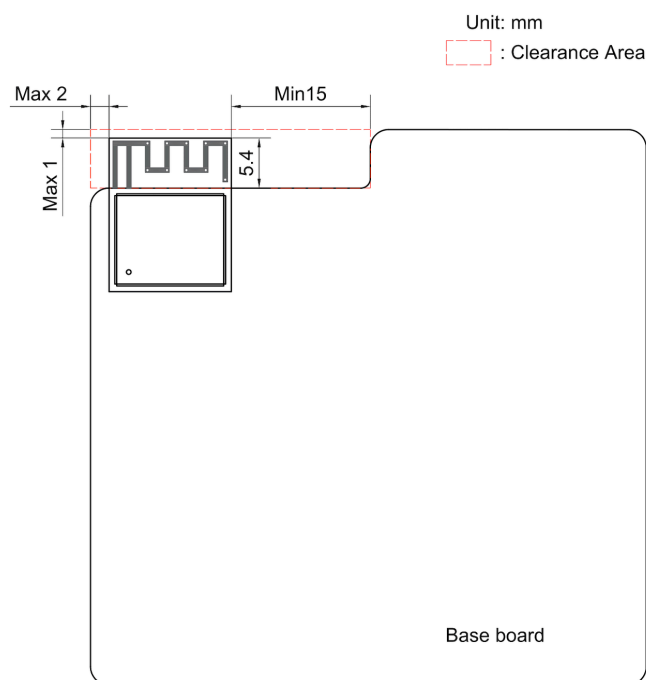


Fig. 18: Keepout Zone for ESP32-H2 Module's Antenna on the Base Board

### 1.4.7 USB

The USB layout should meet the following guidelines:

- Reserve space for resistors and capacitors on the USB traces close to the chip side.
- Use differential pairs and route them in parallel at equal lengths. Maintain a differential pair impedance of  $90\ \Omega$  with a tolerance of  $\pm 10\%$ .
- USB differential traces should minimize via transitions as much as possible to ensure better impedance control and avoid signal reflections. If vias are necessary, add a pair of ground return vias at each transition point.
- Ensure there is a continuous reference layer (a ground layer is recommended) beneath the USB traces.
- Surround the USB traces with ground copper.

### 1.4.8 Typical Layout Problems and Solutions

**When ESP32-H2 sends data packages, the voltage ripple is small, but RF TX performance is poor.**

**Analysis:** The RF TX performance can be affected not only by voltage ripples, but also by the crystal itself. Poor quality and big frequency offsets of the crystal decrease the RF TX performance. The crystal clock may be corrupted by other interfering signals, such as high-speed output or input signals. In addition, high-frequency signal traces, such as the SDIO traces and UART traces under the crystal, could also result in the malfunction of the crystal. Besides, sensitive components or radiating components, such as inductors and antennas, may also decrease the RF performance.

**Solution:** This problem is caused by improper layout for the crystal and can be solved by re-layout. Please refer to Section [Crystal](#) for details.

**When ESP32-H2 sends data packages, the power value is much higher or lower than the target power value, and the EVM is relatively poor.**

**Analysis:** The disparity between the tested value and the target value may be due to signal reflection caused by the impedance mismatch on the transmission line connecting the RF pin and the antenna. Besides, the impedance



mismatch will affect the working state of the internal PA, making the PA prematurely access the saturated region in an abnormal way. The EVM becomes poor as the signal distortion happens.

**Solution:** Match the antenna's impedance with the  $\pi$ -type circuit on the RF trace, so that the impedance of the antenna as seen from the RF pin matches closely with that of the chip. This reduces reflections to the minimum.

**TX performance is not bad, but the RX sensitivity is low.**

**Analysis:** Good TX performance indicates proper RF impedance matching. Poor RX sensitivity may result from external coupling to the antenna. For instance, the crystal signal harmonics could couple to the antenna. If the TX and RX traces of UART cross over with RF trace, they will affect the RX performance, as well. If there are many high-frequency interference sources on the board, signal integrity should be considered.

**Solution:** Keep the antenna away from crystals. Do not route high-frequency signal traces close to the RF trace. Please refer to Section [RF](#) for details.

## 1.5 Hardware Development

### 1.5.1 ESP32-H2 Modules

For a list of ESP32-H2 modules please check the [Modules](#) section on Espressif's official website.

For module reference designs please refer to:

- [Download links](#)

---

**Note:** Use the following tools to open the files in module reference designs:

- .DSN files: OrCAD Capture V16.6
  - .pcb files: Pads Layout VX.2. If you cannot open the .pcb files, please try importing the .asc files into your software to view the PCB layout.
- 

### 1.5.2 ESP32-H2 Development Boards

For a list of the latest designs of ESP32-H2 boards please check the [Development Boards](#) section on Espressif's official website.

### 1.5.3 Download Guidelines

You can download firmware to ESP32-H2 via UART and USB.

To download via UART:

1. Before the download, make sure to set the chip or module to Joint Download Boot mode, according to Table [Boot Mode Control](#).
2. Power up the chip or module and check the log via the UART0 serial port. If the log shows “waiting for download”, the chip or module has entered Joint Download Boot mode.
3. Download your firmware into flash via UART using the [Flash Download Tool](#).
4. After the firmware has been downloaded, pull GPIO9 high or leave it floating to make sure that the chip or module enters SPI Boot mode.
5. Power up the chip or module again. The chip will read and execute the new firmware during initialization.

To download via USB:

1. If the flash is empty, set the chip or module to Joint Download Boot mode, according to Table [Boot Mode Control](#).
2. Power up the chip or module and check the log via USB serial port. If the log shows “waiting for download”, the chip or module has entered Joint Download Boot mode.
3. Download your firmware into flash via USB using [Flash Download Tool](#).
4. After the firmware has been downloaded, pull GPIO9 high or leave it floating to make sure that the chip or module enters SPI Boot mode.
5. Power up the chip or module again. The chip will read and execute the new firmware during initialization.
6. If the flash is not empty, start directly from Step 3.

---

**Note:**

- It is advised to download the firmware only after the “waiting for download” log shows via the serial port.
  - Serial tools cannot be used simultaneously with the Flash Download Tool on one COM port.
  - The USB auto-download will be disabled if the following conditions occur in the application, where it will be necessary to set the chip or module to Joint Download Boot mode first by configuring the strapping pin.
    - USB PHY is disabled by the application;
    - USB is secondary developed for other USB functions, e.g., USB host, USB standard device;
    - USB IOs are configured to other peripherals, such as UART and LEDC.
  - It is recommended that the user retains control of the strapping pins to avoid the USB download function not being available in case of the above scenario.
- 

## 1.6 Related Documentation and Resources

- [Chip Datasheet \(PDF\)](#)
- [Technical Reference Manual \(PDF\)](#)
- [ESP32-H2 Chip Variants](#)
- [Modules](#)
- [ESP32-H2 Development Boards](#)
- [Espressif KiCad Library](#)
- [ESP Product Selector](#)
- [Regulatory Certificates](#)
- [User Forum \(Hardware\)](#)
- [Technical Support](#)

## 1.7 Glossary

The glossary contains terms and acronyms that are used in this document.

| Term              | Description  |
|-------------------|--|
| CLC               | Capacitor-Inductor-Capacitor   |
| DDR SDRAM         | Double Data Rate Synchronous Dynamic Random-Access Memory  |
| ESD               | Electrostatic Discharge  |
| LC                | Inductor-Capacitor   |
| PA                | Power Amplifier  |
| RC                | Resistor-Capacitor   |
| RTC               | Real-Time Clock  |
| Zero-ohm resistor | A zero-ohm resistor acts as a placeholder in the circuit, allowing for the replacement with a higher-ohm resistor based on specific design requirements. |

## 1.8 Revision History

Table 6: Revision History

| Date       | Version | Release Notes   |
|------------|---------|---|
| 2025-06-05 | v1.6    | <ul style="list-style-type: none"><li>• <b>PCB Layout Design</b><ul style="list-style-type: none"><li>– Section <b>USB</b>: Updated descriptions about the USB layout guidelines</li></ul></li></ul>  |
| 2025-05-23 | v1.5    | <ul style="list-style-type: none"><li>• <b>PCB Layout Design</b><ul style="list-style-type: none"><li>– Section <b>Crystal</b>: Updated descriptions about the crystal layout guidelines</li></ul></li></ul>  |
| 2025-01-07 | v1.4    | <ul style="list-style-type: none"><li>• <b>Hardware Development</b><ul style="list-style-type: none"><li>– Section <b>ESP32-H2 Modules</b>: Added download links to module reference designs</li></ul></li></ul>  |
| 2024-11-15 | v1.3    | <ul style="list-style-type: none"><li>• <b>Schematic Checklist</b><ul style="list-style-type: none"><li>– Section <b>SPI</b>: Newly added section</li></ul></li></ul>   |
| 2024-01-09 | v1.2    | <ul style="list-style-type: none"><li>• <b>Schematic Checklist</b><ul style="list-style-type: none"><li>– Section <b>RF Tuning</b>: Updated RF matching description</li></ul></li></ul>   |
| 2023-12-25 | v1.1    | <ul style="list-style-type: none"><li>• <b>PCB Layout Design</b><ul style="list-style-type: none"><li>– Section <b>Crystal</b>: Updated crystal PCB layout</li></ul></li></ul>  |
| 2023-12-22 | v1.0    | Migrated ESP32-H2 Hardware Design Guidelines from PDF to HTML format. During the migration from PDF to HTML format, minor updates, improvements, and clarifications were made throughout the documentation. If you would like to check previous versions of the document, please submit documentation feedback. |

## 1.9 Disclaimer and Copyright Notice

Information in this document, including URL references, is subject to change without notice.

All third party's information in this document is provided as is with no warranties to its authenticity and accuracy.

No warranty is provided to this document for its merchantability, non-infringement, fitness for any particular purpose, nor does any warranty otherwise arising out of any proposal, specification or sample.

All liability, including liability for infringement of any proprietary rights, relating to use of information in this document is disclaimed. No licenses express or implied, by estoppel or otherwise, to any intellectual property rights are granted herein.

The Wi-Fi Alliance Member logo is a trademark of the Wi-Fi Alliance. The Bluetooth logo is a registered trademark of Bluetooth SIG.

All trade names, trademarks and registered trademarks mentioned in this document are property of their respective owners, and are hereby acknowledged.